

SAM4S

Electronic Cash Register AU

Operation and Program Manual

ER-380

ER-380M

ER-390M

ER-420M

ER-430M

ER-52xx/M

All specifications are subject to change without notice

Rev. 2.05 (Jun 09)

ATTENTION

The product that you have purchased contains a rechargeable Ni-MH battery. This battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of the battery into the municipal waste system.

Check with your local solid waste officials for details concerning recycling options or proper disposal.

WARNING

 
 
This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Precaution Statements

Follow these safety, servicing and ESD precautions to prevent damage and to protect against potential hazards such as electrical shock.

1-1 Safety Precautions

1. Be sure that all built-in protective devices are replaced. Restore any missing protective shields.
2. When reinstalling the chassis and its assemblies, be sure to restore all protective devices, including nonmetallic control knobs and compartment covers.
3. Make sure there are no cabinet openings through which people - particularly children - might insert fingers and contact dangerous voltages. Such openings include excessively wide cabinet ventilation slots and improperly fitted covers and drawers.
4. Design Alteration Warning:
Never alter or add to the mechanical or electrical design of the SECR. Unauthorized alterations might create a safety hazard. Also, any design changes or additions will void the manufacturer's warranty.
5. Components, parts and wiring that appear to have overheated or that are otherwise damaged should be replaced with parts that meet the original specifications. Always determine the cause of damage or over- heating, and correct any potential hazards.
6. Observe the original lead dress, especially near the following areas: sharp edges, and especially the AC and high voltage supplies. Always inspect for pinched, out-of-place, or frayed wiring. Do not change the spacing between components and the printed circuit board. Check the AC power cord for damage. Make sure that leads and components do not touch thermally hot parts.
7. Product Safety Notice:
Some electrical and mechanical parts have special safety-related characteristics that might not be obvious from visual inspection. These safety features and the protection they give might be lost if the replacement component differs from the original - even if the replacement is rated for higher voltage, wattage, etc.

Components that are critical for safety are indicated in the circuit diagram by shading, () or (). Use replacement components that have the same ratings, especially for flame resistance and dielectric strength specifications. A replacement part that does not have the same safety characteristics as the original might create shock, fire or other hazards.

CAUTION

There is the danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose used batteries according to the manufacturer's instructions.

ATTENTION

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.

Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.

Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

SAFETY NOTICE: "For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible."

1-2 Servicing Precautions

WARNING: First read the-Safety Precautions-section of this manual. If some unforeseen circumstance creates a conflict between the servicing and safety precautions, always follow the safety precautions.

WARNING: An electrolytic capacitor installed with the wrong polarity might explode.

1. Servicing precautions are printed on the cabinet. Follow them.
2. Always unplug the units AC power cord from the AC power source before attempting to:
 - (a) Remove or reinstall any component or assembly
 - (b) Disconnect an electrical plug or connector
 - (c) Connect a test component in parallel with an electrolytic capacitor
3. Some components are raised above the printed circuit board for safety. An insulation tube or tape is sometimes used. The internal wiring is sometimes clamped to prevent contact with thermally hot components. Reinstall all such elements to their original position.
4. After servicing, always check that the screws, components and wiring have been correctly reinstalled. Make sure that the portion around the serviced part has not been damaged.
5. Check the insulation between the blades of the AC plug and accessible conductive parts (examples: metal panels and input terminals).
6. Insulation Checking Procedure: Disconnect the power cord from the AC source and turn the power switch ON. Connect an insulation resistance meter (500V) to the blades of AC plug.

The insulation resistance between each blade of the AC plug and accessible conductive parts (see above) should be greater than 1 megohm.
7. Never defeat any of the B+ voltage interlocks Do not apply AC power to the unit (or any of its assemblies) unless all solid-state heat sinks are correctly installed.
8. Always connect an instrument's ground lead to the instrument chassis ground before connecting the positive lead; always remove the instrument's ground lead last.

1-3 Precautions for Electrostatic Sensitive Devices (ESDs)

1. Some semiconductor (solid state) devices are easily damaged by static electricity. Such components are called Electrostatic Sensitive Devices (ESDs); examples include integrated circuits and some field-effect transistors. The following techniques will reduce the occurrence of component damage caused by static electricity.
2. Immediately before handling any semiconductor components or assemblies, drain the electrostatic charge from your body by touching a known earth ground. Alternatively, wear a discharging wrist-strap device. (Be sure to remove it prior to applying power - this is an electric shock precaution.)
3. After removing an ESD-equipped assembly, place it on a conductive surface such as aluminum foil to prevent accumulation of electrostatic charge.
4. Do not use Freon-propelled chemicals. These can generate electrical charges that damage ESDs.
5. Use only a grounded-tip soldering iron when soldering or unsoldering ESDs.
6. Use only an anti-static solder removal device. Many solder removal devices are not rated as anti-static; these can accumulate sufficient electrical charge to damage ESDs.
7. Do not remove a replacement ESD from its protective package until you are ready to install it. Most replacement ESDs are packaged with leads that are electrically shorted together by conductive foam, aluminum foil or other conductive materials.
8. Immediately before removing the protective material from the leads of a replacement ESD, touch the protective material to the chassis or circuit assembly into which the device will be installed.
9. Minimize body motions when handling unpackaged replacement ESDs. Motions such as brushing clothes together, or lifting a foot from a carpeted floor can generate enough static electricity to damage an ESD.

Contents

Getting Started	1
About the <i>Sam4S ER-3xx, 4xx, 52xx Electronic Cash Registers</i>	1
Unpacking.....	3
Installing the Paper	3
Basic Features and Functions	12
Standard Hardware	12
Optional Hardware	12
Software Features	13
Front Display	14
Rear Display	17
Error Code Table	19
Control Lock	21
Keyboards.....	22
Memory Clear	29
Memory All Clear	29
Initial Clear	33
Operating Instructions	35
Function Key Descriptions	35
Clerk Sign-On/Sign-Off	39
Direct Sign-On	39
Coded Sign-On.....	39
Receipt On and Off.....	40
Item Registrations.....	41
Keyboard PLU Entry - Open Price / Preset Price Override	42
Keyboard PLU Entry - Preset Price.....	42
Keyboard PLU Entry - Repeat	43
Keyboard PLU Entry - Multiplication.....	44
Keyboard PLU Entry - Multiplication with Decimal Point.....	45
Keyboard PLU Entry - Split Pricing	46
Keyboard PLU Entry - Single Item.....	46
Code PLU Entry - Open Price	47
Code PLU Entry - Preset Price / Single Item	47
Code PLU Entry - Preset Price Override.....	48
Code PLU Entry - Repeat.....	48
Code PLU Entry - Multiplication	49
Code PLU Entry - Multiplication with Decimal Point	49
Code PLU Entry - Split Pricing.....	50
Modifier Key	51
Price Level Key	52
Promo	53
Waste.....	54
KBD SHIFT (<i>ER-420M only</i>)	55
Percent Key Operations	56
Preset Percent Discount on an Item.....	57

Enter a Percent Discount on an Item	57
Percent on Sale Total	58
Dollar Amount Discount on Sale	58
Dollar Amount Discount on Item	59
Return Merchandise Registrations	60
Voids and Corrections	61
Error Correction (Void Last Item)	61
Void Previous Item	61
Cancel	62
Void Position Operations	62
No Sale Operations	63
Open Drawer	63
Non Add Number	63
Received On Account Operations	64
Paid Out Operations	65
Subtotaling a Sale	66
Eat In/Take Out/Drive Thru Sales	66
Totaling and Tendering	67
Totaling a Cash Sale	67
Totaling a Check Sale	67
Tendering a Cash Sale	68
Tendering a Check Sale	68
Totaling a Charge Sale	69
Tendering a Charge Sale	69
Check Cashing	70
Split Tender	70
Post Tender	71
Currency Conversion	71
Table Management and Clerk Interrupt Operations	72
Overview	72
Soft Check - Restaurant Style Billing	73
Hard Check	78
Scale Entry	84
Direct Scale Entry	84
Automatic Scale Entry	85
Tare Weight Entry	85
Manual Tare Weight Entry	86
Manual Weight Entry	87

X/Z Mode 89

Introduction	89
X/Z Reports	90
Running a Report - General Instructions	90
Report Table	91
Electronic Journal Table	92
Reset Hard Check Line #	93
Cash Declaration	94

Service Mode Programming 95

Overview	95
Memory Allocation Scan	96
PC Online Mode	96
Memory Allocation	97

Clear Total	98
Clear Grand Total	98
Clear PLU File	98
EPROM Information	98
Function Key Assignment Programming	99
Function Key Codes	100
RS-232 Communication Options	102

Program Mode Programming 105

Default Programming	105
Descriptor Programming Methods	105
Program Overlay Method	106
Descriptor Code Method	109
Tax Programming	110
Straight Percentage Tax Rate Programming	110
PLU Programming	112
Program 100 - PLU Status Programming	113
Program 110 - PLU Auto Tare Programming	116
Program 150 - PLU Group Assignment	117
Program 200 - PLU Price/HALO Programming	118
Program 250 - PLU Stock Amount Programming	119
Program 300 - PLU Description Programming	120
Program 350 - PLU Link Programming	121
Program 400 - PLU Delete Programming	122
Program 450 - PLU MIX & MATCH Programming	123
System Option Programming	124
System Option Table	125
Print Option Programming	130
Print Option Table	131
Function Key Programming	136
Program 70 - Function Key Options	137
Program 80 - Function Key Descriptor	138
Program 90 - Function Key HALO	139
ADD CHECK	140
CANCEL	141
CASH	142
CHARGE (1 ~ 8)	143
CHECK (CHEQUE)	144
CHECK (CHEQUE) CASHING	145
CHECK (CHEQUE) ENDORSEMENT	146
CHECK #	147
CURRENCY CONVERSION	148
DRIVE THRU / EAT IN / TAKE OUT	149
ERROR CORRECT	150
F/S SUB	150
F/S TEND	151
GUEST	152
LEVEL1 - 2 (Price Levels)	152
MACRO (1 ~ 10)	153
MDSE RETURN	153
MODIFIER (1 ~ 5)	154
#/NS (Non Add#/No Sale)	155
PAID OUT (1 ~ 3)	156
PAYMENT	156

PBAL.....	157
PRINT CHECK.....	157
PROMO.....	158
RECD ON ACCT (1 ~ 3)	159
SCALE	160
SERVICE	161
SUBTOTAL.....	162
TABLE	162
TARE.....	163
TAX EXEMPT.....	164
TIP	165
VALIDATE.....	166
VOID	166
WASTE	167
% (1 ~ 5).....	168
KBD SHIFT (<i>ER-420M only</i>)	170
Clerk Programming.....	171
Program 800 - Secret Code Programming.....	172
Program 801 - Drawer Assignment & Training Clerk	173
Program 810 - Clerk Description Programming.....	174
Mix & Match Programming.....	175
Program 600 - Trip Level Programming	176
Program 601 - Price Programming.....	176
Program 610 - Mix & Match Description Programming.....	177
Group Programming	178
Program 900 - Group Status Programming	178
Program 910 - Group Descriptors Programming.....	179
Miscellaneous Programming	180
Program 1500 - Macro Key Sequence Programming.....	180
Program 700 - Logo Description Programming	181
Program 701 - Financial Report Message Programming.....	182
Program 710 - Clerk Report Message Programming.....	184
Program 711 - Macro Name Programming	186
Program 1000 - NLU Code Number Programming	187
Program 1100 - Cash-In-Drawer Limit Programming	188
Program 1200 - Check Change Limit Programming	189
Program 1300 - Date and Time Programming	190
Program 1400 - Scale Tare Weight Programming	191
Program 1600 - Machine Number Programming	192
Program Scans	193
Program 15 - Program Scans.....	193

Sample Reports 195

Financial	195
Time.....	199
PLU.....	200
Clerk	201
Individual Clerk.....	202
Groups	203
Stock.....	204
Open Check	205

Getting Started

About the **Sam4S ER-3xx, 4xx, 52xx Electronic Cash Registers**

The *Sam4S ER-3xx, 4xx, 52xx Electronic Cash Registers Range* is preset with 10% GST and Australian rounding as well as a number of other useful functions.

The *Sam4S ER-3xx, 4xx, 52xx Electronic Cash Registers Range*, with its superb thermal printing system, always provides the fastest in transaction speeds.

The *ER-3xx Series* is offered in three different versions.

- The *ER-3xx Series* has a standard capacity of 300 PLUs and 20 Groups allows for easy item management.
- The *ER-3xx Series* is an excellent low cost solution for a wide range of retail environments.
- The *ER-380 / ER-380M* features a raised 44-position keyboard with 12/16 NLU keys.
- The *ER-390M* features a flat 90-position keyboard with 60 NLU keys. This keyboard will accommodate up to 60 NLU keys and works best in retail stores, or shops where it is not necessary to place a large number of preset item keys on the keyboard.

The *ER-4xx Series* is offered in two different versions.

- The *ER-4xx Series* has a standard capacity of 1000 PLUs and 20 Groups allows for easy item management.
- The *ER-4xx Series* is an excellent low cost solution for a wide range of retail environments.
- The *ER-420M* features a 48-position keyboard with traditional raised keys. This keyboard will accommodate up to 12 NLU keys and works best in retail stores, or shops where it is not necessary to place a large number of preset item keys on the keyboard.
- The *ER-430M* features a 90-position keyboard with traditional flat keys. This keyboard will accommodate up to 60 NLU keys and works best in retail stores, or shops where it is not necessary to place a large number of preset item keys on the keyboard.

The **ER-52xx Series** is offered in six different versions.

- The **ER-52xx Series** has a standard capacity of 1000 PLUs and 20 Groups allows for easy item management.
- The **ER-5200/ER-5200M** features a flat 160 position keyboard with 117 NLU keys. Because it offers protection from spills, this keyboard works best in restaurants, food service shops, or convenience stores where food is served.
- The **ER-5240/ER-5240M** features a 90 position keyboard with traditional raised keys. This keyboard will accommodate up to 40 NLU keys and works best in retail stores, or shops where it is not necessary to place a large number of preset item keys on the keyboard.
- The **ER-5215/ER-5215M** features a 60 position keyboard with traditional raised keys. This keyboard will accommodate up to 15 NLU keys and works best in retail stores, or shops where it is not necessary to place a large number of preset item keys on the keyboard.

This manual includes instructions for three models. The keyboard is the only significant difference between the three models. All other features are the same, unless otherwise noted.

Unpacking


1. Unpack and unwrap the cash register.
2. Located in the packing are the following items:
 - 1 roll of paper, (*for ER-3xx series*)
 - 2 roll of paper and 1 paper spindle, (*for ER-4xx and 52xx series*)
 - 2 sets of control keys,
 - Operation and Program Manual,
3. Remove the cardboard protectors from the cash drawer.
4. Plug the register into a grounded outlet (three prong), insert a control key and turn the key to the **REG** control lock position.

*A paper takeup spindle + motor kit is available if Journal mode is required for *ER-3xx series*.


Installing the Paper

For *ER-3xx series (ER-380 shown in the picture)*:


1. Remove the printer cover.

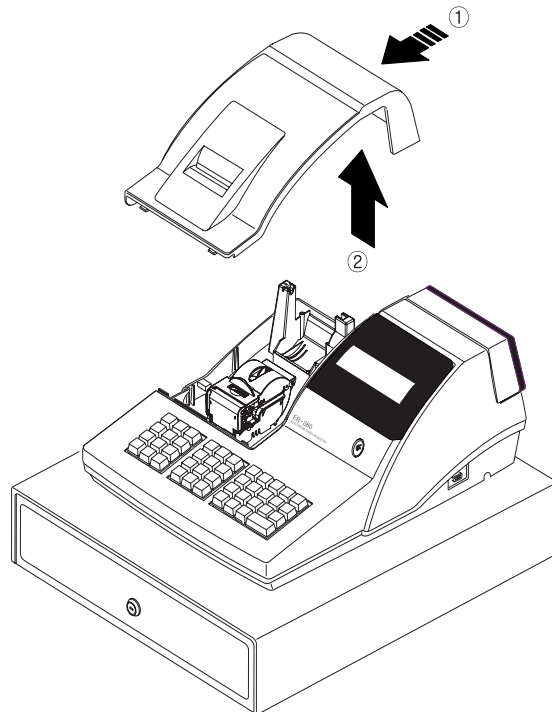


2. Push the blue cap lever and then lift up to open the paper cover.

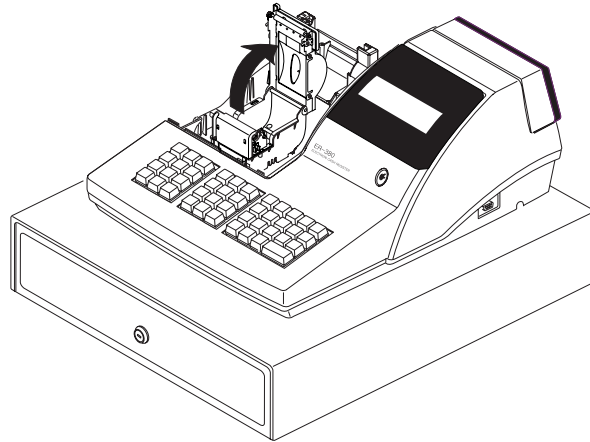


3. Ensure that the paper is being fed from the bottom of the roll.

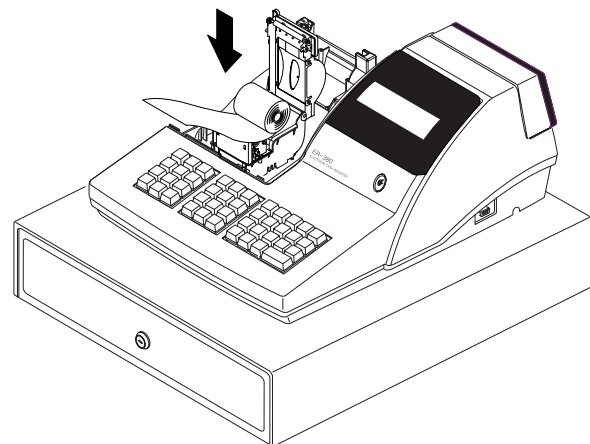


4. Put the leading edge of the paper over the printer
5. Close the paper cover slowly until it locks firmly

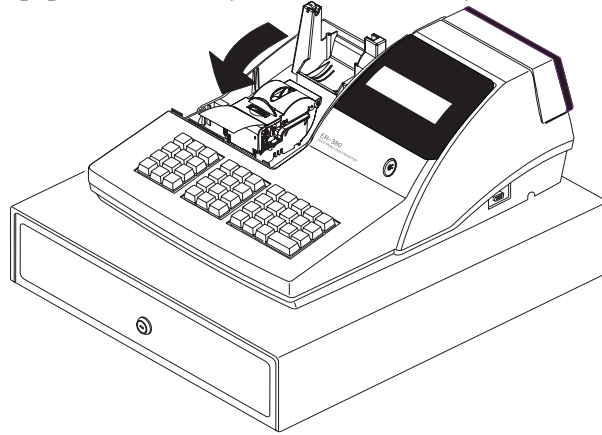

6. Passing the leading edge of the paper through the cutter slot. Tear off the excess paper. Replace the printer cover.

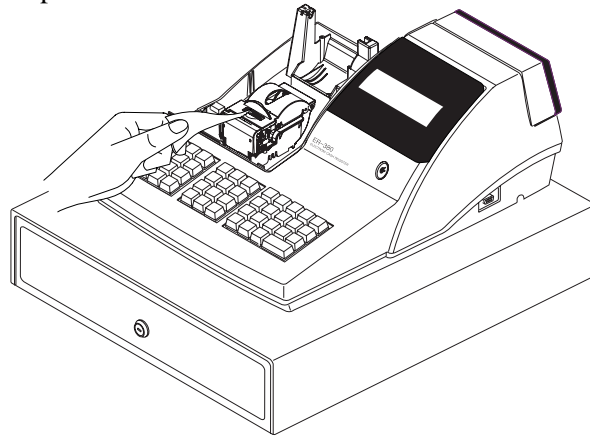


- ※ If you wish to use the printer to print a sales journal or electronic journal, insert the paper into the paper take-up spool. Wind the paper two or three turns around the spool shaft and install the spool in the mount.


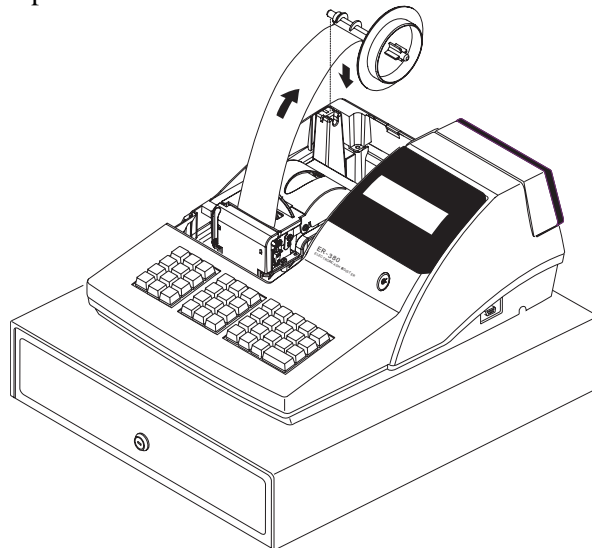


For *ER-4xx series (ER-420M shown in the picture)*:


1. Remove the printer cover.

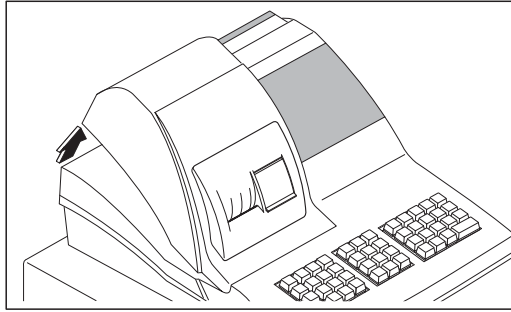


2. For proper feeding through the print head, cut or tear a straight even edge on the end of the paper roll. (Be sure to remove any paper with glue residue.) Place the paper roll in the paper holder so that the paper will feed from the bottom of the roll.

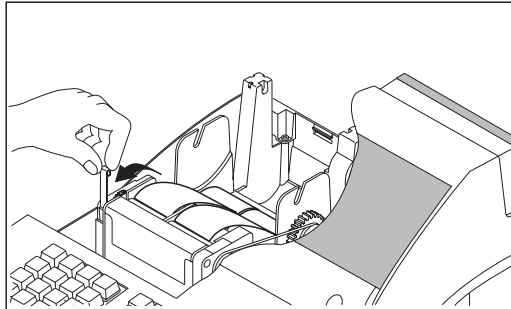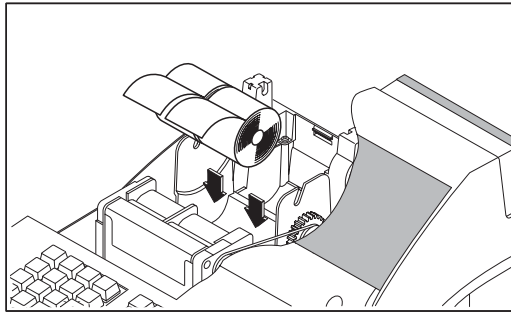



3. Insert the end of the paper into the paper slot.

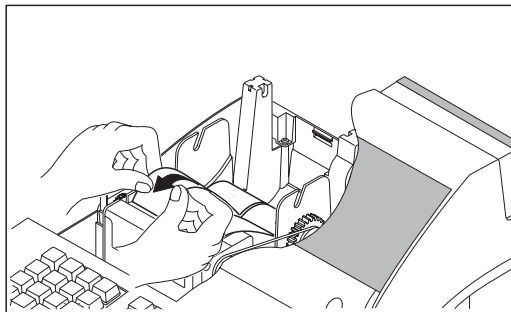


4. Close the paper lever and press the PAPER FEED key until the paper comes out.

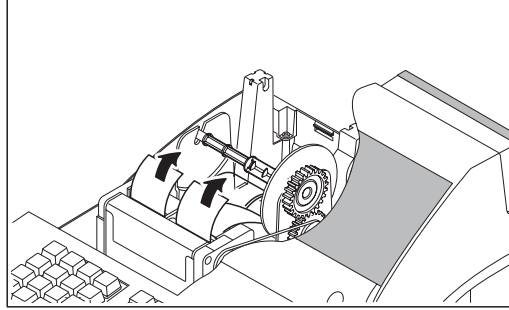

5. Passing the leading edge of the paper through the cutter slot. Tear off the excess paper. Replace the printer cover.

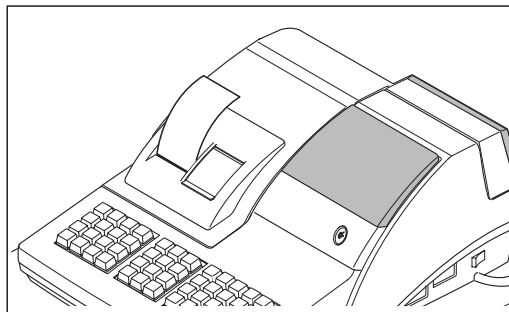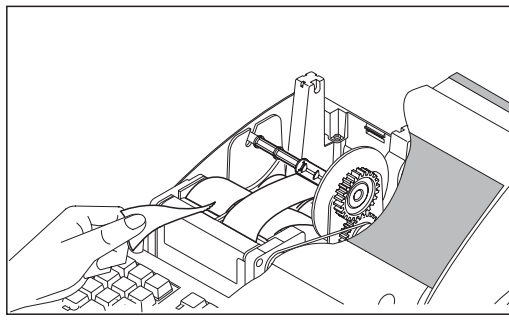


- ※ If you wish to use the printer to print a sales journal, insert the paper into the paper take-up spool. Wind the paper two or three turns around the spool shaft and install the spool in the mount.

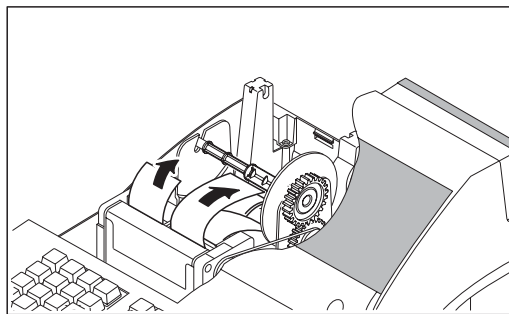


- ※ *ER-420M* is possible to feed automatically when you rock the paper levers and insert paper.


For *ER-52xx series (ER-5200M shown in the picture)*:

1. Remove the printer cover.

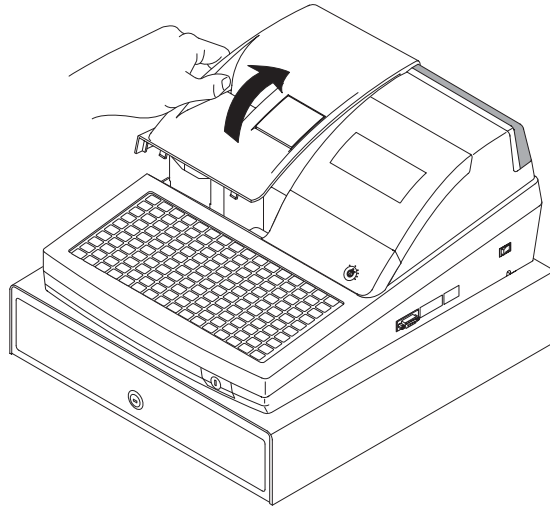


2. Push the blue cap lever and then lift up to open the paper cover.

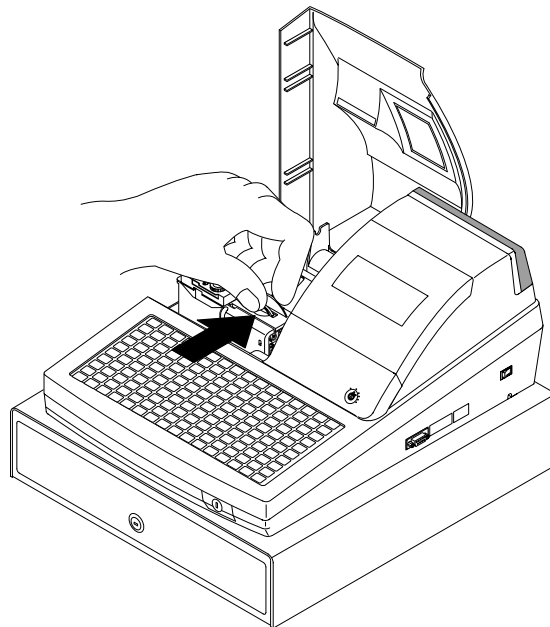

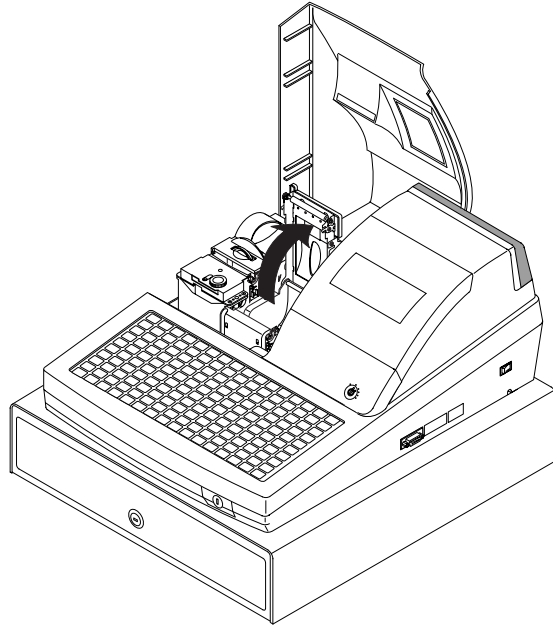


3. Ensure that the paper is being fed from the bottom of the roll.

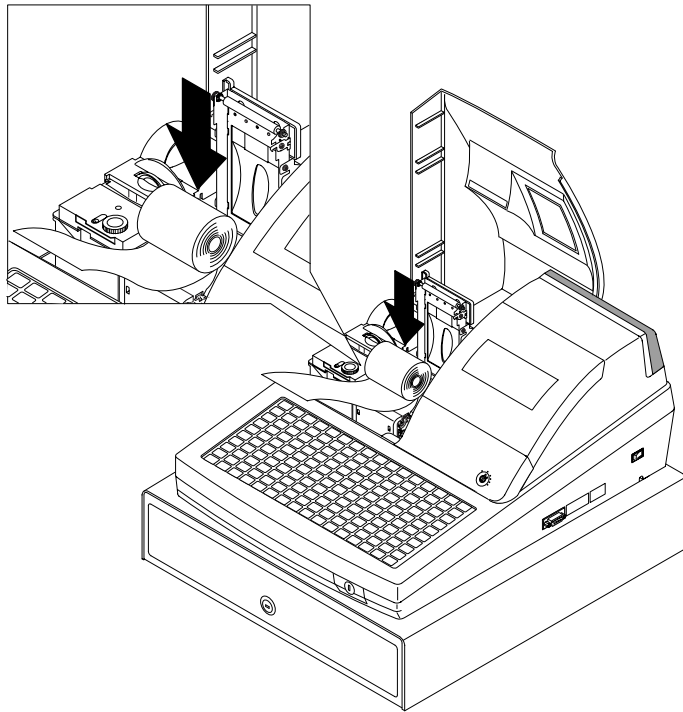


4. Put the the leading edge of the paper over the printer


5. Close the paper cover slowly until it locks firmly

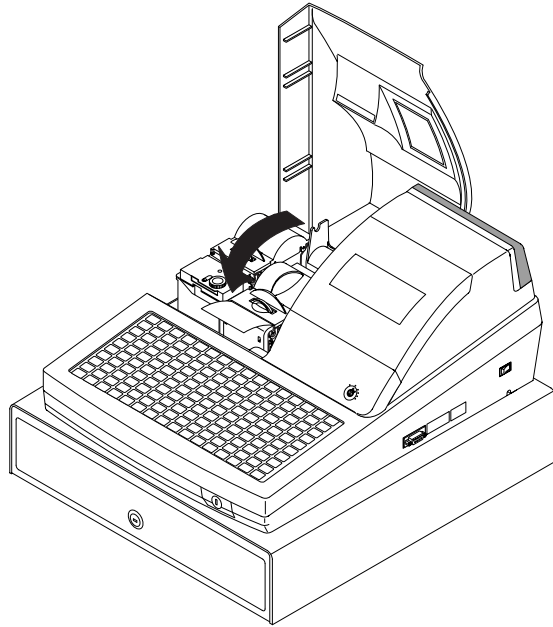

6. Passing the leading edge of the paper through the cutter slot. Tear off the excess paper. Replace the printer cover.

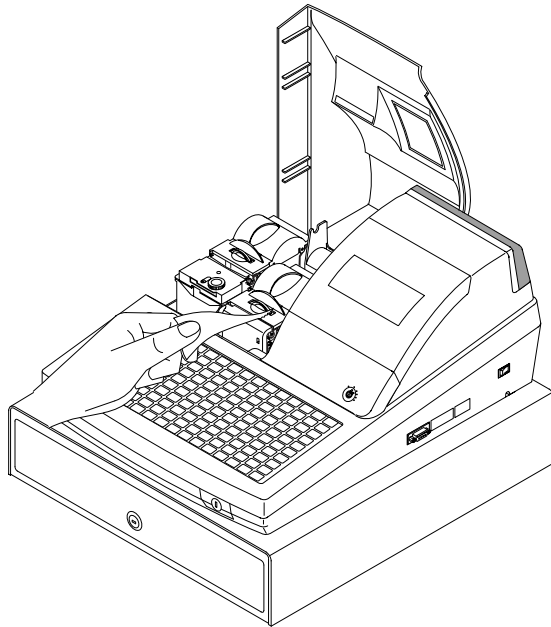

- ※ If you wish to use the printer to print a sales journal, insert the paper into the paper take-up spool. Wind the paper two or three turns around the spool shaft and install the spool in the mount.

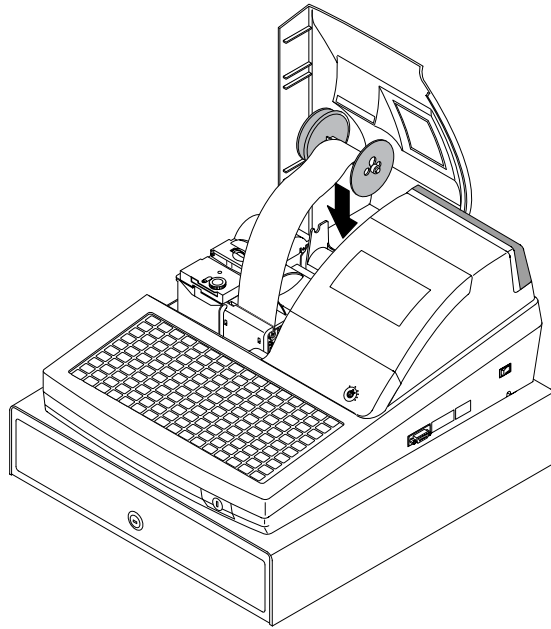

Basic Features and Functions

Standard Hardware

- Display
 - => LCD model: 2 line, 16 character liquid crystal display and ten position rear displays with a rear pop up display standard.
 - => VFD model: Ten position front and rear displays with a rear pop up display standard.

For **ER-3xx Series**:

- 44(**ER-380 & ER-380M**), 90(**ER-390M**) position keyboard.
- 1 station Thermal 32-column printer with drop-and-print mechanism.

For **ER-4xx Series**:

- 48(**ER-420M**), 90(**ER-430M**) position keyboard.
- 2 station Thermal 24-column printer with auto-load mechanism.

For **ER-52xx Series**:

- 160 (**ER-5200/ER-5200M**), 90 (**ER-5240/ER-5240M**), 60 (**ER-5215/ER-5215M**) position keyboard.
- 2 station Thermal 32-column printer with drop-and-print mechanism.
- Sturdy Metal Cash Drawer with removable 4 Bill/8 Coin drawer insert.
- 7-position control lock.
- Standard customer pole display.
- Communications ports: 2 RS232C (*1 x RS232C only for ER-380*)

Optional Hardware

- PC Link.
- Load cell scale.
- Kitchen printer / Bill Printer / Slip Printer / Journal Printer.
- Barcode scanner.
- Pole Display.
- EFTPOS Terminal.
- Real clerk keys and lock assembly for 15 clerks (*only for ER-52xx Series*).

Software Features


- Up to 2 price levels for each PLU.
- Up to 5 PLU modifier keys.
- For *ER-3xx Series*, **300** Price Look Ups (PLUs) default (expandable **up to 5,000 with an extend memory chip**) for open or preset item registration. **117(ER-380 & ER-380M) /100(ER-390M) PLUs** standard for open or preset item registration. For direct registrations, **12/16(ER-380 & ER-380M), 60(ER-390M)** PLU keys are on the keyboard.
- For *ER-4xx Series*, **1000** Price Look Ups (PLUs) default (expandable **up to 9,000 with an extend memory chip**) for open or preset item registration. **50(ER-420M)/100(ER-430M) PLUs** standard for open or preset item registration. For direct registrations, **up to 16(up to 48** are accessible with **SHIFT** function key) **(ER-420M)/60(ER-430M)** PLU keys are on the keyboard.
- For *ER-52xx Series*, **1000** Price Look Ups (PLUs) default (expandable **up to 15,000 with up to two extend memory chips**) for open or preset item registration. **117 PLUs** standard for open or preset item registration. For direct registrations, **up to 117(ER-5200/ER-5200M)/up to 40(ER-5240/ ER-5240M)/up to 15(ER-5215/ ER-5215M)** PLU keys are on the keyboard.
- 18 character programmable descriptors for PLUs and functions.
- Up to 99 PLU Group totals.
- Up to 99 clerks with separate report totals.

Front Display

VFD MODEL - ER-380 & ER-52xx Series


The *ER-380 & ER-52xx Series* come with a ten position front display. Annotations on the display window include:

- **RPT**, where a counter appears when the same item is multiplied or repeated.
- The **AMOUNT** area shows the amount, i.e. price, subtotal or total.
- **RCPT OFF** indicates when the receipt is turned off.
- The **VOID** symbol illuminates during Void operations.
- The **SHIFT** symbol illuminates during Tax Shift operations
- The **CLERK** segment remains illuminated as long as a clerk is signed on.

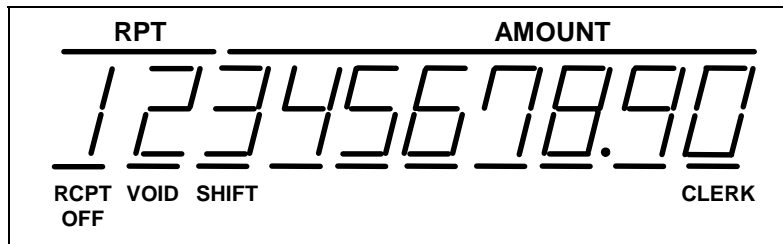


The front display offers supplemental descriptors which appear in the first two display positions (as shown). These descriptors help the operator by supplying additional information while operating the register, and may be accompanied by an error tone. Supplemental descriptors include:

RPT

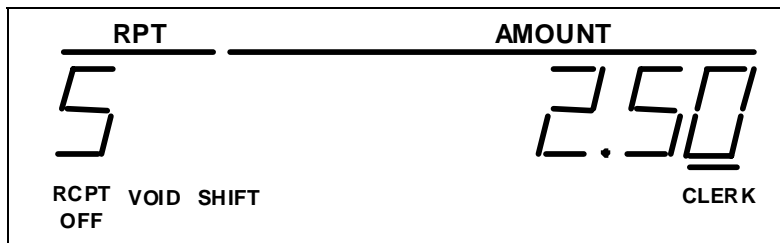

Change Due

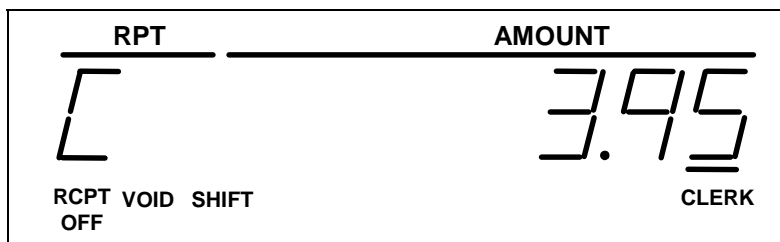

Negative Entry

RPT	AMOUNT
1	-0.75
RCPT OFF	VOID SHIFT CLERK

Subtotal

RPT	AMOUNT
Sub	12.50
RCPT OFF	VOID SHIFT CLERK

Total of Sale

RPT	AMOUNT
-	12.50
RCPT OFF	VOID SHIFT CLERK

Numbered Error Conditions

RPT	AMOUNT
E01	0.00
RCPT OFF	VOID SHIFT CLERK

LCD MODEL – ER-380M, ER-390M, ER-4xx Series & ER-52xxM Series

The *ER-380M, ER-390M, ER-4xx Series & ER-52xxM Series* come with a liquid crystal screen, allowing you to view up to 2 lines of information with up to 20 characters per line. The display is backlit and adjustable to provide excellent visibility, regardless of lighting conditions.

When the control lock is in the OFF position, the register can not be operated. When the control lock in the REG, VOID, X, Z, PGM or SM positions the appropriate message, there are displayed with the message “CLOSED”. You must sign on a clerk to remove the “CLOSED” message and begin operation.

REG

REGISTER MODE CLOSED

VOID

VOID MODE CLOSED

Operator Display Example

- ◆ Press **1 0 0 0**, then **PLU12** to register of the PLU 12

PLU12	
1	10.00

- ◆ Press **5 0 0 0**, then **CASH** to tender a sale and change will be shown

CASH	50.00
CHANGE	40.00

Displayed Error Conditions


** WARNING! ** SEQUENCE ERR
--

Rear Display

The rear display is a 10 digit florescent display that allows your customer to monitor the transaction and view the sale total. The rear display can be lifted and turned for easy customer viewing.

Rear Display Information

Item Count	The number of times an item has been repeated is displayed
Amount	The amount of the item, subtotal or total, is displayed in the rightmost portion of the display

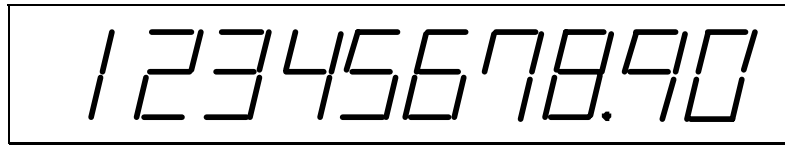

Rear Display Message

RPT



Change Due



Negative Entry



Subtotal



Total of Sale



A digital display showing a total sale of 12.50. On the left side, there are two horizontal lines, one above the other, representing a minus sign. To the right of these lines, the number 12.50 is displayed in a seven-segment font.

Numbered Error Conditions



A digital display showing an error code E01 and a value of 0.00. On the left side, the error code E01 is displayed in a seven-segment font. To the right of the error code, the value 0.00 is displayed in a seven-segment font.


Error Code Table

ER-3xx	ER-4xx	ER-52xx	Error Message
	E00		SEQUENCE ERROR
	E01		PLU NO DATA
	E02		CLERK ERROR
	E03		AMOUNT COUNT OVER
	E04		LAN TRAN
	E05		COMMUNICATION ERROR
	E06		TIME AND DATE
	E07		LIMIT OVER
	E08		INACTIVE
	E09		XMODE ONLY
	E10		NONADD
	E11		ADD CHECK ERROR
	E12		CONDIMENT ERROR
	E13		REQ. EAT IN
	E14		REQ. STOCK
	E15		REQ. DRAWER
	E16		REQ. GUEST
	E17		SCALE
	E18		CLERK NOT MATCH
	E19		COMPULSORY TARE
	E20		REQ. DECLARATION
	E21		OFF LINE
	E22		REQ. ENDORSEMENT
	E23		CONSOL OVER
	E24		REQ. SUBTOTAL
	E25		PROMO ERROR
	E26		CHECK OPEN
	E27		REQ. PASSWORD
	E28		NO VOID PLU
	E29		232C SETUP ERROR
	E30		REQ. PRESET VALUE
	E31		REQ. OPEN VALUE

ER-3xx	ER-4xx	ER-52xx	Error Message
	E32		REQ. AMOUNT
	E33		REQ. PAYMENT
	E34		INVALID FUNCTION
	E35		REQ. TABLE
	E36		REQ. PBAL
	E37		REQ. CHECK #
	E38		ONLY ONE TABLE
	E39		REQ. VALID
E43	E42		MEMORY ALLOCATION ERROR
	E43		PLU DELETE ERROR
E44			ELECTRONIC JOURNAL FULL
	E45		RECEIPT AND JOURNAL PRINTER END
PER	PER	PER	RECEIPT PRINTER PAPER END
	PEJ	PEJ	JOURNAL PRINTER PAPER END
		PNR	RECEIPT PRINTER PAPER NEAR END
		PNJ	JOURNAL PRINTER PAPER NEAR END
PCO		PCO	PRINTER COVER OPEN
		ACJ	AUTO CUTTER PAPER JAM
		A[]	SYSTEM OPTION ERROR No Auto Cutter Installed. Set System Option #24 = 0
PFP	PFP	PFP	SYSTEM ERROR (If this problem occurs, call the service engineer.)

Control Lock

The control lock has 7 positions, accessed with 5 keys. Each ECR is shipped with two full sets of keys.

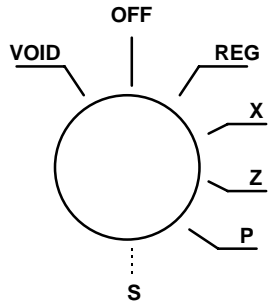

- VOID** Use to void (correct) items outside of a sale.
- OFF** The register is inoperable.
- REG** Use for normal registrations.
- X** Use to read register reports.
- Z** Use to read register reports and reset totals to zero.
- P** Use to program the register.
- S** The S position is a hidden position reserved for dealer access.

Before performing any operations in Register Mode a clerk must be signed on. See “Clerk Sign-On/Sign-Off” for a description of clerk operations.

Control Keys

The *ER-380 / ER-380M* includes two sets of keys that may be used to access the following control lock positions.

Key	Positions Accessible
REG	OFF, REG
VOID	VOID, OFF, REG, X
Z	VOID, OFF, REG, X, Z
P	VOID, OFF, REG, X, Z, P
C	ALL POSITIONS


Note: Keys may be removed from the control lock in the OFF or REG positions.

Keyboards


ER-380/ER-380M Keyboard

The *ER-380 / ER-380M* keyboard includes 44 key positions with the default legends and key assignments as shown below. The keyboard legend sheet can be replaced by lifting the protective plastic cover.

Programmable key locations are shown with a bold border.

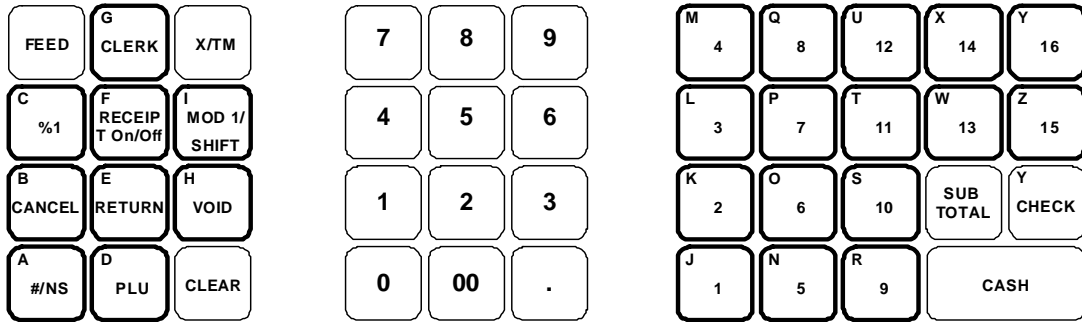

ER380/ER380M Alpha Keyboard

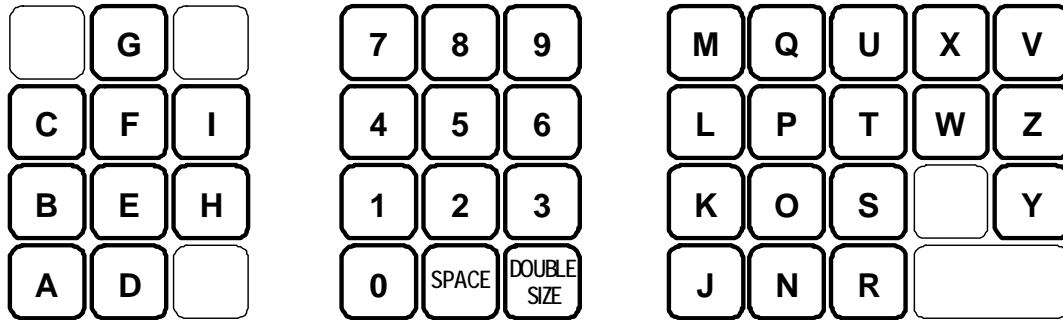

ER-390M Keyboard

The ER-390M keyboard includes 90 key positions with the default legends and key assignments as shown below. The keyboard legend sheet can be replaced by lifting the protective plastic cover.

Programmable key locations are shown with a bold border.


1	7	13	19	52	31	37	43	49	55	PAPER FEED	#/NS	RECD ACCT	PAID OUT	CLERK #
2	8	14	20	26	32	38	44	50	56	C/CONV	CLEAR	PLU	X/TIME	%1
3	9	15	21	27	33	39	45	51	57	VOID	7	8	9	CHARGE
4	10	16	22	28	34	40	46	52	58	RETURN	4	5	6	CHECK
5	11	17	23	29	35	41	47	53	59	ERROR CORR	1	2	3	SBTL
6	12	18	24	30	36	42	48	54	60	CANCEL	0	00	•	CASH

ER390M Alpha Keyboard


										PAPER FEED	#/NS	RECD ACCT	PAID OUT	CLERK #
!	@	#	\$	%	^	&	*	()	C/CONV	CLEAR	PLU	X/TIME	%1
Q	W	E	R	T	Y	U	I	O	P	VOID	7	8	9	CHARGE
A	S	D	F	G	H	J	K	L	;	RETURN	4	5	6	CHECK
Z	X	C	V	B	N	M	,	.	/	ERROR CORR	1	2	3	SBTL
+	-	<	>	?	=	CAPS	DOUBLE	SPACE	BACK SPACE	CANCEL	0	00	•	CASH

ER-420M Keyboard

The ER-420M keyboard is shown below with the default legends and key assignments. This configuration has 12 keyboard NLU locations. Programmable key locations are shown with a bold border.

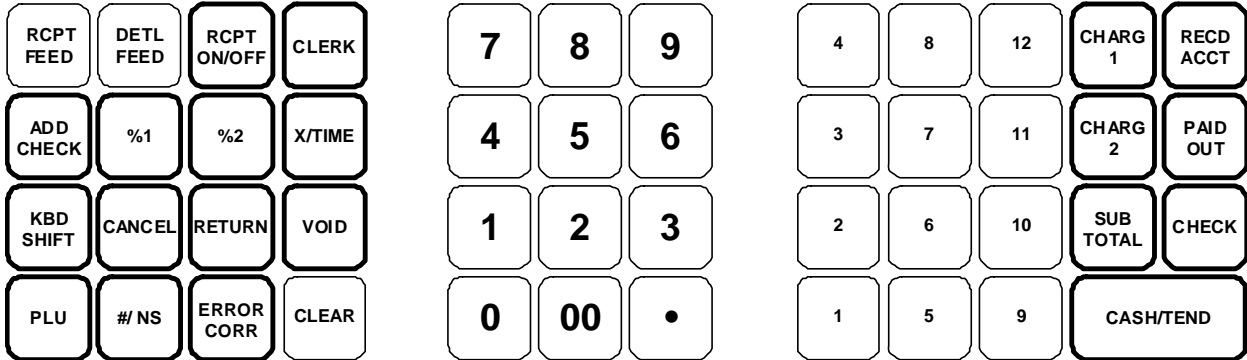

ER420M Alpha Keyboard Overlay

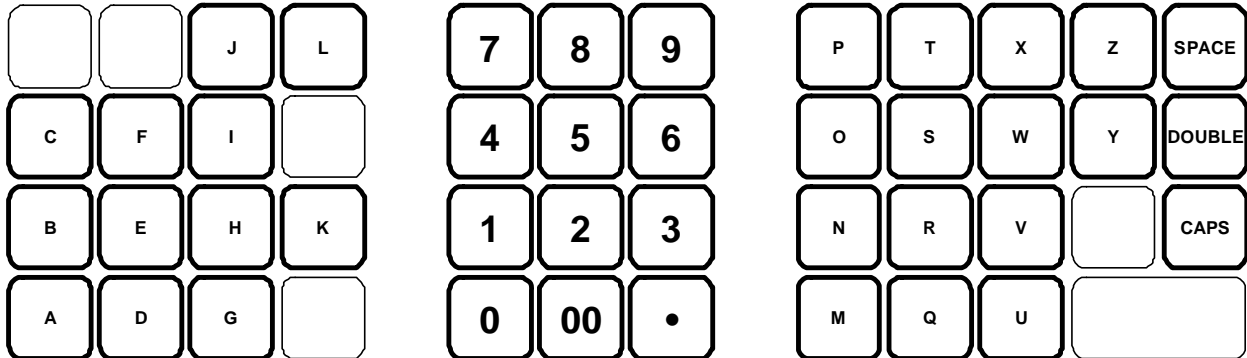

ER-430M Keyboard

The ER-430 keyboard is shown below with the default legends and key assignments. This configuration has 60 keyboard NLU locations.

Programmable key locations are shown with a bold border.

1	7	13	19	52	31	37	43	49	55	RCPT FEED	DETL FEED	RECD ACCT	PAID OUT	CLERK #
2	8	14	20	26	32	38	44	50	56	#/NS	CLEAR	PLU	X/TIME	%1
3	9	15	21	27	33	39	45	51	57	VOID	7	8	9	CHARGE
4	10	16	22	28	34	40	46	52	58	RETURN	4	5	6	CHECK
5	11	17	23	29	35	41	47	53	59	ERROR CORR	1	2	3	SBTL
6	12	18	24	30	36	42	48	54	60	CANCEL	0	00	.	CASH

ER430M Alpha Keyboard Overlay

										RCPT FEED	DETL FEED	RECD ACCT	PAID OUT	CLERK #
!	@	#	\$	%	^	&	*	()	#/NS	CLEAR	PLU	X/TIME	%1
Q	W	E	R	T	Y	U	I	O	P	VOID	7	8	9	CHARGE
A	S	D	F	G	H	J	K	L	;	RETURN	4	5	6	CHECK
Z	X	C	V	B	N	M	,	.	/	ERROR CORR	1	2	3	SBTL
+	-	<	>	?	=	CAPS	DOUBLE	SPACE	BACK SPACE	CANCEL	0	00	.	CASH

ER-5200/ER-5200M Keyboard

The ER-5200/ER-5200M keyboard includes 160 key positions with the default legends and key assignments as shown below. The keyboard legend sheet can be replaced by lifting the protective plastic cover.

Programmable key locations are shown with a bold border.

RECT FEED	DETL FEED	RCPT ON/OFF										TAX 1	ADD CHECK 6	PAID OUT 12	CLERK 18
												% 1 2	CHECK 7 #	RECD ACCT 13	CONV1 19
												% 2 3	SERVIC E 8	VOID 14	CONV2 20
												% 3 4	ERROR CORR 9	RETURN 15	EAT IN 21
												VALID 5	#/NS 10	CANCEL 16	TAKE OUT 22
												CLEAR	PLU 11	X/TIME 17	CHARG E2 23
												7	8	9	CHARG E1 24
												4	5	6	CHECK 25
												1	2	3	SBTL 26
												0	00	.	CASH 27

ER-5240/ER-5240M Keyboard

The ER-5240/ER-5240M keyboard is shown below with the default legends and key assignments.

This configuration has 40 keyboard NLU locations. Programmable key locations are shown with a bold border.

RECT FEED	DETL FEED	RCPT ON/OFF	#/NS 10	TAX 13	CHECK #	SERVIC E 14	RECD ACCT 15	PAID OUT 16	PRINT CHECK 17	ADD CHECK 18	CONV1 19	CONV2 20	EAT IN 21	CLERK 24
ERROR CORR 1	PLU 6	CLEAR	X/TIME 12	5	10	15	20	25	30	35	40	TAKE OUT 22	CHARG 25 2	
VOID 2		7	8	9	4	9	14	19	24	29	34	39	DRIVE THRU 23	CHARG 26 1
%1 3	RETURN 7	4	5	6	3	8	13	18	23	28	33	38	CHECK 27	
%2 4	CANCEL 8	1	2	3	2	7	12	17	22	27	32	37	SBTL 28	
%3 5	VALID 9	0	00	•	1	6	11	16	21	26	31	36	CASH 29	

ER-5215/ER-5215M Keyboard

The ER-5215/ER-5215M keyboard is shown below with the default legends and key assignments.

This configuration has 15 keyboard NLU locations. Programmable key locations are shown with a bold border.

RECT FEED	DETL FEED	RCPT ON/OFF	PLU	RECD ACCT	PAID OUT	CHECK #	SERVICE	PRINT CHECK	CLERK
ERROR CORR	VALID	CLEAR	#/NS	X/TIME	5	10	15	EAT IN	ADD CHECK
VOID	TAX	7	8	9	4	9	14	TAKE OUT	CHARG 2
CANCEL	RETURN	4	5	6	3	8	13	DRIVE HRU	CHARG 1
%2	CONV 1	1	2	3	2	7	12	SBTL	CHECK
%3	CONV 2	0	00	•	1	6	11	CASH	

ER-5200/ER-5200M Alpha Keyboard Overlay

!	@	#	\$	%	^	&	*	()	-	+				
Q	W	E	R	T	Y	U	I	O	P	<	>				
A	S	D	F	G	H	J	K	L	;	'	?	CLEAR		X/TIME	
Z	X	C	V	B	N	M	,	.	/	:	=	7	8	9	
CAPS	DOUBLE	SPACE	SPACE	SPACE	SPACE	SPACE	CAPS	DOUBLE	BACK SPACE	"		4	5	6	
												1	2	3	SBTL
												0	00	.	CASH

ER-5240/ER-5240M Alpha Keyboard Overlay

					!	@	#	\$	%	^	&	*	()	
			CLEAR	X/TIME	Q	W	E	R	T	Y	U	I	O	P	
		7	8	9	A	S	D	F	G	H	J	K	L	;	
		4	5	6	Z	X	C	V	B	N	M	,	CHECK		
		1	2	3	-	+	<	>		?	:	=	SBTL		
		0	00	.	CAPS	DOUBLE	SPACE	DOUBLE	BSPACE	"	.	/	CASH		

There is NO Alpha Keyboard Overlay for ER-5215/ER-5215M

Memory Clear

Memory All Clear


CAUTION: The procedures described in this area are security sensitive. Clearing all or parts of the memory may cause damage or loss to the program. Do not share this information with unauthorized users and distribute the special SERVICE-Mode key only to those you may want to perform these functions.

Perform "Clear All Totals", or "Clear PLU File" if you wish to clear only parts of memory. Complete clearing of all memory areas and installation of the default program can be done through the following special procedure:


To Perform a Memory All Clear:

1. Turn the power switch located on the right side of the register to the **OFF** position.
2. Turn the control lock to the **S-position** (one passed P-position).
3. Press and hold the key position where the **CHECK** key (circled key) is located on the default keyboard layout.
4. Continue to hold the **CHECK** key while turning the power switch to the **ON** position.
5. After hear BEEP, release the **CHECK** key.
6. Please see below for detail of each model:


For ER-380 and ER-380M, press the **upper left key** (FEED) of the keyboard, then the **lower left key** (#/NS), then the **upper right key** (PLU 16), and finally press the **lower right key** (CASH).

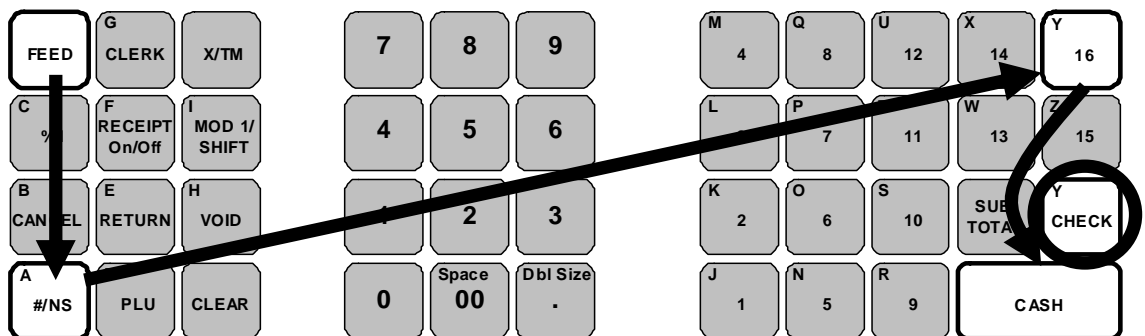


For **ER-390M**, press the **upper left key (PLU 1)** of the keyboard, then the **lower left key (PLU 6)**, then the **upper right key (CLERK #)**, and finally press the **lower right key (CASH)**.

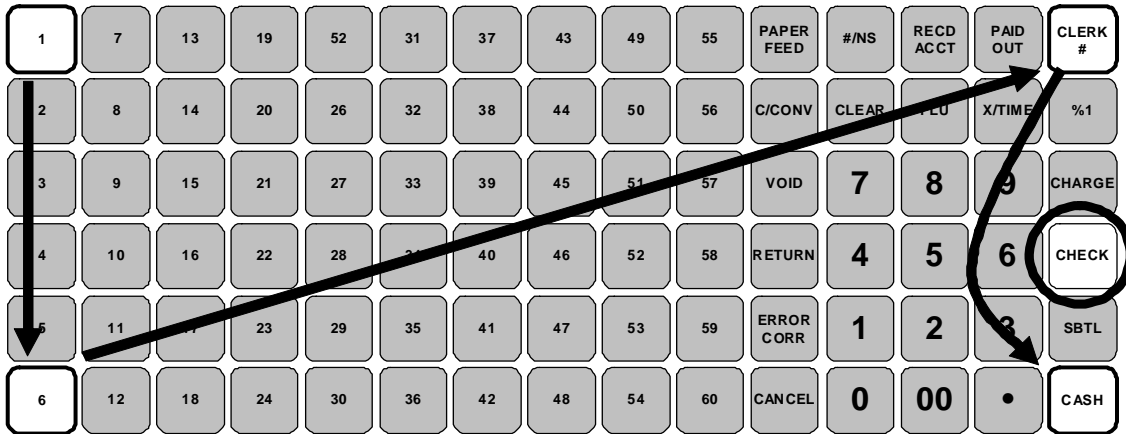


For **ER-420M**, press the **upper left key (RCPT FEED)** of the keyboard, then the **lower left key (PLU)**, then the **upper right key (RECD ACCT)**, and finally press the **lower right key (CASH/TEND)**.

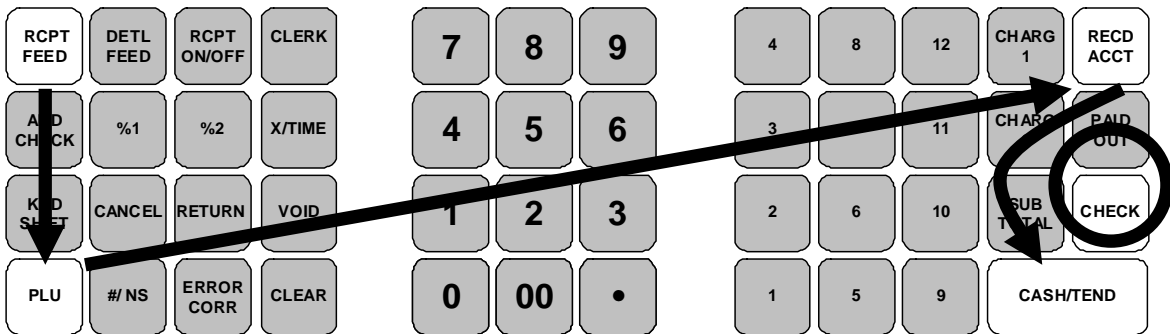


For **ER-430M**, press the **upper left key (PLU 1)** of the keyboard, then the **lower left key (PLU6)**, then **the upper right key (CLERK #)**, and finally press the **lower right key (CASH/TEND)**.

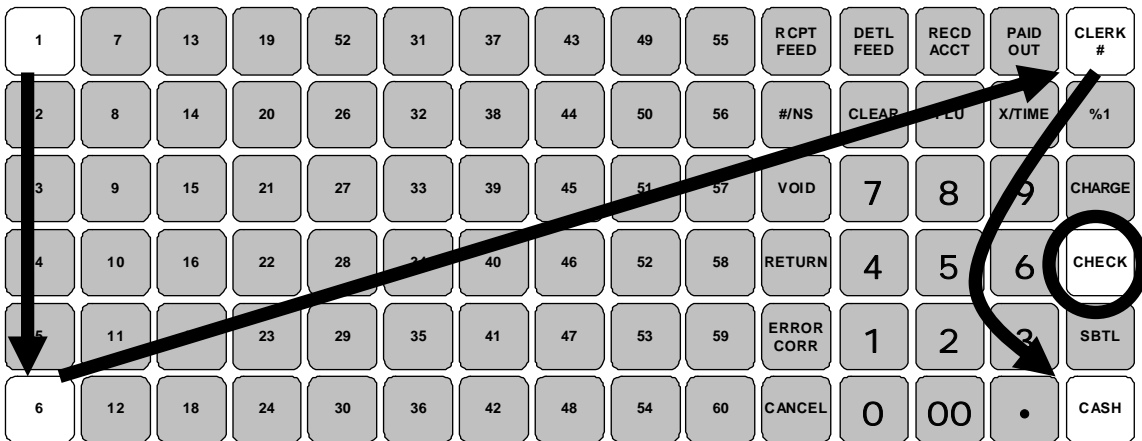


For ER-5200/ER-5200M, press the **upper left key** (RECT FEED) of the keyboard, then the **lower left key** (PLU 9), then the **upper right key** (CLERK), and finally press the **lower right key** (CASH).

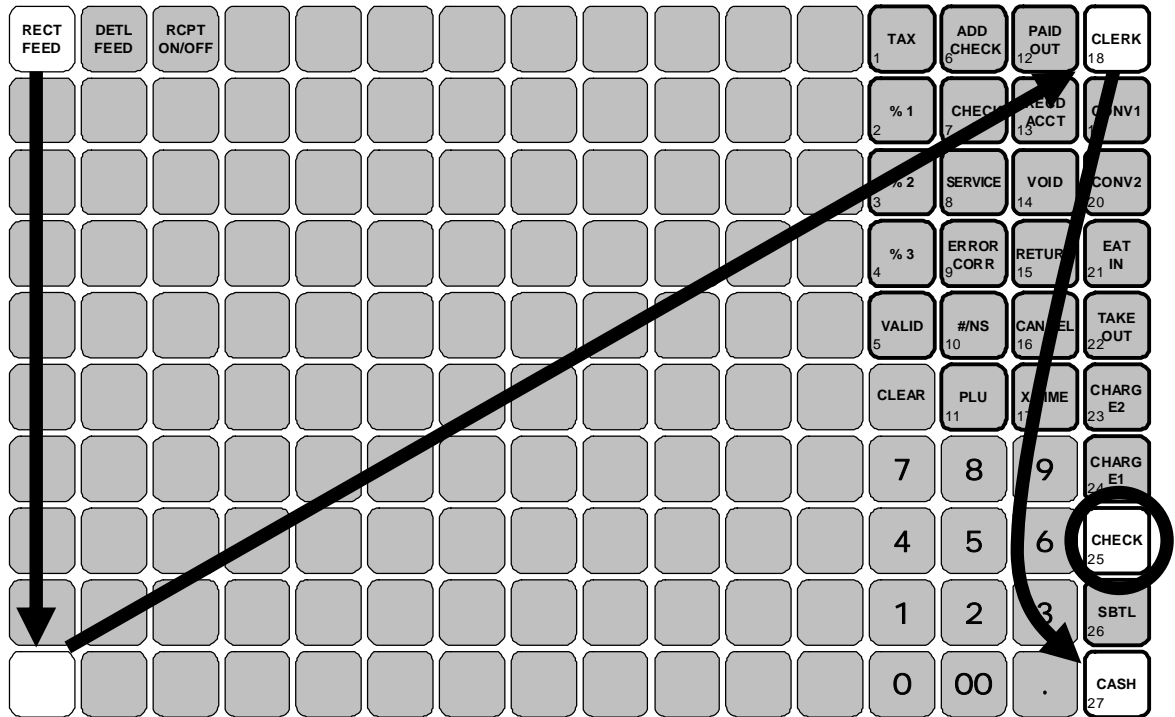

For ER-5240/ER-5240M press the **upper left key** (RECT FEED) of the keyboard, then the **lower left key** (%3), then the **upper right key** (CLERK), and finally press the **lower right key** (CASH).

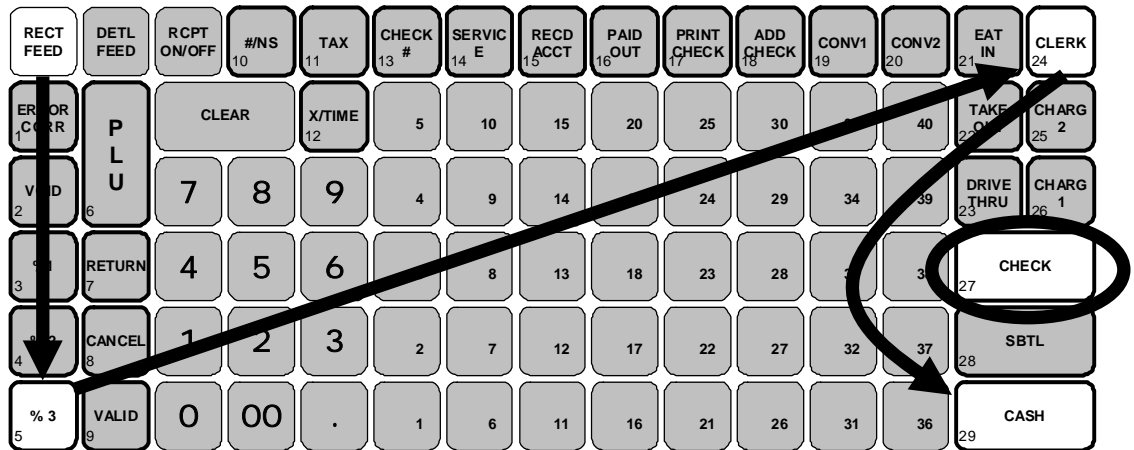

For *ER-5215/ER-5215M* press the **upper left key** (RECT FEED) of the keyboard, then the **lower left key** (%3), then the **upper right key** (CLERK), and finally press the **lower right key** (CASH).

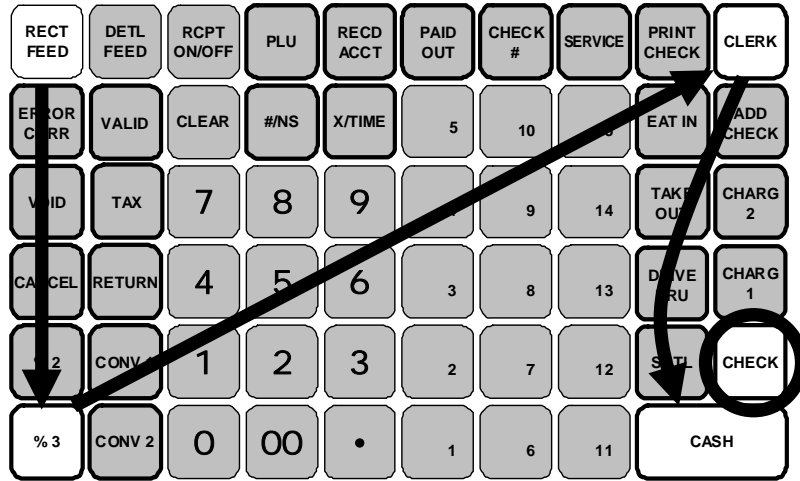

7. When memory is cleared, the register prints a message **“RAM ALL CLEAR OK!”**

Initial Clear

CAUTION: Do not share this information with unauthorized users. Distribute the P Mode key only to those you may want to perform this function.

The initial clear function allows you **to exit any register activity and return to a beginning or cleared state**. Any transaction that is in progress will be exited and totals for that transaction **will not be updated**.

Here are some reasons you may want to perform an initial clear:

- The register is in an unknown state, and you wish to exit the current program or transaction without following normal procedures.
- You have performed a function that includes a compulsory activity and you wish to bypass the compulsion.
- An initial clear may be necessary as part of servicing, or troubleshooting.

To Perform an Initial Clear:

1. Unplug the register.
2. Turn the control lock to the **P** position.
3. Press and hold the key position where the **SBTL** key is located on the default keyboard layout.
4. While continuing to hold the **SBTL** key, plug the register into a power source.
5. The message "**INITIAL CLEAR OK!**" prints when the initial clear is complete.

Operating Instructions

Function Key Descriptions

Keys are listed in alphabetical order. Some of the keys described below are not included on the default keyboard. See “**Function Key Assignment Programming**” to add or change programmable keys.

Keyboard Legend	Description
#/NS (#/No Sale)	Use as a non-add key to print up to an 8-digit numeric entry on the receipt. This entry will not add to any sales totals. The #/NS key is also used to open the cash drawer without making a sale.
X/TIME	Use to multiply a quantity of items or calculate split pricing on PLU entries. <i>Also</i> use to display time.
00, 0 - 9, Decimal	Use to make numeric entries in REG, X, Z, VOID, or P positions. The decimal key is used for decimal or scale multiplication, when setting or entering fractional percentage discounts, or when programming fractional tax rates. Do not use the decimal key when making amount entries into PLUs.
ADD CHECK	Use to combine individual trays (in a cafeteria situation) that will be paid together. Each tray subtotal can advance the consecutive number, depending on programming.
CANCEL	Cancels a transaction without updating PLU, or function key totals. The Cancel function may only be used prior to tendering. Once tendering begins, the Cancel function may no longer be used. The CANCEL key corrects the appropriate totals and counters and the Financial report records total of transactions canceled.
CASH	Calculates the sale total including tax, finalizes the sale, and opens the cash drawer. Change computation is allowed by entering an amount before pressing the CASH key. The cash drawer will open only if the amount tendered is equal to or greater than the total amount of the sale. Post tendering is also available should a second change calculation be necessary. Re-enter the tendered amount and press the CASH key to show the new change computation. Press the CASH key a second time to issue a buffered receipt (up to 200 lines) when the receipt on/off function is OFF.
CASH OUT	Use to allow cash out function when EFTPOS terminal is connected and activated. 0(zero) amount cash out will generate a sequence error. This function only allows within a sale.

Keyboard Legend	Description
CHARGE (1 - 8)	Use to finalize charge sales. Calculates the sale total including tax, finalizes the sale, and opens the cash drawer. Change computation is allowed by entering an amount before pressing the CHARGE key. The cash drawer will open only if the amount tendered is equal to or greater than the total amount of the sale. Change issued will be subtracted from the cash-in-drawer total.
CHECK (CHEQUE)	Use to finalize check sales. Calculates the sale total including tax, finalizes the sale, and opens the cash drawer. Change computation is allowed by entering an amount before pressing the CHECK key. The cash drawer will open only if the amount tendered is equal to or greater than the total amount of the sale. Change issued will be subtracted from the cash-in-drawer total.
CHECK (CHEQUE) CASHING	Use to exchange a check for cash. Cash-in-drawer and check-in-drawer totals are adjusted.
CHECK (CHEQUE) ENDORSEMENT	Use to print a check endorsement message on an optional slip printer to program an endorsement message.
CHECK #	The CHECK # key is used to begin a new, or access an existing balance (hard check) or itemized bill (soft check.) Check track numbers that are entered manually may be set at a fixed length of one to nine digits. Check track numbers assigned automatically will begin with #1. Existing checks are accessed by entering the check track number and pressing the CHECK # key.
CLEAR (Esc)	Use to clear entries made into the 10 key numeric pad or X/TIME key before they are printed. Also used to clear error conditions.
CLERK	The register will not operate in register mode unless a clerk has been signed on. Clerk sign-on is accomplished by “direct” or “secret code” sign-on. All entries made on the register will report to one of the 15 clerk totals. When a clerk is signed on, all entries following will add to that clerk’s total until another clerk is signed on. However, a clerk cannot be changed in the middle of a transaction. To sign a clerk off, thereby displaying the “CLOSED” message on the display, enter 0, and then press the CLERK key. This disables the register until another clerk is signed on. The current clerk must first be signed off before another clerk may be signed on.
CONV (1 - 4)	The currency conversion function, allowed after subtotal, converts and displays the new subtotal at a preprogrammed exchange rate. Tendering is allowed after using the currency conversion function. Change is calculated and issued in home currency. The amount of foreign currency tendered is stored in a separate total on the Financial report, but not added to the drawer total.
EAT-IN TAKE OUT DRIVE THRU	Eat-In, Take Out and Drive Thru are subtotal functions. In areas that have different tax rules for eat-in and take out sales, the EAT-IN , TAKE OUT and DRIVE THRU keys can be programmed to automatically charge or exempt taxes. Sales may not be split between Eat-In, Take Out and Drive Thru. The EAT-IN , TAKE OUT and DRIVE THRU keys maintain separate totals on the Financial report.
ERROR CORR	Use to correct the last entry. The ERROR CORR key corrects the appropriate totals and counters.
F/S SHIFT	When pressed before a PLU entry, the F/S SHIFT key reverses the preprogrammed food stamp status of the PLU. For example, an item not food stamp eligible can be made food stamp eligible.
F/S SUB	Displays the amount of the sale that is food stamp eligible.
F/S TEND	Use to tender food stamps for eligible sales.

Keyboard Legend	Description
GUEST #	Use to enter the count of guests served as part of a guest check.
INACTIVE	Use to inactivate the key on the keyboard with warning/error message.
KBD SHIFT <i>(ER420M only)</i>	This function provides capability to access three levels of PLU keys.
JFEED (JOURNAL FEED) <i>(Two Printer Stations models only)</i>	Advances the journal printer paper one line, or continuously until the key is released.
LEVEL (1 – 2)	Use to switch between different price level if price levels 2 is activated.
MACRO (1 - 10)	Macro keys may be programmed to record, and then later perform, up to 50 keystrokes. For example, a macro key could be set to tender (preset tender) a common currency, such as \$5 into the cash key.
MODIFIER (1 – 5)	The Modifier key alters the next PLU registered, either by changing the Code number of the PLU so that a different item is registered, or by adding the modifier descriptor.
P/BAL	Use to enter the amount of an outstanding balance.
PAID OUT (1 – 3)	Use to record money taken from the register to pay invoices, etc. The paid out amount subtracts from the cash-in-drawer total. Paid outs are allowed outside of a sale only.
PAYMENT	Used to allow final payment on a Soft Check when part of the bill has previously been paid.
PFEED (RECEIPT FEED)	Advances the receipt printer paper one line, or continuously until the key is released.
PLU	The PLU key is used to register price look-ups by number entry. PLUs can be programmed open or preset, and positive or negative.
PRICE INQUIRY	Use to check the price of PLU.
PRINT CHECK	Use to print a guest check. The check can be printed on an optional (RS-232C) printer, or can be printed on the receipt printer. The PRINT CHECK key can be set to automatically service the check.
PROMO	The PROMO key allows you to account for promotional items, as in "buy two, get one free". Pressing this key will remove an item's cost from the sale, but will include the sale of the item in the item's sales counter.
RCPT ON/OFF (RECEIPT ON/OFF)	Use to switch receipt printer on/off.
RECD ACCT (1 – 3)	The RECD ACCT (received on account) key is used to record media loaned to the cash drawer, or payments received outside of a sale. The cash drawer will open. The amount received adds to the cash-in-drawer total.
RETURN	Used to return or refund merchandise. Returning an item will also return any tax that may have been applied.
SCALE	Use to make weight entries. When a scale is attached, press the scale key to show the weight in the display, then press (or enter) a PLU to multiple the weight times the price. When a scale is not attached, you can enter the weight (using the decimal key for fractions). PLUs may be programmed to require an entry through the scale key.
SERVICE	Use to temporarily finalize Previous Balance or Table tracking transactions.

Keyboard Legend	Description
SUBTOTAL	Displays subtotal of sale including tax. Must be pressed prior to a sale discount or sale surcharge.
TABLE #	Tracks the current balance for a guest check or table.
TARE	Tares are container weights. If you are using the scale function, you can preset up to 5 different tare weights. The tare can be subtracted automatically when a specific PLU is registered, or manually inputting the tare number and pressing the TARE key can subtract the tare. Tare #5 can be programmed for entering tare weights manually.
TAX EXEMPT	Press the TAX EXEMPT key to exempt tax 1, tax 2, tax 3, and/or tax 4 from the entire sale.
TAX SHIFT (1 - 4)	When pressed before a PLU entry, the tax shift keys reverse the tax status of the PLU, i.e., a PLU with non-tax status would become taxable or a PLU with tax status would become non-taxable.
TIP	The TIP key allows a gratuity to be added to a guest check before payment. The tip amount is deducted from the Cash-in-Drawer amount for the Clerk/Cashier closing the guest check. The TIP key may be programmed as either a percentage or amount. If programmed as a percentage, tax programming defines whether the percentage is calculated on the net amount, or the amount after taxes.
VOID	Use to correct an item entered earlier within a sale. The VOID key corrects the appropriate totals and counters. To correct the last item, use the ERROR CORR key. For void operations outside of a sale (Transaction Void), use the VOID position on the control lock. The Financial report records totals for each type of void separately.
VALID	Press the VALID key to print a one-line validation on a separate form or piece of paper. Any item registration, discount or payment may be validated.
WASTE	The WASTE key allows control of inventory by accounting for items that must be removed from stock due to spoilage, breakage or mistakes. Press the WASTE key before entering wasted items, and then press the WASTE key again to finalize. The WASTE key may be under manager control, requiring the control lock to be in the X position. The WASTE key is not allowed within a sale.
% (1 - 5)	Up to five % keys may be placed on the keyboard. Each % key is set with a specific function, such as item discount or surcharge, or sale discount or surcharge. The percent rate may be entered or preprogrammed, or the percent keys can be programmed with a negative open or preset price, thus acting as coupon keys. A percentage key may also be set up to accept charge tip entries.

Clerk Sign-On/Sign-Off

See "System Option Programming" to review your clerk options:

- **System option #2** allows you to select direct or code entry sign on.
- **System option #3** allows you to select stay-down or pop-up operation.


Depending on how your machine has been programmed, sign-on will take place only at the beginning of a shift (stay-down), or may have to be repeated for each transaction (pop-up). If your machine has been programmed for stay-down clerks, the clerk currently signed on must be signed off before another clerk may be signed on.

Check with your store manager to see which options have been selected for your register.


Before any transaction may take place, a clerk must be signed on. Clerk sign-on is accomplished in one of two ways:

Direct Sign-On

To sign on a clerk, enter the clerk number and press the clerk key.

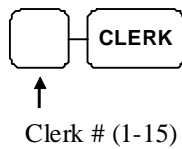


 To sign the clerk off, enter 0 (Zero) and press the clerk key.




Coded Sign-On

 
To sign on a clerk, press the clerk key, enter the clerk code, and then press the clerk key again.



 If **Clerk Interrupt** is activated, enter the clerk code and press the clerk key to sign on.



 To sign the clerk off, enter 0 (Zero) and press the clerk key.



Receipt On and Off

The **RECEIPT ON/OFF** function key may or may not be located on your keyboard.

If the RECEIPT ON/OFF Key is located on the keyboard

1. Press the **RECEIPT ON/OFF** key once to turn the receipt *off*.
2. Press the **RECEIPT ON/OFF** key again to turn the receipt *on*.

OR

If The RECEIPT ON/OFF Key is NOT located on the keyboard

1. Turn the control lock to the **X** position.
2. To turn the receipt *off*, enter **9 9**, press the **SBTL** key. Enter **1**, press **CASH**.



3. To turn the receipt *on*, enter **9 9**, press the **SBTL** key. Enter **0**, press **CASH**.



Item Registrations

All registrations are made into open or preset PLUs.

 
- In place of traditional PLU keys, some PLUs are located directly on the keyboard.
- When more items or categories are needed than the number of PLUs available on the keyboard, registrations can be into PLUs by entering the PLU code number and pressing the **PLU** key on the keyboard.
- The buffer for item registration is fixed **100 lines**.

This system simplifies reporting by listing all items (regardless of how they are entered) on the PLU report, while reporting for groups of items or categories is available from the Group report.

Keyboard PLU Entry - Open Price / Preset Price Override


1. Enter an amount on the numberpad. *Do not use the decimal key.*

For example, for \$2.99, enter:



2. Press a PLU key.

 For example, press PLU 1:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1 T1		\$2.99
GST		\$0.18
TOTAL		\$3.17
CASH		\$3.17
CLERK 1	No.000011	00001

Keyboard PLU Entry - Preset Price

A preset PLU registers the price that was previously programmed for the PLU. See "**PLU Programming**" in the "**Program Mode Programming**" chapter to program preset prices.

1. Press a preset PLU key.

 For example, press PLU 5:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU5		\$1.29
TOTAL		\$1.29
CASH		\$1.29
CLERK 1	No.000011	00001

Keyboard PLU Entry - Repeat

Open or preset price PLUs can be repeated as many times as necessary by pressing the same PLU again. The number of times the item is repeated is shown on the display.

 
1. Enter an amount on the numberpad. **Do not use the decimal key.**

For example, for \$2.99, enter:



2. Press a PLU key.

For example, press PLU 1:



3. To register a second item exactly as the first, press the PLU key a second time.

For example, press PLU 1:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1	T1	\$2.99
PLU1	T1	\$2.99
GST		\$0.36
TOTAL		\$6.34
CASH		\$6.34
CLERK	1	No.000011 00001

Keyboard PLU Entry - Multiplication

When several of the same items are to be entered into the same PLU, you can use multiplication. You can enter a quantity (1 to 999.999) using the **X/TIME** key. You can multiply open or preset PLUs.

 
1. Enter the quantity of items being purchased, and then press the **X/TIME** key.

For example, enter **4** on the numeric key pad and press the **X/TIME** key:



2. Enter an amount on the numberpad. **Do not use the decimal key.**

For example, for \$1.99, enter:



3. Press a PLU key.

For example, press PLU **1**:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
4X	@1.99	
PLU1 T1		\$7.96
GST		\$0.48
TOTAL		\$8.44
CASH		\$8.44
CLERK 1	No.000011	00001

Keyboard PLU Entry - Multiplication with Decimal Point

If you are selling items by weight, or if you are selling yard goods, you can multiply a fraction of a unit.

1. Enter the amount with the decimal point, and then press the **X/TIME** key.

 For example, for 3.75 kilos of produce, enter:




2. Enter an amount on the numberpad. **Do not use the decimal key.**

For example, if the price is \$.99 per kilo, enter:



3. Press a PLU key.

 For example, press PLU 1:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
3.75X	@0.99	
PLU1 T1		\$3.71
GST		\$0.22
TOTAL		\$3.93
CASH		\$3.93
CLERK 1	No.000011	00001

Keyboard PLU Entry - Split Pricing

When items are priced in groups, i.e. 3 for \$1.00, you can enter the quantity purchased and let the register calculate the correct price.

 
1. Enter the quantity purchased, and then press the **X/TIME** key.

For example, enter:




2. Enter the quantity of the group price, and then press the **X/TIME** key.

For example, if the items are priced 3 for \$1.00, enter:




3. Enter an amount on the numberpad.

 For example, if the items are priced 3 for \$1.00, enter:



4. Press a PLU key.

 For example, press PLU 1:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
2@3FOR	@1.00	
PLU1 T1		\$0.67
GST		\$0.04
TOTAL		\$0.71
CASH		\$0.71
CLERK 1	No.000011	00001

Keyboard PLU Entry - Single Item

Immediately after registration Single Item PLUs automatically total as a cash sale. Use single item PLUs for speedy one item sales. For example if you are selling admission tickets, and all ticket sales are one item sales, you can use an open or preset PLU. After each registration, the drawer will immediately open, and a separate transaction receipt is printed. See "**PLU Programming**" in the "**Program Mode Programming**" chapter to program a single item PLU.

1. Press a single item preset PLU key. (Or enter a price and press a single item open PLU key.)

For example, press PLU 6:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU6		\$1.29
TOTAL		\$1.29
CASH		\$1.29
CLERK 1	No.000011	00001

Code PLU Entry - Open Price

If the PRESET status of a PLU is set to N (no), the PLU will operate as an open PLU. See "PLU Programming" in the "Program Mode Programming" chapter to program PLU descriptors and options.

 
1. Enter the PLU number; press the **PLU** key.

For example, enter:



2. Enter an amount on the numberpad. **Do not use the decimal key.**

For example, for \$2.99, enter:



3. Press the **PLU** key again.



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU2 T1		\$2.99
GST		\$0.18
TOTAL		\$3.17
CASH		\$3.17
CLERK 1	No.000011	00001

Code PLU Entry - Preset Price / Single Item

1. Enter the PLU number; press the **PLU** key.

For example, enter:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1		\$1.29
TOTAL		\$1.29
CASH		\$1.29
CLERK 1	No.000011	00001

Code PLU Entry - Preset Price Override

If the OVERRIDE PRESET is set to Y (yes), the PLU is operate as an preset override PLU. See "PLU Programming" in the "Program Mode Programming" chapter to program PLU descriptors and options.

1. Enter the quantity of items being purchased, and then press the **X/TIME** key, even there is only one item.

 For example, enter **1** on the numeric key pad and press the **X/TIME** key:




2. Enter the PLU number; press the **PLU** key.

For example, enter:



3. Enter an amount on the numberpad. **Do not use the decimal key.**

 For example, for \$2.99, enter:



4. Press the **PLU** key again.



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
1	@\$2.99	
PLU2 T1		\$2.99
GST		\$0.18
TOTAL		\$3.17
CASH		\$3.17
CLERK 1	No.000011	00001

Code PLU Entry - Repeat

Open or preset price PLUs can be repeated as many times as necessary by pressing PLU function key again. The number of times the item is repeated is shown on the display.

1. Enter the PLU number; press the **PLU** key.

For example, enter:



2. To register a second item exactly as the first, press the **PLU** key again.



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1 T1		\$2.99
PLU1 T1		\$2.99
GST		\$0.36
TOTAL		\$6.34
CASH		\$6.34
CLERK 1	No.000011	00001

Code PLU Entry - Multiplication

When several of the same items are to be entered into the same PLU, you can use multiplication. You can enter a quantity (1 to 999.999) using the **X/TIME** key. You can multiply open or preset PLUs.

1. Enter the quantity of items being purchased, and then press the **X/TIME** key.

 For example, enter **4** on the numeric key pad and press the **X/TIME** key:



2. Enter the PLU number; press the **PLU** key.

For example, enter:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME	08:33
4X	@1.99	
PLU1 T1		\$7.96
GST		\$0.48
TOTAL		\$8.44
CASH		\$8.44
CLERK 1	No.000011	00001

Code PLU Entry - Multiplication with Decimal Point

If you are selling items by weight, or if you are selling yard goods, you can multiply a fraction of a unit.

1. Enter the quantity with the decimal point, and then press the **X/TIME** key.

 For example, for 3.75 kilos of produce, enter:



2. Enter the PLU number; press the **PLU** key.

For example, enter:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME	08:33
3.75X	@2.99	
PLU3 T1		\$11.21
GST		\$0.67
TOTAL		\$11.88
CASH		\$11.88
CLERK 1	No.000011	00001

Code PLU Entry - Split Pricing

When items are priced in groups, i.e. 3 for \$1.00, you can enter the quantity purchased and let the register calculate the correct price.


1. Enter the quantity purchased, and then press the **X/TIME** key.

 For example, enter:



2. Enter the quantity of the group price, and then press the **X/TIME** key.

 For example, if the items are priced 3 for \$1.00, enter:



3. Enter the PLU number; press the **PLU** key.

For example, enter:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME	08:33
2@3FOR	@2.99	
PLU3 T1		\$1.99
GST		\$0.12
TOTAL		\$2.11
CASH		\$2.11
CLERK 1	No.000011	00001

Modifier Key

Pressing a modifier key alters the next PLU registered, either by changing the code number of the PLU so that a different item is registered, or by just adding the modifier descriptor and registering the same PLU. See "**Modifier 1-5**" in the "**Program Mode Programming**" chapter in order to determine how the modifier key will affect the PLU entry.

Modifiers can be:

 
- *Stay down* so that registrations will be modified by the same modifier until another modifier is selected,
- *Pop-up after each item* to register, for example large, medium or small soft drink,
- *Pop-up after each transaction* to register, for example, toppings of various pizza sizes.

See "**System Options**" in the "**Program Mode Programming**" chapter to select stay down/pop-up status.


Pop-Up Modifier Key Affecting PLU Code

1. Press a preset PLU key.

For example, press PLU **1** with a price of \$1.00.



 2. Press the **MOD 1** key. The message "MOD1" displays.



3. Press the same PLU key. In this example the modifier 1 will add the digit 1 to the fourth PLU # position, resulting in the registration of PLU #1001.



4. Press another PLU key. In this example press PLU **2** with a price of \$1.50.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1		\$1.00
MOD1		
#1001		\$1.25
PLU2		\$1.50
TOTAL		\$3.75
CASH		\$3.75
CLERK 1	No.000011	00001

Price Level Key

If you choose to use the price level feature, you must allocate memory for each level. See "**Memory Allocation**" in the "**Service Mode Programming**" chapter. Note that the default program selects one price level. You must also place price level keys on the keyboard. See "**Function Key Assignment**" in the "**Program Mode Programming**" chapter.

If you use this feature, the same PLU can be given up to 5 different preset prices. Price Level keys shift the price that is being registered. Levels can be:

- *Stay down* so that registrations will stay in the selected level until another level is selected,
- *Pop-up after each item* to register, for example large, medium or small soft drink,
- *Pop-up after each transaction* to register, for example, toppings of various pizza sizes.

See "**System Options**" in the "**Program Mode Programming**" chapter to set how the price level keys operate.

 
Pop-Up Price Level Keys

1. Press a preset PLU key.


For example, press PLU **1** programmed with a price of \$1.00 for price level 1.



2. Press the **LEVEL 2** key. The message "LEVEL 2" displays.



 3. Press the same PLU key. In this example the PLU 1 key is programmed with a price of \$2.00 for price level 2.



4. Press another PLU key. In this example press PLU **2** programmed to register PLU #2 with price level 1. Note that the level 1 price is registered.

Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1		\$1.00
PLU1		\$2.00
PLU2		\$1.50
TOTAL		\$4.50
CASH		\$4.50
CLERK 1	No.000011	00001

Promo

The **PROMO** key allows you to account for promotional items, as in "buy two, get one free". Pressing this key will remove an item's cost from the sale, and the promo item will not be added to the PLU sales total, but it is added to the item sales counter. If stock (inventory) reporting is used, the item will be subtracted from inventory.

1. Register an item.

 
For example, press PLU 1 programmed with a price of \$1.00 for price level 1.



2. Press the **PROMO** key. The message "PROMO" displays.



 3. Press PLU 1 again. You cannot enter an item that has not been already registered in this transaction.



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1		\$1.00
PROMO		
PLU1		
TOTAL		\$0.00
CASH		\$0.00
CLERK 1	No.000011	00001

Waste

The **WASTE** key allows control of inventory by accounting for items that must be removed from stock due to spoilage, breakage or mistakes. Press the **WASTE** key before entering wasted items, and then press the **WASTE** key again to finalize. The **WASTE** key may be under manager control, requiring the control lock to be in the **X** position. The **WASTE** key is not allowed within a sale.

1. Press the **WASTE** key. The message "WASTE" displays at the top of the screen.

WASTE

2. Enter the item or items that are wasted.
3. Press the **WASTE** key again to total the wasted items:

WASTE

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME	08:33
WASTE		
PLU1		\$1.25
PLU2		\$1.50
WASTE		
TOTAL		\$2.75
CLERK 1	No.000011	00001

KBD SHIFT (*ER-420M only*)

The KBD SHIFT key allows you to expand the NLU keys on the keyboard. You can use this key by 3 levels.

Level 1 : NLU key(1~12) * 1;

Level 2 : NLU key(1~12) * 2;

Level 3 : NLU key(1~12) * 3;

1. Press the NLU key.

For example, enter:

12

2. Enter the level number (1~3); press the **KBD SHIFT** key.

For example, enter:

2 **KBD SHIFT**

3. Press the same NLU key.

For example, enter:

12

Receipt Example:

THANK-YOU CALL AGAIN		
DATE	01/15/2003 WED	TIME 08:33
PLU 12		\$1.00
PLU 24		\$2.00
TOTAL		\$3.00
CASH		\$3.00
CLERK 1	No.000011	00001

Percent Key Operations

A total of five % functions are available. %1 and %2 are located on the default keyboard. Your keyboard may be different. More or less % keys may be located on the keyboard, or they may be located on one of the function look up menu keys.

 
Each function is individually programmable to add or subtract, from an individual item or from a sale total, amounts (coupons) or percentages. You can also program the percentage key taxable or non-taxable, so that sales taxes are calculated on the net, or the gross amount of the item or sale. You can also program preset prices or percentages.

The operation examples in this section show the percentage key in a variety of configurations. See **"Function Key Programming"** in the **"Program Mode Programming"** chapter to assign a specific function to each percentage key.

Preset Percent Discount on an Item

In this example the %1 function is preset with a rate of 10 %.

1. Register the item.
2. Press the %1 key:



3. The discount is automatically subtracted.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU2		\$10.00
% 1		-10.000%
AMOUNT		-1.00
TOTAL		\$9.00
CASH		\$9.00
CLERK 1	No.000011	00001

Enter a Percent Discount on an Item

 
You can also operate the percentage functions by entering the percentage of the discount or surcharge. You can enter a fractional percentage up two 3 digits beyond the decimal (i.e. 99.999%) if necessary.

1. Register the discounted item.
2. Enter the percentage. If you are entering a fraction of a percent, you must use the decimal key.

For example, for one third off enter:



3. Press the %1 key:



4. The discount is automatically subtracted.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU2		\$10.00
% 1		-33.333%
AMOUNT		-3.33
TOTAL		\$6.67
CASH		\$6.67
CLERK 1	No.000011	00001

Percent on Sale Total

The percent can be an open or preset amount. In this example an open percentage surcharge of 15% is applied.

1. Register the items you wish to sell.
2. Press the **SBTL** key:

SBTL

3. Enter the percentage, and then press the appropriate discount key.

For example, for 15% enter:

1 — 5 — %1

4. The surcharge is automatically added.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU2		\$10.00
% 1		15.000%
AMOUNT		\$1.50
TOTAL		\$11.50
CASH		\$11.50
CLERK 1	No.000011	00001

Dollar Amount Discount on Sale

When programmed as "amount", "sale", "open" and "negative", a % key will reduce an amount from a sale. Also, depending upon programming:

- You may be allowed to enter only one coupon in a sale, after the **SBTL** key is pressed,
- You may be allowed to enter multiple coupons, but you must press the **SBTL** key before each coupon entry, or
- You may be allowed to enter multiple coupons, without first pressing **SBTL**.

In this example, a coupon may be entered only once, and you must first press **SBTL**.

1. Register the items you wish to sell.
2. Press the **SBTL** key:

SBTL

3. Enter the amount of the discount, and then press the appropriate % key.

For example:

2 — 0 — 0 — %1

4. The discount is subtracted.

Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU2		\$10.00
% 1		-2.00
TOTAL		\$8.00
CASH		\$8.00
CLERK 1	No.000011	00001

Dollar Amount Discount on Item


When programmed as "amount", "item", "open" and "negative", a % key will reduce an amount against an item. In this case, you must press the PLU (or enter the PLU number) of the PLU you wish the discount to be subtracted from.

1. Register the items you wish to sell.
2. Enter the amount of the discount, and then press the appropriate % key.

 For example:



 3. Press the PLU key you wish to subtract the discount from (or enter the PLU number of the PLU you wish to subtract the discount from and press **PLU**.)



4. The discount is automatically subtracted.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU1		\$10.00
PLU1 C		-2.00
TOTAL		\$8.00
CASH		\$8.00
CLERK 1	No.000011	00001

 
Return Merchandise Registrations

If you wish to return or refund an item press **RETURN**, then re-enter any item. You can return merchandise as part of a sale, or you can return merchandise as a separate transaction and return cash to the customer.

1. Press **RETURN**:



2. Enter the price of the item you wish to return, and then press the PLU key where it was registered originally.



3. Total the sale with **CASH**, **CHECK**, or a **CHARGE** function.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
RETURN *****		
PLU2 T1		-2.99
GST AMT		-0.18
TOTAL		-3.17
CASH		-3.17
CLERK 1	No.000011	00001

Voids and Corrections

Error Correction (Void Last Item)

This function corrects the last item entered.

1. Register the item you wish to sell.
2. Press the **ERROR CORR** key:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1 T1		\$2.29
PLU2		\$1.29
ERR CORR	-----	
PLU2		-1.29
GST AMT		\$0.14
TOTAL		\$2.43
CASH		\$2.43
CLERK 1	No.000011	00001

 
Void Previous Item

This function allows you to correct an item registered previously in a transaction.

1. Register an item. Then register a second item.
2. To correct the first item, press **VOID:**



3. Enter the price of the first item, and then press the PLU key where it was registered originally.



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU2		\$1.29
PLU1 T1		\$2.29
VOID	-----	
PLU2		-1.29
GST AMT		\$0.14
TOTAL		\$2.43
CASH		\$2.43
CLERK 1	No.000011	00001

Cancel

The **CANCEL** key allows you to stop any transaction. Anything registered within the transaction before the **CANCEL** key is pressed is automatically corrected. The **CANCEL** key can be inactivated through programming, see "**Function Key Programming**" in the "**Program Mode Programming**" chapter, or the key can be programmed to require manager control.

1. Register the items you wish to sell.
2. Press the **CANCEL** key



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU1 T1		\$2.29
PLU2		-0.50
CANCEL *****		
CLERK 1	No.000011	00001

Void Position Operations

You can use the **VOID** control lock position to correct any complete transaction. To correct any transaction:

1. Turn the control lock to the **VOID** position.
2. Enter the transaction you wish to correct exactly as it was entered originally in the **REG** control lock position. You can enter discounts, voids, returns, tax exemptions or any other function.
3. All totals and counters are corrected as if the original transaction did not take place.

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
VOID MODE *****		
PLU1 T1		-2.29
PLU2		-1.00
GST AMT		-0.14
TOTAL		-3.43
CASH		-3.43
CLERK 1	No.000011	00001

No Sale Operations

Open Drawer

The **#/NO SALE** key will open the cash drawer when you have not already started a transaction. The no sale function can be disabled or placed under manager control through programming, see "**Function Key Programming**" in the "**Program Mode Programming**" chapter.

1. Press **#/NS**:



2. The drawer will open and the receipt will print as in the example on the right.

Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
NO SALE -----		
CLERK 1	No.000011	00001

Non Add Number

You can also use the **#/NO SALE** key to print any number (up to 9 digits) on the printer paper. You can enter the number any time during a transaction. For example, if you wish to record a checking account number, enter the number and press the **#/NO SALE** key before totaling the sale with the **CHECK** key.

1. Register the items you wish to sell.
2. Enter the number you wish to record.

 
For example enter:



3. Press **#/NS**:



 4. Press **CHECK**:




Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU1 T1		\$2.99
NON-ADD#		1234
GST AMT		\$0.18
TOTAL		\$3.17
CHECK		\$3.17
CLERK 1	No.000011	00001


Received On Account Operations

You can use one of the received on account functions (**RA1-RA3**) to accept cash or checks into the cash drawer when you are not actually selling merchandise. For example, use received on account to accept payments for previously sold merchandise, or record loans to the cash drawer.

 
1. Press one of the received on account keys (**RA1-RA3**)



 
2. Enter the amount of cash received, press **CASH**.



 
3. Enter the check amount received, and press **CHECK**.



 4. Enter the charge amount received, press **CHARGE1**



 5. You can continue to itemize receipts, or you can finalize by pressing or selecting the same received on account key.



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
RA1		
CASH		\$10.00
CHECK		\$10.00
CHARGE1		\$10.00
RA1		\$30.00
CLERK 1	No.000011	00001

 
Paid Out Operations

You can use the paid out function (**PO1-PO3**) to track cash or checks paid out or to record loans from the cash drawer.


1. Press one of the paid out keys (**PO1-PO3**)



2. Enter the amount of cash paid out, press **CASH**.



 3. Enter the check amount paid out, and press **CHECK**.



4. Enter the charge amount received, press **CHARGE1**



5. You can continue to itemize paid outs, or you can finalize by pressing or selecting the same paid out key.



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PO1		
CASH		-10.00
CHECK		-10.00
CHARGE1		-10.00
PO1		-30.00
CLERK 1	No.000011	00001

Subtotaling a Sale

1. Register the items you wish to sell.
2. Press **SBTL**. The subtotal will display with the message "Sub" indicated on the rear display.



The subtotal can be printed if the system option is set. See "**Print Option Programming**" in the "**Program Mode Programming**" chapter.

Eat In/Take Out/Drive Thru Sales


Different types of sales, such as "Eat In", "Take Out" and "Drive Thru" can be categorized by placing separate keys on the keyboard. **EAT IN**, **TAKE OUT**, and **DRIVE THRU** keys function as subtotal keys. You can force the operator to press one of the keys before tendering. See "System Option Programming" in the "Program Mode Programming" chapter. Separate totals will be maintained on the financial report to detail sales counts and amounts for each key.

These keys will also print the description at the top of a KP docket.

Totaling and Tendering

There are ten tender functions available to categorize sales. **CASH** and **CHECK** are individual keys on the keyboard


Totaling a Cash Sale

1. Register the items you wish to sell.
2. To total a cash sale, press **CASH**:

3. The display will indicate the total amount of the cash sale.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME	08:33
PLU2		\$7.96
TOTAL		\$7.96
CASH		\$7.96
CLERK 1	No.000011	00001

Totaling a Check Sale

1. Register the items you wish to sell.
2. To total a cash sale, press **CHECK**:

3. The display will indicate the total amount of the cash sale.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME	08:33
PLU2		\$7.96
TOTAL		\$7.96
CHECK		\$7.96
CLERK 1	No.000011	00001

Tendering a Cash Sale

1. Register the items you wish to sell.
2. Enter the amount tendered by the customer.

For example, for \$20.00 enter:



3. Press **CASH**:



4. The display will indicate the total amount of the cash tendered and the change due, if any.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1	T1	\$2.99
PLU1	T1	\$2.99
4X	\$1.99	
PLU2		\$7.96
GST		\$0.36
TOTAL		\$14.30
CASH		\$20.00
CHANGE		\$5.70
CLERK 1	No.000011	00001

 
Tendering a Check Sale

1. Register the items you wish to sell.
2. Enter the amount tendered by the customer.

For example, for \$20.00 enter:



3. Press **CHECK**:



4. The display will indicate the total amount of the check tendered and the change due, if any.


Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
PLU1	T1	\$2.99
PLU1	T1	\$2.99
4X	\$1.99	
PLU2		\$7.96
GST		\$0.36
TOTAL		\$14.30
CHECK		\$20.00
CHANGE		\$5.70
CLERK 1	No.000011	00001

Totaling a Charge Sale

Use the charge keys to track charge or credit card sales. See **"Function Key Programming"** in the **"Program Mode Programming"** chapter to change the descriptors for the charge tender functions. For example, you can use CHARGE 1 to track Visa card sales. The descriptor "VISA" will display on the function look up menu and print on the printer. You can also set tendering options for the charge keys, i.e. whether to allow over tendering or to enforce tendering.

 1. Register the items you wish to sell.
2. Press one of the charge key if it is located on the keyboard:




Receipt Example:

THANK-YOU CALL AGAIN			
DATE	15/01/2003 WED	TIME	08:33
PLU1	T1		\$2.99
PLU1	T1		\$2.99
4X		\$1.99	
PLU2			\$7.96
GST			\$0.36
TOTAL			\$14.30
CHARGE1			\$14.30
CLERK	1	No.000011	00001

Tendering a Charge Sale

Tendering a charge sale may or may not be allowed. See **"Function Key Programming"** in the **"Program Mode Programming"** chapter to set tendering options for the charge keys, i.e. whether to allow over tendering or to enforce tendering.

 1. Register the items you wish to sell.
2. Enter the amount of the charge and press one of the charge keys if it is located on the keyboard:



Receipt Example:

THANK-YOU CALL AGAIN			
DATE	15/01/2003 WED	TIME	08:33
PLU1	T1		\$2.99
PLU1	T1		\$2.99
4X		\$1.99	
PLU2			\$7.96
GST			\$0.36
TOTAL			\$14.30
CHARGE1			\$20.00
CHANGE			\$5.70
CLERK	1	No.000011	00001

Check Cashing

 
Check cashing means exchanging cash for a check. If you wish to cash checks, you must place a **CHKCASH** key on the keyboard. See "**Function Key Assignment**" in the "**Program Mode Programming**" chapter.

1. Enter the amount of the check tendered by the customer.

For example, for \$20.00 enter:



2. Press **CHKCASH**:



3. The display will indicate the amount of the check and the cash change.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
CHKCASH		
CHECK		\$20.00
CASH		-20.00
CLERK 1	No.000011	00001

 
Split Tender

Split tendering is paying for one transaction by more than one payment method. For example, a \$20.00 sale could be split so \$10.00 is paid in cash, and the remaining \$10.00 is paid by a check. If necessary, you can make several different payments.

1. Register the items you wish to sell.
2. Enter the amount of cash tendered by the customer.

For example, enter \$10.00 and press


CASH:



3. The display will indicate the \$10.00 cash tender and the \$10.00 total still due.
4. Enter the amount of check tendered by the customer.

For example, enter \$10.00 and press

 CHECK:



5. When the total tendered equals or exceeds the total due, the receipt will print and the transaction is complete.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU2		\$20.00
TOTAL		\$20.00
CASH		\$10.00
TOTAL		\$10.00
CHECK		\$10.00
CLERK 1	No.000011	00001

Post Tender

Post tendering means computing change after the sale has been totaled and the drawer is open. This feature is useful when a customer changes the amount of the tender or when a "quick change artist" confuses a clerk. Normally, this function is not allowed. If you wish to allow post tendering, you must set the appropriate system option.

 
1. Register the items you wish to sell.

2. Press **CASH**:



3. The display will indicate the total of the cash sale.

4. Enter the amount of the new tender, Press **CASH**:



5. The display will indicate the change due.

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU1 T1		\$2.00
GST		\$0.12
CASH		\$2.12
CLERK 1	No.000011	00001

Currency Conversion

 
If you normally accept currency from neighboring nations, you can program to convert the subtotal of a sale to the equivalent cost in the foreign currency. You can set up four separate conversion functions for different foreign currencies. To do this, you need to program the conversion factor. For example, if the US dollar (home currency) is worth 1.3720 Canadian dollars (foreign currency), the conversion factor is 1.3720. See "Function Key Programming" in the "Program Mode Programming" chapter to set a conversion factor.

1. Register the items you wish to sell.

2. Press the **CONV1** key if it is located on the keyboard:



3. Enter the amount of the foreign currency tender, Press **CASH**:



4. The display will indicate the amount of foreign currency tendered and display \$5.17 change due. **The change due is computed in home currency!**

Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
PLU1 T1		\$2.00
GST		\$0.12
TOTAL		\$2.12
CONV 1		¥2.90
CHANGE RATE	@1.3720	
HOME AMT.		\$10.00
CHANGE		\$5.17
CLERK 1	No.000011	00001

Total of tax eligible sales for each sale tax

Table Management and Clerk Interrupt Operations

Overview

The *Sam4S Electronic Cash Registers* can employ a manual previous balance, hard check (**Monthly Accounts**), or soft check (**Restaurant Bill**) system. (You must select hard or soft check posting in **Memory Allocation Programming** - the default selection is soft.)

There are two methods to manage check track. One is table management system and the other is clerk interrupt system. If you want to use clerk interrupt system.

First, Program as below.

To Enter Clerk Interrupt System (To Exit Table Management system)

1. Program Clerk Secret Code
2. Set system option #2 to a value of **1**. See "**System Option Programming**".
3. Set system option #26 to a value of **1**. See "**System Option Programming**".

 
To Exit Clerk Interrupt System (To Enter Table Management system)

- ◆ Set system option #26 to a value of **0**. See "**System Option Programming**".

Soft Check - Restaurant Style Billing

Opening a Soft Check

1. Enter the number of the guest check, press the **CHECK #** key:




or, press the **CHECK #** key to automatically assign a check:



2. If required, enter the table number and press the **TABLE** key:



 3. If required, enter the number of guests and press the **GUEST** key:



4. Register the items you wish to sell.
5. To total the posting, press **SERVICE**:




Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$0.00
TABLE	#3
GUEST	#2
CHICKEN	\$7.00
STEAK	\$10.00
SERVICE	\$17.00
BFWD	\$17.00
CLERK 1	No.000011 00001

Note: If a table number entry is required for all guest checks, and checks are assigned by register, the check will be assigned by the register when the table # is entered.

Adding to a Soft Check

 1. Enter the number of the guest check, press the **CHECK #** key:



or, if you entered a table number, enter the table number and press the **TABLE** key:



2. Register the next items you wish to sell.
3. To total the posting, press **SERVICE**:




Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$17.00
TABLE	#3
GARLIC BREAD	\$2.00
SERVICE	\$2.00
BFWD	\$19.00
CLERK 1	No.000012 00001

Printing a Soft Check

 1. Enter the number of the guest check, press the **CHECK #** key:



or, if you entered a table number, enter the table number and press the **TABLE** key:



2. Press **PRINT CHECK** to print the complete check. If programmed to do so, the **PRINT CHECK** key will automatically service the check:




Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$19.00
TABLE	#3
CHICKEN	\$7.00
STEAK	\$10.00
GARLIC BREAD	\$2.00
SERVICE	\$0.00
BFWD	\$19.00
CLERK 1	No.000012
	CHK # : 1
	00001

Total of tax collected for each tax

Paying a Soft Check without Payment Key required to Close Check

 
1. Enter the number of the guest check, press the **CHECK #** key:




or, if you entered a table number, enter the table number and press the **TABLE** key:



 2. If necessary, add additional items. If you wish to add a tip, press **SBTL**, then enter the tip amount and press the **TIP** key:



 3. Pay the balance, as you would normally tender a transaction, with **CASH**, **CHECK**, or one of the **CHARGE** keys. If the tender is greater than the balance due, change is displayed.



Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$19.00
TABLE	#3
TIP	\$3.00
CHECKS PAID	\$22.00
CASH	\$25.00
CHANGE	\$3.00
	CHK # : 2
CLERK 1	No.000013 00001

Taking Deposits or Account Payments with Payment Key required to Close Check

Taking Deposits or Account Payments, can only be done when the Payment key is programmed as “**Required to Close Check=YES**”. See “**Function Key Programming - Payment**” in “**Program Mode Programming**”.

1. Enter the number of the guest check, press the **CHECK #** key:

1 2 3 CHECK#

or, if you entered a table number, enter the table number and press the **TABLE** key:

3 TABLE

2. To enter a Deposit or Account payment, simply enter the amount given and press the tender type followed by the **SERVICE** key:

1 5 0 0 CASH

SERVICE

Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$19.00
TABLE	#3
CASH	\$15.00
BFWD	\$4.00
	CHK # : 2
CLERK 1	No.000013 00001

Paying a Soft Check with Payment Key required to Close Check

Taking Deposits or Account Payments, can only be done when the Payment key is programmed as “Required to Close Check=YES”. See “Function Key Programming - Payment” in “Program Mode Programming”.

1. Enter the number of the guest check, press the **CHECK #** key:

1 2 3 CHECK#

or, if you entered a table number, enter the table number and press the **TABLE** key:

3 TABLE

2. If necessary, add additional items. If you wish to add a tip, press **SBTL**, then enter the tip amount and press the **TIP** key:

SBTL

3 0 0 TIP

3. Press the **PAYMENT** key then enter amount tendered as you would normally tender a transaction, with **CASH**, **CHECK**, or one of the **CHARGE** keys. If the tender is greater than the balance due, change is displayed.

PAYMENT

7 0 0 CASH


Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$4.00
TABLE	#3
TIP	\$3.00
CHECKS PAID	\$22.00
CASH	\$7.00
CHANGE	\$3.00
	CHK # : 2
CLERK 1	No.000013 00001

Hard Check

Opening a Hard Check

 1. Enter the number of the guest check, press the **CHECK #** key:



or, press the **CHECK #** key to automatically assign a check:



2. If required, enter the table number and press the **TABLE** key:



3. If required, enter the number of guests and press the **GUEST** key:



4. Register the items you wish to sell.
5. Place a slip in an optional slip printer, the check will print automatically when you press **SERVICE**:




Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$0.00
TABLE	#3
GUEST	#2
CHICKEN	\$7.00
STEAK	\$10.00
SERVICE	\$17.00
BFWD	\$17.00
CLERK 1	No.000011 00001

Note: If a table number entry is required for all guest checks, and checks are assigned by register, the check will be assigned by the register when the table # is entered.

Adding to a Hard Check

 1. Enter the number of the guest check, press the **CHECK #** key:



or, if you entered a table number, enter the table number and press the **TABLE** key:



2. Register the next items you wish to sell.
3. To total the posting, press **SERVICE**:



Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$17.00
TABLE	#3
GARLIC BREAD	\$2.00
SERVICE	\$2.00
BFWD	\$19.00
CLERK 1	No.000012 00001

Paying a Hard Check without Payment Key required to Close Check

1. Enter the number of the guest check, press the **CHECK #** key:

1 — 2 — 3 — CHECK#

or, if you entered a table number, enter the table number and press the **TABLE** key:

3 — TABLE

2. If necessary, add additional items. If you wish to add a tip, press **SBTL**, then enter the tip amount and press the **TIP** key:

SBTL

3 — 0 — 0 — TIP

3. Pay the balance, as you would normally tender a transaction, with **CASH**, **CHECK**, or one of the **CHARGE** keys. If the tender is greater than the balance due, change is displayed.

2 — 5 — 0 — 0 — CASH


Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$19.00
TABLE	#3
TIP	\$3.00
CHECKS PAID	\$22.00
CASH	\$25.00
CHANGE	\$3.00
	CHK # : 2
CLERK 1	No.000013 00001

Taking Deposits or Account Payments with Payment Key required to Close Check

Taking Deposits or Account Payments, can only be done when the Payment key is programmed as “**Required to Close Check=YES**”. See “**Function Key Programming - Payment**” in “**Program Mode Programming**”.

 
1. Enter the number of the guest check, press the **CHECK #** key:



or, if you entered a table number, enter the table number and press the **TABLE** key:



 2. Enter the amount given and press the tender type followed by the **SERVICE** key.



Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$19.00
TABLE	#3
CASH	\$15.00
BFWD	\$4.00
	CHK # : 2
CLERK 1	No.000013 00001

Paying a Hard Check with Payment Key required to Close Check

Taking Deposits or Account Payments, can only be done when the Payment key is programmed as “**Required to Close Check=YES**”. See “**Function Key Programming - Payment**” in “**Program Mode Programming**”.

1. Enter the number of the guest check, press the **CHECK #** key:

1 2 3 CHECK#

or, if you entered a table number, enter the table number and press the **TABLE** key:

3 TABLE

2. If necessary, add additional items. If you wish to add a tip, press **SBTL**, then enter the tip amount and press the **TIP** key:

SBTL

3 0 0 TIP

3. Press the **PAYMENT** key then enter amount tendered as you would normally tender a transaction, with **CASH**, **CHECK**, or one of the **CHARGE** functions. If the tender is greater than the balance due, change is displayed.

PAYMENT

7 0 0 CASH

Receipt Example:

THANK-YOU	
CALL AGAIN	
DATE 15/01/2003 WED	TIME 08:33
CHECK #	#123
PBAL	\$4.00
TABLE	#3
TIP	\$3.00
CHECKS PAID	\$22.00
CASH	\$7.00
CHANGE	\$3.00
	CHK # : 2
CLERK 1	No.000013 00001

Sample of Hard Check postings printed on an optional CBM-820 printer

Example **without** Payment Key Required to Close Check:

DATE	15/01/2003	WED
CHECK #	#123	
PBAL	\$0.00	
TABLE	#3	
GUEST	#2	
CHICKEN	\$7.00	
STEAK	\$10.00	
SERVICE	\$17.00	
BFWD	#17.00	
No.000011	REG 01 CLERK 1	TIME 08:33
DATE	15/01/2003	WED
CHECK #	#123	
PBAL	\$17.00	
TABLE	3	
GARLIC BREAD	\$2.00	
SERVICE	\$2.00	
BFWD	#19.00	
No.000012	REG 01 CLERK 1	TIME 08:33
DATE	15/01/2003	WED
CHECK #	#123	
PBAL	\$19.00	
TABLE	#3	
TIP	\$3.00	
CHECKS PAID	\$22.00	
CASH	\$25.00	
CHANGE	\$3.00	
No.000013	REG 01 CLERK 1	TIME 08:33

Example **with** Payment Key Required to Close Check (**Allows** Part Payment):

DATE	15/01/2003	WED
CHECK #	#123	
PBAL	\$0.00	
TABLE	#3	
GUEST	#2	
CHICKEN	\$7.00	
STEAK	\$10.00	
SERVICE	\$17.00	
BFWD	#17.00	
No.000011	REG 01 CLERK 1	TIME 08:33
DATE	15/01/2003	WED
CHECK #	#123	
PBAL	\$17.00	
TABLE	3	
GARLIC BREAD	\$2.00	
SERVICE	\$2.00	
BFWD	#19.00	
No.000012	REG 01 CLERK 1	TIME 08:33
DATE	15/01/2003	WED
CHECK #	#123	
PBAL	\$19.00	
TABLE	#3	
CASH	\$15.00	
SERVICE	\$0.00	
BFWD	#4.00	
No.000013	REG 01 CLERK 1	TIME 08:33
DATE	15/01/2003	WED
CHECK #	#123	
PBAL	\$4.00	
TABLE	#3	
TIP	\$3.00	
CHECKS PAID	\$22.00	
CASH	\$25.00	
CHANGE	\$3.00	
No.000014	REG 01 CLERK 1	TIME 08:33

 
Note: If Date is not printing on the slip, please refer to **“Print Option Programming” option #27-2 in “Program Mode Programming”**.

Scale Entry

Direct Scale Entry


Place a product on the scale and access the **SCALE** function to display the weight on the cash register. Then make the appropriate entry; the PLU must have "scaleable" status.

1. Place an item on the scale.
2. Press the **SCALE** key.




3. Note that the weight is displayed on the screen. Enter the price per **kilo** on the numberpad. *Do not use the decimal key.*

 For example, for \$3.00, enter:



4. Press a PLU key.

 For example, press PLU 1:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
1.50 kg	@3.00/kg	
PLU1		\$4.50
GST		\$0.27
TOTAL		\$4.77
CASH		\$4.77
CLERK 1	No.000011	00001

Automatic Scale Entry

Place a product on the scale and make the appropriate PLU entry. The PLU must be set with "auto scale status".

1. Place an item on the scale.
2. Press a PLU key, if the item is a preset item, or enter the price per **kilo** on the numberpad. *Do not use the decimal key.*

 For example, for \$3.00, enter:



3. Press a PLU key.

For example, press PLU 1:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
1.50 kg	@3.00/kg	
PLU1		\$4.50
GST		\$0.27
TOTAL		\$4.77
CASH		\$4.77
CLERK 1	No.000011	00001

Tare Weight Entry

1. Place an item on the scale.
2. Enter the preprogrammed tare number.
Press the **TARE** key.




 3. Press the **SCALE** key.



4. Note that the weight, less the tare weight, is displayed on the screen. Enter the price per kilo on the numberpad. *Do not use the decimal key.*

 For example, for \$3.00, enter:



5. Press a PLU key.

For example, press PLU 1:



Receipt Example:


THANK-YOU		
CALL AGAIN		
DATE 15/01/2003 WED	TIME 08:33	
1.50 kg	@3.00/kg	
PLU1		\$4.50
GST		\$0.27
TOTAL		\$4.77
CASH		\$4.77
CLERK 1	No.000011	00001

Manual Tare Weight Entry


1. Place an item on the scale.
2. Enter the manual tare number, **5**. Press the **TARE** key:



 3. Enter the weight of the tare.
For example, enter **.01**, press the tare key:




 4. Press the **SCALE** key.




5. Note that the weight, less the tare weight, is displayed on the screen. Enter the price per **kilo** on the numberpad. **Do not use the decimal key.**

 For example, for \$3.00, enter:



6. Press a PLU key.

 For example, press PLU **1**:




Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE	15/01/2003 WED	TIME 08:33
1.50 kg	@3.00/kg	
PLU1		\$4.50
GST		\$0.27
TOTAL		\$4.77
CASH		\$4.77
CLERK 1	No.000011	00001

Manual Weight Entry


Operators can make manual weight entries if the item has been programmed to accept them. You must use the decimal key to enter fractional manual weights.

 1. Place an item on the scale.
2. Enter the weight using the decimal key for fractional weights. Press the **SCALE** key:



3. Enter the price per **kilo** on the numberpad. *Do not use the decimal key.*

 For example, for \$3.00, enter:



4. Press a PLU key.

For example, press PLU 1:



Receipt Example:

THANK-YOU		
CALL AGAIN		
DATE 15/01/2003	WED	TIME 08:33
1.50 kg MANUAL WT. @ @3.00		
PLU1		\$4.50
GST		\$0.27
TOTAL		\$4.77
CASH		\$4.77
CLERK 1	No.000011	00001

X/Z Mode

Introduction

All Management Functions take place with the control lock in the **X** position. In this way only those with the correct key will have access to these functions. Some register operations may be programmed to require the control lock in the **X** position in order to operate. All reports require a key that will access the **X** or **Z** position.

X/Z Reports

System reports are divided into two basic categories:

- **X** reports, which read totals without resetting
- **Z** reports, which read totals and reset them to zero

Most reports are available in both categories. Some reports, such as the Cash-in-Drawer report and the From-To PLU report are available only as **X** reports.

Some reports also provide identical but separate *period to date* reports. These reports maintain a separate set of totals which may be allowed to accumulate over a period of days, weeks, months, or even years. **X2** reports read period to date totals without resetting, and **Z2** reports read period to date totals and reset them to zero. Period to date totals are updated each time a **Z1** report is completed.

A complete list of available reports is presented in a chart on the following page.

An example is given for each of these reports in the pages that follow. Those reports which may be optionally abbreviated through register programming are represented twice. They are first shown with the option off, giving all totals, and again with the option turned on, showing the abbreviated version of the same report.

Registers programmed with pop-up clerks must be signed on in the **REG** control lock position prior to taking reports.

Running a Report - General Instructions

1. Refer to the “Report Table” and “Electronic Journal Table” (*for ER-380, ER-380M and ER-390M only*).
2. Select a report type and the report mode.
3. Turn the control lock to the position indicated.
4. Enter the key sequence for the report you have selected.

Report Table

Report Type	Report Number	Report Mode	Control Lock Position	Key Sequence
Financial	1	X	X	1 – SBTL
		Z	Z	1 – SBTL
		X2	X	201 – SBTL
		Z2	Z	201 – SBTL
Time	2	X	X	2 – SBTL
		Z	Z	2 – SBTL
		X2	X	202 – SBTL
		Z2	Z	202 – SBTL
All PLU	3	X	X	3 – SBTL
		Z	Z	3 – SBTL
		X2	X	203 – SBTL
		Z2	Z	203 – SBTL
All Clerk	4	X	X	4 – SBTL
		Z	Z	4 – SBTL
		X2	X	204 – SBTL
		Z2	Z	204 – SBTL
Group	5	X	X	5 – SBTL
		Z	Z	5 – SBTL
		X2	X	205 – SBTL
		Z2	Z	205 – SBTL
All STOCK	6	X	X	6 – SBTL
		Z	Z	6 – SBTL
Daily Sales	8	X2	X	208 – SBTL
		Z2	Z	208 – SBTL
Individual Clerk Report	9	X	X	9-SBTL-#-CLERK-#-CLERK
		X2	X	209-SBTL-#-CLERK-#-CLERK
Open Table REPORT TABLE	11	X	X	11 – SBTL
		Z	Z	11 – SBTL
From/To PLU	13	X	X	13-SBTL XXXX – PLU – XXXX – PLU
		X2	X	213-SBTL XXXX – PLU – XXXX – PLU
From/To STOCK	14	X	X	14-SBTL XXXX –PLU – XXXX – PLU
DRAWER TOTAL	111	X	X	111-SBTL

Electronic Journal Table


(for ER-380, ER-380M and ER-390M only)

Report Type	Report Number	Report Mode	Control Lock Position	Key Sequence
PRINT ALL EJ	300	X	X	300 -SBTL
PRINT EJ CASH	301	X	X	301 -SBTL
PRINT EJ CHECK	302	X	X	302 -SBTL
PRINT EJ MISC/T	303	X	X	303 -SBTL
PRINT EJ %	304	X	X	304 -SBTL
PRINT EJ RA/PO	305	X	X	305 -SBTL
PRINT EJ RETURN	306	X	X	306 -SBTL
PRINT EJ EC/VOID	307	X	X	307 -SBTL
PRINT EJ NO SALE	308	X	X	308 -SBTL
PRINT EJ CANCEL	309	X	X	309 -SBTL
PRINT EJ BY CLERK	401 – 15	X	X/Z	401-415(depends on Max Clerk)-SBTL
EJ RESET (No Printing)	399	Z	Z	399- SBTL

Reset Hard Check Line

If you want to change hard check line # to specific value, follow below sequence in **Z** mode.

 1. Reset **All** Hard Check Line #.



2. Reset **an Individual** Hard Check Line #.



Cash Declaration

If compulsory cash declaration is required, you must declare the count of the cash drawer prior to taking **X** or **Z** financial and clerk reports.

 
You can enter the cash drawer total in one step, or to facilitate the counting of the cash drawer, you can enter each type of bill/coin and checks separately and let the register act as an adding machine. You can also use the **X/TIME** key to multiply the denomination of currency times your count.

Either way you choose to enter cash, the register will compare your declaration with the expected cash and check in drawer totals and print the over or short amounts on the report.


For example:

1. Turn the control lock to the **X** or **Z** position (depending upon the type of report you are taking.)


2. Press the **SBTL** key.



 
3. Enter the total of cash.



 4. Enter the total of checks.



 5. Press the **CASH** key to total the declaration.



DATE 15/01/2003 WED	TIME 08:33	
***	CASH DECLARATION	***
CASH		\$98.76
CHECK		\$20.00
INPUT AMT		\$118.76
DRAWER TTL		\$118.76
DIFFERENCE		\$0.00
CLERK 1	No.000001	00000

Service Mode Programming

 
Overview

The following procedures are done from the Service Mode menu:

- *Program 20 - Clear all totals*
- *Program 30 - Clear grand total*
- *Program 40 - Clear PLU file*
- *Program 50 - EPROM Information*
- *Program 60 - Memory Allocation*
- *Program 70 - Assignment of functions to keyboard locations*
- *Program 8x - RS232C Port*

Memory Allocation Scan

1. Turn the control lock to the S position to scan the allocated memory .
2. Enter **60**, press the **SBTL** key.



3. Press CASH key



PC Online Mode

In *Sam4S 3xx, 4xx and 52xx Electronic Cash Registers*, there are no special commands to enter PC Online Mode.

 
When you want to enter PC Online mode, all you have to do is to set 232 Communication Option in Programming.

When PC sends commands to ECR, The ECR will be automatically Online Mode if connected.


Memory Allocation

NB. This will clear the Memory!

1. Turn the control lock to the S position.
2. To Allocate Memory, enter **60**, and then press the **SBTL** key.



 
3. Refer to the chart below. Enter the index number and press the **X/TIME** key.



X	MEMORY ITEM
1	PLU
2	CLERK
3	GROUP
4	CHECK#
5	SOFT CHECK LINE
6	CHECK TYPE : Hard (1), Soft (0)
7	PRICE LEVEL
8	MIX AND MATCH
9	ELECTRONIC JOURNAL (ER-3xx Series only)

4. Enter the Number to allocate for the Memory Item and Press **CASH** key.

 See the example data table below



MEMORY ITEM	N
PLU	300 (Max. 5,000 for 3xx Series) 1,000 (Max 9,000 for 4xx Series) 1,000 (Max 15,000 for 52xx Series)
CLERK	15 (Max. 99)
GROUP	20 (Max. 99)
CHECK #	15 (Max. 500)
SOFT CHECK LINE	30 (Max. 50)
CHECK TYPE	0 (Soft Check), 1 (Hard Check)
PRICE LEVEL	1 (Max. 2)
MIX AND MATCH	10 (Max. 100)
ELECTRONIC JOURNAL	3000 (Max. 15000) (ER-3xx Series Only)

 
※Default values have been highlighted in **bold** print

5. If you want to finish memory allocation, Enter **CASH** key with no numeric key input. If you want to allocate another memory area, repeat step 3 and 4.



Clear Total

1. Turn the control lock to the S position.
2. To Reset Total, enter 20, and then press the SBTL key.




Clear Grand Total

1. Turn the control lock to the S position.
2. To Reset Grand Total, enter 30, and then press the SBTL key.



Clear PLU File

 1. Turn the control lock to the S position.
2. To Reset PLU file, enter 40, and then press the SBTL key.



EPRM Information

1. Turn the control lock to the S position.
2. To Scan EPRM Information, enter 50, and then press the SBTL key.



Function Key Assignment Programming

 
Function keys may be relocated, inactivated or changed with this program. For example, you may wish to place functions, such as **PREVIOUS BALANCE** and **SERVICE** that are not placed on the default keyboard. Or perhaps, you may wish to remove a function, such as **CANCEL**, for security reasons.

Please note the following limitations:


- If you assign a duplicate of a function code, the duplicate will function exactly as the original - you will not get separate totals and counters on reports for the duplicated key.
- You can reassign keys only in locations that are programmable. See “Keyboard”, where the key locations that may be programmed are identified.

To Assign a Function Key to a Location:


1. Turn the control lock to the **S** position.
2. Enter 70, and then press the **SBTL** key.



 3. Refer to Function Key Codes to find the code for the key you wish to assign, press the location you wish to program. Repeat this step to assign another key.



 4. Press **CASH** key to finalize key assignment program.



Function Key Codes

Code	Function	Code	Function	Code	Function	Code	Function
1	PLU 1	143	CHARGE 2	170	MACRO 1	197	SCALE
100	PLU 100	144	CHARGE 3	171	MACRO 2	198	SERVICE
101~	RESERVED	145	CHARGE 4	172	MACRO 3	199	TABLE #
119	RESERVED	146	CHARGE 5	173	MACRO 4	200	TARE
120	Numeric 1	147	CHARGE 6	174	MACRO 5	201	TAKE OUT
121	Numeric 2	148	CHARGE 7	175	MACRO 6	202	TAX EXEMPT
122	Numeric 3	149	CHARGE 8	176	MACRO 7	203	TAX SHIFT 1
123	Numeric 4	150	CHECK CASHING	177	MACRO 8	204	TAX SHIFT 2
124	Numeric 5	151	ENDORSE	178	MACRO 9	205	TAX SHIFT 3
125	Numeric 6	152	CHEQUE TEND	179	MACRO 10	206	TAX SHIFT 4
126	Numeric 7	153	CHECK #	180	RETURN	207	TIP
127	Numeric 8	154	CLEAR (ESC)	181	MOD 1	208	VOID
128	Numeric 9	155	CLERK #	182	MOD 2	209	WASTE
129	Numeric 0	156	CURR. CONV. 1	183	MOD 3	210	VALIDATION
130	Numeric 00	157	CURR. CONV. 2	184	MOD 4	211	PAYMENT
131	DECIMAL	158	CURR. CONV. 3	185	MOD 5	212	RECEIPT ON/OFF
132	#/NS	159	CURR. CONV. 4	186	P/BAL	213	DETAIL FEED (Two Printer Stations Models only)
133	%1	160	DRIVE THRU	187	PAID OUT 1		
134	%2	161	EAT-IN	188	PAID OUT 2	214	INACTIVE
135	%3	162	ERR CORRECT	189	PAID OUT 3	215	NON ADD
136	%4	163	F/S SHIFT	190	RECEIPT FEED	216	PRICE INQUIRY
137	%5	164	F/S SUB	191	PRINT CHECK	217	CASH OUT
138	XTIME	165	F/S TEND	182	PROMO	218	KBD SHIFT (ER-420M only)
139	ADD CHECK	166	GUEST	193	REC ON ACCT 1		
140	CANCEL	167	PLU	194	REC ON ACCT 2		
141	CASH	168	LEVEL 1	195	REC ON ACCT 3		
142	CHARGE 1	169	LEVEL 2	196	SBTL		

For OLD ER380 ER380M


Code	Function	Code	Function	Code	Function	Code	Function
1	NLU 1	37	CHARGE 1	63	LEVEL 1	89	REC ON ACCT 2
12	NLU 12	38	CHARGE 2	64	LEVEL 2	90	REC ON ACCT 3
13	RESERVED	39	CHARGE 3	65	MACRO 1	91	SBTL
14	RESERVED	40	CHARGE 4	66	MACRO 2	92	SCALE
15	Numeric 1	41	CHARGE 5	67	MACRO 3	93	SERVICE
16	Numeric 2	42	CHARGE 6	68	MACRO 4	94	TABLE #
17	Numeric 3	43	CHARGE 7	69	MACRO 5	95	TARE
18	Numeric 4	44	CHARGE 8	70	MACRO 6	96	TAKE OUT
19	Numeric 5	45	CHECK CASHING	71	MACRO 7	97	TAX EXEMPT
20	Numeric 6	46	ENDORSE	72	MACRO 8	98	TAX SHIFT 1
21	Numeric 7	47	CHECK TEND	73	MACRO 9	99	TAX SHIFT 2
22	Numeric 8	48	CHECK #	74	MACRO 10	100	TAX SHIFT 3
23	Numeric 9	49	CLEAR (ESC)	75	RETURN	101	TAX SHIFT 4
24	Numeric 0	50	CLERK #	76	MOD 1	102	TIP
25	Numeric 00	51	CURR. CONV. 1	77	MOD 2	103	VOID
26	DECIMAL	52	CURR. CONV. 2	78	MOD 3	104	WASTE
27	#/NS	53	CURR. CONV. 3	79	MOD 4	105	VALIDATION
28	%1	54	CURR. CONV. 4	80	MOD 5	106	PAYMENT
29	%2	55	DRIVE THRU	81	P/BAL	107	RECEIPT ON/OFF
30	%3	56	EAT-IN	82	PAID OUT 1	108	INACTIVE
31	%4	57	ERR CORRECT	83	PAID OUT 2	109	NON ADD
32	%5	58	F/S SHIFT	84	PAID OUT 3	110	PRICE ENQUIRY
33	XTIME	59	F/S SUB	85	RECEIPT FEED		
34	ADD CHECK	60	F/S TEND	86	PRINT CHECK		
35	CANCEL	61	GUEST	87	PROMO		
36	CASH	62	PLU	88	REC ON ACCT 1		

*(From ER380 EPROM v2.1 and earlier & ER380M V1.8 and earlier)

RS-232 Communication Options

You must define the device that is attached to the RS-232C communications port, and the options for the device. **The Default is Comm1 is set to PC Polling**

1. Turn the control lock to the S position.
2. Enter **8 0** and press the **SBTL** key to Program Port 1 OR
Enter **8 1** and press the **SBTL** key to Program Port 2 (except **ER-380**).
3. Refer to the chart RS-232C option chart that follows and enter the number of the address you wish to program and press the **X/TIME** key.
4. Enter the value that represents your selection and press the **CASH** key.
5. Repeat from step 2 for any additional options you wish to program.
6. Press **CASH** to exit the program

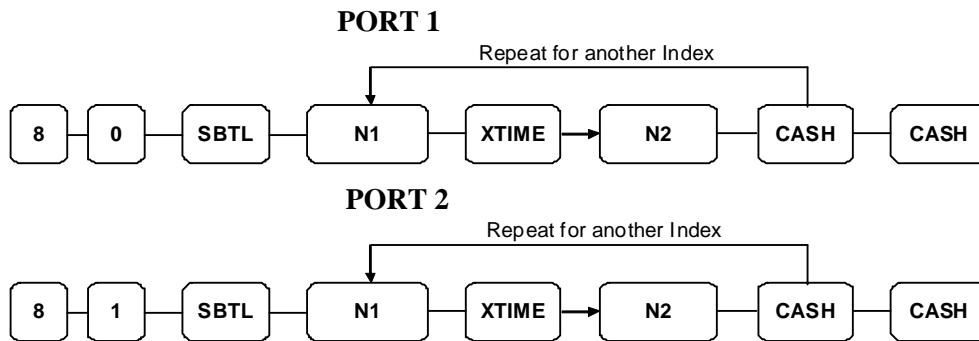

N1	OPTION	N2	VALUE
1	Baud Rate	0	9600 BPS
		1	1200 BPS
		2	2400 BPS
		3	4800 BPS
		4	19200 BPS
2	Parity	0	NONE
		1	ODD
		2	EVEN
3	Data Bits	0	8 BITS
		1	7 BITS
4	Stop Bits	0	1 BIT
		1	2 BIT

N1	OPTION	N2	VALUE
5	Device Function (Port1 is set to 1 PC as default; Port2 is set to 0 NONE as default)	0	NONE
		1	PC
		2	SCALE
		3	RJ* / CCTV
		4	REMOTE PRINTER
		6	SCANNER
		7	COIN
		8	EFT
		9	POLE
6	Initial Feeding Line KP	0 – 20	0
7	End Feeding Line KP	0 – 20	7
8	Initial Feeding Line Slip	0 – 20	0
9	Print Line On Guest Check	0 – 50	0
10	Scale Type	0	NCI
		1	CAS
11	Printer Type (SAM4S ELLIX 10, ELLIX 20 and SRP-270 are added and replace from 1 to 3)	0	NONE
		1	SAM4S ELLIX 10 SAMSUNG SRP-100
		2	SAM4S ELLIX 20 SRP-250
		3	SRP-270 SRP-300
		4	SRP-350
		5	CITIZEN3550/3551
		6	CITIZEN810
		7	CITIZEN230
		8	EPSON TMT88-2
		9	EPSON U200
		10	EPSON U295
		11	EPSON U300
		12	EPSON U325
		13	EPSON U375
		14	STAR SP-200
		15	STAR SP-298
		16	STAR SP-300
17	STAR TSP-200		
12	Pole Display	0	EPSON
		1	ICD

N1	OPTION	N2	VALUE
13	EFT Type	0	EFT GLED
		1	EFT INGE
		2	RESERVED
		3	TYRO EFTPOS
14	EFT Config Byte	0 – 127	0
15	EFT Currency	0	NONE
		1	DM
		2	EURO
16	EFT Password	0- 99999999	0

※Default values have been highlighted in **bold** print

*Remote Journal Printer

Program Mode Programming

Default Programming

- All keyboard PLUs are **Taxable, Preset** and **Override**, without entry limits by default status programming of "40000000".
- All system options are set to **0** in default programming, unless otherwise noted. Change only the options that will deviate from default programming. There is no need to re-enter an option status of **0**, since **0** is its original setting.
- All programming (unless otherwise noted) is done with the control lock in the **P** position. Each section details a specific area of register programming.
- The Default program is set to **10.000% VAT on Tax 1** and the description is set to **GST** already.

Descriptor Programming Methods

Descriptors are programmable for PLUs, function keys, groups, clerks and the logo/messages. There are two methods available to program descriptors, the *Program Overlay Method* and the *Descriptor Code Method*.

This chapter describes both methods. All *Sam4S 3xx, 4xx and 52xx Series* use Overlay Method by default and ER5215 uses Descriptor Code method by default and is the only method. ***ER-380 EPROM v1.6 and earlier and ER-380M EPROM v1.3 and earlier does not have Overlay method build-in.*** You can select each method by System option programming.

Program Overlay Method

ER380/380M Alpha Keyboard Overlay (ER380 EPROM v1.7; ER380M EPROM v1.4)

	G		7	8	9	M	Q	U	X	V
C	F	I	4	5	6	L	P	T	W	Z
B	E	H	1	2	3	K	O	S		Y
A	D		0	SPACE	DOUBL E SIZE	J	N	R		

ER390M Alpha Keyboard Overlay

										PAPER FEED	#/NS	RECD ACCT	PAID OUT	CLERK #
!	@	#	\$	%	^	&	*	()	C/CONV	CLEAR	PLU	X/TIME	%1
Q	W	E	R	T	Y	U	I	O	P	VOID	7	8	9	CHARGE
A	S	D	F	G	H	J	K	L	;	RETURN	4	5	6	CHECK
Z	X	C	V	B	N	M	,	.	/	ERROR CORR	1	2	3	SBTL
+	-	<	>	?	=	CAPS	DOUBLE	SPACE	BACK SPACE	CANCEL	0	00	•	CASH

ER420M Alpha Keyboard Overlay

		J	L	7	8	9	P	T	X	Z	SPACE
C	F	I		4	5	6	O	S	W	Y	DOUBLE
B	E	H	K	1	2	3	N	R	V		CAPS
A	D	G		0	00	•	M	Q	U		

ER430M Alpha Keyboard Overlay

										RCPT FEED	DETL FEED	RECD ACCT	PAID OUT	CLERK #
!	@	#	\$	%	^	&	*	()	#/NS	CLEAR	PLU	X/TIME	%1
Q	W	E	R	T	Y	U	I	O	P	VOID	7	8	9	CHARGE
A	S	D	F	G	H	J	K	L	;	RETURN	4	5	6	CHECK
Z	X	C	V	B	N	M	,	.	/	ERROR CORR	1	2	3	SBTL
+	-	<	>	?	=	CAPS	DOUBLE SPACE	SPACE	BACK SPACE	CANCEL	0	00	.	CASH

ER-5200/ER-5200M Alpha Keyboard Overlay

!	@	#	\$	%	^	&	*	()	-	+				
Q	W	E	R	T	Y	U	I	O	P	<	>				
A	S	D	F	G	H	J	K	L	;	'	?	CLEAR		X/TIME	
Z	X	C	V	B	N	M	,	.	/	:	=	7	8	9	
CAPS	DOUBLE SPACE	SPACE	SPACE	SPACE	SPACE	SPACE	CAPS	DOUBLE SPACE	BACK SPACE	"		4	5	6	
												1	2	3	SBTL
												0	00	.	CASH

ER-5240/ER-5240M Alpha Keyboard Overlay

					!	@	#	\$	%	^	&	*	()
		CLEAR	XTIME	Q	W	E	R	T	Y	U	I	O	P	
				A	S	D	F	G	H	J	K	L	;	
				Z	X	C	V	B	N	M	,	CHECK		
				-	+	<	>		?	:	=	SBTL		
				CAPS	DOUBLE	SPACE	DOUBLE	BSPACE	"	.	/	CASH		

Descriptor Code Method

If you customize your keyboard by covering key locations, or by installing double or quad size keys, you will need to program descriptors using the descriptor code method.

Descriptor Code Chart

CHAR	Ç	ü	é	â	ä	à	á	ç	ê	ë
CODE	001	002	003	004	005	006	007	008	009	010
CHAR	è	í	î	ì	Ä	Å	É	æ	Æ	ô
CODE	011	012	013	014	015	016	017	018	019	020
CHAR	ö	ò	û	ù	ÿ	Ö	Ü	ø	£	¥
CODE	021	022	023	024	0250	026	027	028	029	030
CHAR	€	SPACE	!	"	#	\$	%	&	'	(
CODE	031	032	033	034	035	036	037	038	039	040
CHAR)	*	+	,	-	.	/	0	1	2
CODE	041	042	043	044	045	046	047	048	049	050
CHAR	3	4	5	6	7	8	9	:	;	<
CODE	051	052	053	054	055	056	057	058	059	060
CHAR	=	>	?	@	A	B	C	D	E	F
CODE	061	062	063	064	065	066	067	068	069	070
CHAR	G	H	I	J	K	L	M	N	O	P
CODE	071	072	073	074	075	076	077	078	079	080
CHAR	Q	R	S	T	U	V	W	X	Y	Z
CODE	081	082	083	084	085	086	087	088	089	090
CHAR							a	b	c	d
CODE	091	092	093	094	095	096	097	098	099	100
CHAR	e	f	g	h	i	j	k	l	m	n
CODE	101	102	103	104	105	106	107	108	109	110
CHAR	o	p	q	r	s	t	u	v	w	x
CODE	111	112	113	114	115	116	117	118	119	120
CHAR	y	z	BACK SPACE			Double				
CODE	121	122	123			999				

Tax Programming

The *Sam4S 3xx, 4xx and 52xx Electronic Cash Registers* has the capability to support four separate taxes.

Taxes can be calculated as either a straight percentage rate of between 0.001% and 99.999%, or a 60 break point tax table. Each tax may be either an add-on tax (added to the cost of a taxable item), or a value added tax (VAT) that is included in the price of the item.

Tax rate 4 may be set to function as the Canadian Goods & Services Tax (GST). Definitions for tax rates 1, 2, 3 & 4 are made as part of tax programming.

- **The Default program is set to 10.000% VAT on Tax 1 and the description is set to GST already.**
- If you are entering a tax rate (add-on or VAT), see "Straight Percentage Tax Rate Programming" to enter the percentage rate.
- If you are entering a Canadian Goods and Services Tax (GST), use tax rate 4 for the GST tax, and use tax rates 1, 2 and/or 3 for any other provincial tax or taxes. See "Straight Percentage Tax Rate Programming" to enter the GST status and percentage rate.

Important Note: After you have entered your tax program(s), test for accuracy by entering several transactions of different dollar amounts. Carefully check to make sure the tax charged by the cash register matches the tax on the printed tax chart for your area. As a merchant, you are responsible for accurate tax collection. If the cash register is not calculating tax accurately, contact your dealer for assistance.

Descriptor - Program 80

Refer to "Program 80 - Function Key Descriptor"

Straight Percentage Tax Rate Programming

When tax requirements may be met using a straight percentage rate, use the following method to program a tax as a straight percentage.

Programming Straight Percentage Tax Rates and Status

1. Turn the control lock to the **P** position.
2. If the tax is a percentage rate, with a decimal. (0.000-99.999). It is not necessary to enter preceding zeros. For example, for 6%, enter 06.000 or 6.000.
3. For the type of tax:


If the tax is a percentage added to the sale (normal add on tax), enter:	0
If the tax is a percentage value added tax (VAT; calculated as part of the sale), enter:	2

4. Enter 0 here for all taxes, unless if you are programming tax 4 as a Canadian GST. If tax 4 is a Canadian GST, enter the sum of the options below:

OPTION	VALUE	=	SUM
GST (tax 4) is taxable by rate 1?	Yes = 1 No = 0		
GST (tax 4) is taxable by rate 2?	Yes = 2 No = 0		
GST (tax 4) is taxable by rate 3?	Yes = 4 No = 0		

5. Press the Tax Shift key for the tax you are programming.
6. Press the **CASH** key to end programming.

Tax Rate Programming Flowchart

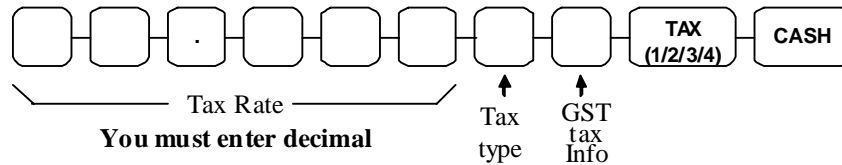

The Default program is set to 10.000% VAT on Tax 1 and the description is set to GST already.

PLU Programming


All PLUs, whether they are registered by pressing a PLU key on the keyboard, or by entering the PLU number and pressing the **PLU** key, have the same programming options. These options are set through separate programs:

- **Program 100 - PLU Status Programming** determines whether the PLU is open, preset or inactive. Also selected here are tax, food stamp, scale, negative, single item, hash, gallonage, compulsory number entry, compulsory validation, compulsory condiment and print options.
- **Program 110 - PLU Auto Tare Programming.**
- **Program 150 - PLU Group Assignment** allows you to select up to two groups where each PLUs sales will accumulate.
- **Program 200 - PLU Price/HALO Programming** determines the PLU price if the PLU is preset or the high amount lock out (HALO) if the PLU is open.
- **Program 250 - PLU Stock Amount Programming** allows you to add stock to the PLU sales counters for PLUs you have designated as stock keeping PLUs.
- **Program 300 - PLU Description Programming** allows you to set a unique, up to 18 - character descriptor for each PLU.
- **Program 350 - PLU Link Programming** allows you to link a PLU to another PLU, so that registration of the first PLU will automatically trigger registration of the linked PLU.
- **Program 400 - PLU Delete Programming** allows you to delete the PLU.
- **Program 450 - PLU Mix & Match Programming.**

Program 100 - PLU Status Programming


PLUs default to Taxable by Rate 1. i.e GST

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 0 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to receive the same status and Press the last PLU keys, or



 - Enter up to 15 digit number of the PLU and press the **PLU** key, or




 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



4. Refer to the "PLU Status Chart" to determine the values for **N1** through **N9**. (If an address offers more than one option, add the values for each option and enter the sum. For example, if you wish the PLU to be taxable by rates 1 and 3, add the values for your choices, 1 + 4, and enter the sum "5" for address N5.) Enter the values you have selected, press the **X/TIME** key. (**You do not need to enter preceding zeros**. For example, if you are only selecting a value for **N9**, i.e. auto tare by number 1, just enter **1**.)

 Australian GST status is preset by default.



5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.



PLU Status Chart


Address	Program Option	Value	=	Sum
N1	PLU is preset price ?	Yes = 0 No = 1		
	PLU allows override of preset?	Yes = 0 No = 2		
	PLU is taxable by rate 1(GST)?	Yes = 4 No = 0		
N2	PLU is taxable by rate 2?	Yes = 1 No = 0		
	PLU is taxable by rate 3?	Yes = 2 No = 0		
	PLU is taxable by rate 4?	Yes = 4 No = 0		
N3	PLU is food stamp eligible?	Yes = 1 No = 0		
	PLU is a negative item?	Yes = 2 No = 0		
	PLU is hash ?	Yes = 4 No = 0		
N4	PLU is single item ?	Yes = 1 No = 0		
	Compulsory non-add number entry ?	Yes = 2 No = 0		
	PLU is gallonage ?	Yes = 4 No = 0		
N5	PLU keeps inventory ?	Yes = 1 No = 0		
	PLU is inactive ?	Yes = 2 No = 0		
	PLU is scalable ? (Also make N6 +1)	Yes = 4 No = 0		
N6	PLU is auto-scale entry? (Also make N5 +4)	Yes = 1 No = 0		
	PLU is a condiment ?	Yes = 2 No = 0		
	Compulsory condiment entry?	Yes = 4 No = 0		
N7	Print PLU on receipt ?	Yes = 0 No = 1		
	ER-3xx	Print PLU on detail ?	Yes = 0 No = 2	
	ER-4xx ER-52xx	Not Used		
	Print PLU on check ?	Yes = 0 No = 4		

Address	Program Option	Value	=	Sum
N8	Print item's price on receipt?	Yes = 0 No = 1		
	Print item's price on check?	Yes = 0 No = 2		
	PLU is disabled PROMO function?	Yes = 4 No = 0		
N9	PLU counter is not reset when a PLU Z report is done?	Yes = 1 No = 0		
	PLU is preset override in MGR control?	Yes = 2 No = 0		

※Default values have been highlighted in **bold** print


Program 110 - PLU Auto Tare Programming

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 1 0**, press the **SBTL** key



3. Select the **PLU** or **PLUs** you wish to program in one of the following ways:

 
- Press on the keyboard, or




- Press the first **PLU** keys that are to receive the same status and press the last **PLU** keys, or



 
- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting, and press the **PLU** key. Enter the last number in the range; press the **PLU** key.



 4. Enter a value (1-5) to indicate the number of the preprogrammed tare weight you want to automatically subtract when the PLU is used for scale entry (using an optional scale). Enter 0 to disable automatic tare subtraction, follow with **X/TIME** key.



5. Program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program




Program 150 - PLU Group Assignment

Each PLU may report to any three levels of 20 groups. Group totals appear on reports, so that you can track sales of different types of items. A group can also be used to designate items that are to print on an optional kitchen printer.


Note: The PLU will report to group "0", if not programmed to report to groups 1-20.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 5 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a **PLU** key on the keyboard, or




- Press the first **PLU** keys that are to receive the same status and Press the last **PLU** keys, or



 
- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



 4. Enter up to three 2-digit numbers representing the groups where you wish to add the PLUs sales, i.e. enter **1 0** for group 10 or enter **0 4** for group four. Press the **X/TIME** key.




5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.



Program 200 - PLU Price/HALO Programming


If a PLU is open, set the HALO (high amount lock out) here. If a PLU is preset set the preset price here. If a PLU is set with gallonage status, enter the price per liter here. (Enter price per liter in tenths of a cent, i.e. 1299 for \$1.29 9/10 per liter.)

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **2 0 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first **PLU** keys that are to receive the same status and Press the last **PLU** keys, or



 - Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the **PLU** key. Enter the last number in the range; press the **PLU** key.



4. If the PLU is open, enter a HALO of up to 7 digits. If the PLU is preset, enter a preset price. Press **X/TIME** key.



If the PLU Price Level is 2, repeat this again.




5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.



Program 250 - PLU Stock Amount Programming


With this program, you can add stock to the PLU sales counters for PLUs you have designated as stock keeping PLUs. See “**Program 100 - PLU Status Programming**”. The stock number set here can be the amount of stock that is being added to the current level, or optionally, it can be the new total stock level. See **option #18** in "Error! Not a valid bookmark self-reference." to set this option.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **2 5 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to receive the same status and Press the last PLU keys, or



 
- Enter up to 15 digit number of the PLU and press the PLU key, or



 - Enter the number of the first PLU in a range of PLUs that are to receive the same setting; press the PLU key. Enter the last number in the range; press the PLU key.




 4. Enter the stock amount you wish to add (up to six digits), press the **X/TIME** key.



Stock Amount

 
5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.




Program 300 - PLU Description Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming).**

 
1. Turn the control lock to the **P** position
2. To begin the program, enter **3 0 0**, press the **SBTL** key.



 3. Select the PLU you wish to program in one of the following ways:
 - Press a PLU key on the keyboard, or



 
- Enter up to 15 digit number of the PLU and press the **PLU** key, or



4. If you are programming using alpha overlay;



 or,




5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.



Program 350 - PLU Link Programming


PLU link programming allows you to link a PLU to another PLU, so that registration of the first PLU will automatically trigger registration of the linked PLU. For example, you may wish to link a bottle deposit with the sale of beverages, or you may wish to register a group of items normally sold together.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **3 5 0**, press the **SBTL** key.




3. Select the PLU you wish to program in one of the following ways:

 - Press a PLU key on the keyboard, or



 
- Enter up to 15 digit number of the PLU and press the **PLU** key, or




4. Enter the number of the PLU you wish the PLU linked to; press the PLU key. Or press the PLU key on the keyboard you wish the PLU linked to.



 If you want to unlink,



 
5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.



Program 400 - PLU Delete Programming


NOTE: To delete a PLU, all totals for the PLU must be cleared from Z reports (including Stock and PLU reports.)

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **4 0 0**, press the **SBTL** key.



3. Select the PLU or PLUs you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to delete and Press the last PLU keys, or



 
- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range you wish to delete and press the **PLU** key. Enter the last PLU number in the range; press the **PLU** key.



 4. Press X/TIME key.




5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.




Program 450 - PLU MIX & MATCH Programming

 1. Turn the control lock to the P position.
2. To begin the program, enter **4 5 0**, press the **SBTL** key.



3. Select the PLU you wish to program in one of the following ways:

 
- Press a PLU key on the keyboard, or




- Press the first PLU keys that are to delete and Press the last PLU keys, or



 
- Enter up to 15 digit number of the PLU and press the **PLU** key, or



 - Enter the number of the first PLU in a range you wish to delete and press the **PLU** key. Enter the last PLU number in the range; press the **PLU** key.



 4. Enter the number of the Mix & Match Table (1-20); press the **X/TIME** key.



5. To program additional PLUs, repeat from step 3, or press the **CASH** key to finalize the program.



System Option Programming


Refer to the “System Option Table” to review the system options. Read each option carefully to determine if you wish to make any changes. Default value has been highlighted in **bold print**.

NOTE: Because after clearing memory all options settings are automatically set to 0, and because your most likely option selections require a status setting of 0, you do not need to program this section unless you wish to change the default status.

Programming a System Option:

1. Turn the control lock to the **P** position.
2. Enter **3 0**, press the **SBTL** key.
3. Enter a system option address, press the **X/TIME** key.
4. Enter the number representing the status you have selected, or if there is more than one decision to be made in an address, add the values representing your choices for each decision and enter the sum. Press the **SBTL** key.
5. Repeat from step 3 for each system option you wish to change.
6. Press the **CASH** key to end system option programming.

System Option Flowchart

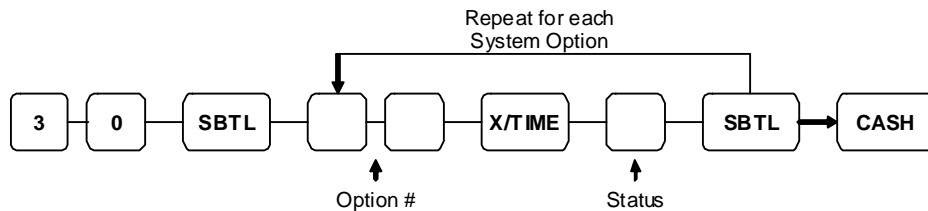

※Default values have been highlighted in **bold print**

System Option Table

Address	SYSTEM OPTION	VALUE	=	SUM
1	Beeper is active?	Yes = 0 No = 1		
	ER380/M ER390M Percentage affect to net sale?	Yes = 0 No = 2		
	ER420M ER430M Not Used	-		
	ER52XX/M Clerk opt is real clerk key	Yes = 2 No = 0		
2	Clerk sign on method is:	Direct entry =	0	
		Code entry =	1	
3	Clerks are:	Pop-up =	Yes = 1	
		Stay down =	No = 0	
4	Drawer needs to be shut to operate?	Yes = 0 No = 1		
	Activate open Drawer Alarm?	Yes = 2 No = 0		
5	The number of seconds before the open drawer warning tone sounds (1-99 seconds).	30		
6	Allow the post tender function?	Yes = 1 No = 0		
	Open drawer on post tender?	Yes = 0 No = 2		
	Allow multiple receipts? (See Print Opt. #24)	Yes = 4 No = 0		
7	Cash Declaration Required before Z Financial report?	Yes = 1 No = 0		
	Allow negative balance sales in the X control lock position only?	Yes = 2 No = 0		
8	Allow zero balance sales in the X control lock position only?	Yes = 1 No = 0		
	Consecutive number is reset after a financial report?	Yes = 2 No = 0		
9	Reset Grand Total after Z financial Report?	Yes = 1 No = 0		
	Cash drawer will open when reports are run?	Yes = 0 No = 2		
	Open drawer during training mode?	Yes = 0 No = 4		
10	Decimal place: (0,1,2,3)	2		

Address	SYSTEM OPTION	VALUE	=	SUM
11	Date format is:	MMDDYY =	0	
		DDMMYY =	1	
		YYMMDD =	2	
12	Percentage and Tax calculations will:	Round up at 0.005 =	0	
		Always round up =	1	
		Always round down =	2	
13	Split price calculations will:	Round up at 0.005 =	0	
		Always round up =	1	
		Always round down =	2	
14	Compulsory Eat-in, T-out and D-thru before tendering?		Yes = 1 No = 0	
	Hash is	Normal =	Yes = 0	
		Non-add =	No = 2	
15	Reset the Financial report Z counter after a Z1 Financial report?		Yes = 1 No = 0	
	Reset the Time report Z counter after a Z1 Time report?		Yes = 2 No = 0	
	Reset the PLU report Z counter after a Z1 PLU report?		Yes = 4 No = 0	
16	Reset the Clerk report Z counter after a Z1 Clerk report?		Yes = 1 No = 0	
	Reset the Group report Z counter after a Z1 Group report?		Yes = 2 No = 0	
17	Reset the Daily sale report Z counter after a Z2 Daily sale report?		Yes = 1 No = 0	
	Printer paper sensor is enabled?		Yes = 0 No = 2	
	Deactivate Split Pricing?		Yes = 4 No = 0	
18	Allow Direct Multiply?		Yes = 1 No = 0	
	Inventory (stock) counter programming	Added to current level =	Yes = 2	
		Replaces current level =	No = 0	
19	The number of numeric digits: (0 -14, 0 is no limit)		0	
20	Direct multiply more than one digit?		Yes = 1 No = 0	
	Tender Validation amount is:	Amount tendered =	Yes = 2	
		Amount of sale =	No = 0	

Address	SYSTEM OPTION		VALUE	=	SUM
21	Displays add price of linked item?		Yes = 1 No = 0		
	Allow sale when stock reaches "0"?		Yes = 0 No = 2		
	Allow Australian round on subtotal?		Yes = 4 No = 0		
22	Allow Australian round on Cash?		Yes = 1 No = 0		
	Allow Z stock report?		Yes = 0 No = 2		
23	Training mode		Enter =	Yes = 1	
			Exit =	No = 0	
24	ER420M ER430M	Not used	-		
	ER380/M ER390M	Enable Electronic Journal (EJ)	Yes = 1 No = 0		
		Prompt operator when EJ buffer is full	Yes = 0 No = 2		
		Stop operations when EJ buffer is full	Yes = 0 No = 4		
	ER52XX	Activate auto cutter?	Yes = 0 No = 1		
	ER52XXM	Activate auto cutter?	Yes = 0 No = 1		
25	ER380/M ER390M	Send only negative entries to Electronic Journal	Yes = 1 No = 0		
		Send reset report to Electronic Journal	Yes = 2 No = 0		
		Disable Cash Declaration?	Yes = 4 No = 0		
	ER420M ER430M ER52XX/M	Descriptor PGM Method	Keyboard overlay =	Yes = 0	
			Character code =	No = 1	
			ER-5215/M Character Code (Fixed)	No = 1	
		Percentage affect to net sale?	Yes = 2 No = 0		
	Disable Cash Declaration?	Yes = 4 No = 0			

Address	SYSTEM OPTION		VALUE	=	SUM
26			Table Management =	No = 0	
			Clerk Interrupt =	Yes = 1	
	(Either table or clerk interrupt)				
	ER380/M ER390M	VAT shift affect the whole receipt		Yes = 2 No = 0	
ER52XX/M	Not count in memory in void mode		Yes = 4 No = 0		
27	Disable price level keys		Level 1 =	Yes = 1 No = 0	
			Level 2 =	Yes = 2 No = 0	
28	Price level is:		Pop-up after item =	0	
			Pop-up after sale =	1	
			Stay-down =	2	
29	Modifier is:		Pop-up after item =	0	
			Pop-up after sale =	1	
			Stay-down =	2	
30	ER380/M ER390M	Use Journal Takeup spool? (Option)		Yes = 0 No = 1	
		Reset GST after service on Hard Check		Yes = 2 No = 0	
		Alpha Overlay for descriptor programming		Yes = 4 No = 0	
	ER420M ER430M ER52XX/M	Embedded price barcode (0/1/2/3/4/7) (Please see note below)		0	
31	ER380/M ER390M	Embedded price barcode (0/1/2/3/4/7) (Please see Note below)		0	
	ER420M ER430M	Reset GST after service on Hard Check		Yes = 1 No = 0	
	ER52XX/M	Enable Keyboard PLU Function		Yes = 1 No = 0	
		Reset GST after service on Hard Check		Yes = 2 No = 0	
		Use Standard Check Digit Calculation		Yes = 0 No = 4	

Address	SYSTEM OPTION	VALUE	=	SUM	
32	ER380/M ER390M ER420M ER430M	New Zealand rounding on subtotal (NB Turn AU Rounding OFF first)	Yes = 1 No = 0		
		New Zealand rounding on Cash (NB Turn AU Rounding OFF first)	Yes = 2 No = 0		
		Allow Z fin report with Open Clerk Interrupt Sales	Yes = 4 No = 0		
	ER52XX/M	Allow Z fin report with Open Clerk Interrupt Sales	Yes = 1 No = 0		
		New Zealand rounding on subtotal (NB Turn AU Rounding OFF first)	Yes = 2 No = 0		
		New Zealand rounding on Cash (NB Turn AU Rounding OFF first)	Yes = 4 No = 0		
33	Disable Line Find on Slip Printer	Yes = 1 No = 0			

Note: Price Embedded Barcode Format

Barcode Format	1 st	2 nd	3 rd	4 th	5 th	6 th	7 th	8 th	9 th	10 th	11 th	12 th	13 th	
Type 1	D1	D2	I1	I2	I3	I4	I5	S	P1	P2	P3	P4	C	(5 and 4)
Type 2	D1	D2	I1	I2	I3	I4	S	P1	P2	P3	P4	P5	C	(4 and 5)
Type 3	D1	D2	I1	I2	I3	I4	I5	I6	P1	P2	P3	P4	C	(6 and 4)
Type 4	D1	D2	I1	I2	I3	I4	I5	P1	P2	P3	P4	P5	C	(5 and 5)
Type 7	D1	D2	I1	I2	I3	I4	I5	W1	W2	W3	W4	W5	C	(5 and 5)

D1, D2 = Department Number (02, 20 ~ 29)

I1 ~ I6 = Item Code digits

P1 ~ P5 = Price digits

W1 ~ W5 = Weight digits

S = Check sum digit for price

C = Check sum digit for all characters

Type 0: Price Embedded Barcode not used

Type 1: 2 digits Department Number, 5 digits Item Code, 1 digit Price Checksum, 4 digits Price, and 1 digit Checksum.

Type 2: 2 digits Department Number, 4 digits Item Code, 1 digit Price Checksum, 5 digits Price, and 1 digit Checksum.

Type 3: 2 digits Department Number, 6 digits Item Code, 4 digits Price, and 1 digit Checksum.

Type 4: 2 digits Department Number, 5 digits Item Code, 5 digits Price, and 1 digit Checksum.

Type 7: 2 digits Department Number, 5 digits Item Code, 5 digits **Weight**, and 1 digit Checksum.

Print Option Programming


Refer to the “Print Option Table” to review the print options. Read each option carefully to determine if you wish to make any changes. Default value has been highlighted in **bold print**

NOTE: Because after clearing memory all options settings are automatically set to 0, and because your most likely option selections require a status setting of 0, you do not need to program this section unless you wish to change the default status.

Programming a Print Option:

1. Turn the control lock to the **P** position.
2. Enter **4 0**, press the **SBTL** key.
3. Enter a print option address, press the **X/TIME** key.
4. Enter the number representing the status you have selected, or if there is more than one decision to be made in an address, add the values representing your choices for each decision and enter the sum. Press the **SBTL** key.
5. Repeat from step 3 for each print option you wish to change.
6. Press the **CASH** key to end print option programming.

Print Option Flowchart

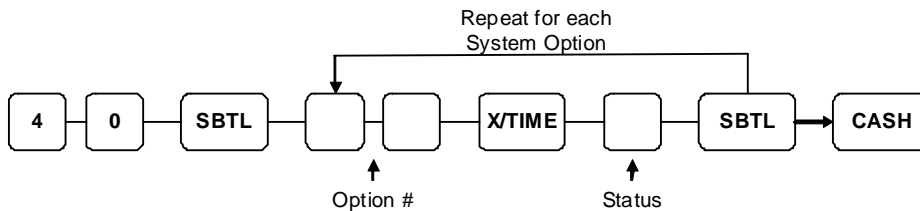

※Default values have been highlighted in **bold print**

Print Option Table

Address	PRINT OPTION	VALUE	=	SUM
1	Print media total on clerk report?	Yes = 1 No = 0		
	Print tax symbol?	Yes = 0 No = 2		
2	Void/Return totals will print on the Financial report?	Yes = 0 No = 1		
	Audaction total will print on the Financial report?	Yes = 2 No = 0		
3	Skip media totals with zero activity on the Financial report?	Yes = 0 No = 1		
	Skip media totals with zero activity on the Clerk report?	Yes = 0 No = 2		
	Print Clerk report at the end of the Financial report?	Yes = 4 No = 0		
4	Print PLU sale item number?	Yes = 1 No = 0		
	Print PLU with zero totals on report?	Yes = 2 No = 0		
	Subtotal is printed when the SBTL key is pressed?	Yes = 4 No = 0		
5	Print percentage of sales on the PLU report?	Yes = 1 No = 0		
	Print consecutive number counter on receipt?	Yes = 0 No = 2		
6	Print date on receipt?	Yes = 0 No = 1		
	Print time on receipt?	Yes = 0 No = 2		
	ER380/M ER390M ER52XX/M Print machine number on receipt?	Yes = 0 No = 4		
7	Print clerk name on receipt?	Yes = 0 No = 1		
	Print Z counter on reports?	Yes = 0 No = 2		
8	Home Currency symbol (see Note 1 below)	\$		

Address	PRINT OPTION	VALUE	=	SUM
9	Print receipt when sign on/off?	Yes = 0 No = 1		
	Print Grand total on the X Financial report?	Yes = 0 No = 2		
	Print Grand total on the Z Financial report?	Yes = 0 No = 4		
10	Print Gross total on the X Financial report?	Yes = 0 No = 1		
	Print Gross total on the Z Financial report?	Yes = 0 No = 2		
11	Print the subtotal without tax on the receipt?	Yes = 1 No = 0		
	Tax amount to print on receipt is:	Combined = Yes = 2		
		Itemized = No = 0		
12	Print the tax amount on receipt?	Yes = 0 No = 1		
	Print taxable totals?	Yes = 2 No = 0		
	Print the tax rate?	Yes = 4 No = 0		
13	Print a breakdown of the VAT eligible sale?	Yes = 1 No = 0		
	Print training mode message on the receipt during training mode operations?	Yes = 2 No = 0		
14	Currency Symbol: (See NOTE 2 below)	CONV. #1 = .		
15		CONV. #2 = .		
16		CONV. #3 = .		
17		CONV. #4 = .		
18	Print the Kitchen Printer/Requisition order number on Receipt?	Yes = 0 No = 1		
	Print the Item's Price on the Kitchen Printer/Requisition?	Yes = 2 No = 0		
	ER380/M ER420M ER430M Print Round amount on kitchen printer?	Yes = 4 No = 0		
19	Print registrations on the Kitchen Printer/Requisition in Void Mode ?	Yes = 0 No = 1		
	Print registrations on the Kitchen Printer/Requisition in Training Mode ?	Yes = 2 No = 0		

Address	PRINT OPTION		VALUE	=	SUM
20	Combine like items on the kitchen printer?		Yes = 0 No = 1		
	Consolidation of like items on check track?		Yes = 0 No = 2		
	Chooses volume unit When the PLU is gallonage.	Gallons =	0		
Liters =		4			
21	ER380/M ER390M	Print preamble message on receipt?	Yes = 0 No = 1		
		Print postamble message on receipt?	Yes = 0 No = 2		
22	ER380/M ER390M	Print preamble message on the guest check?	Yes = 1 No = 0		
		Print postamble message on the guest check?	Yes = 2 No = 0		
21	ER420M ER430M ER52XX/M	Print preamble message on receipt?	Yes = 0 No = 1		
		Print postamble message on receipt?	Yes = 0 No = 2		
		Print preamble message on the guest check?	Yes = 4 No = 0		
22	ER420M ER430M ER52XX/M	Print postamble message on the guest check?	Yes = 1 No = 0		
		Print pre/postamble message on the journal receipt?	Yes = 0 No = 2		
23	Print average items per customer on the Financial report?		Yes = 0 No = 1		
	Print average sales per customer on the Financial report?		Yes = 0 No = 2		
24	Issue a second receipt for the same transaction? (See System Option #6-3)		Yes = 1 No = 0		
	Priority print by group on the kitchen printer?		Yes = 2 No = 0		
	Print the PLU number and descriptor on the receipt?		Yes = 4 No = 0		
25	Do not print when polling reports?		Yes = 1 No = 0		
	Print PLU# on PLU report?		Yes = 2 No = 0		
	Grand total is:	Net sale =	Yes = 4		
Gross sale =		No = 0			

Address	PRINT OPTION		VALUE	=	SUM
26	ER380/M ER390M	Not Used			
	ER420M ER430M	Print Journal font	Small =	No = 0	
			Normal =	Yes = 1	
	ER52XX/M	Print journal reverse?		Yes = 2 No = 0	
		Journal printer off?		Yes = 4 No = 0	
27	Send order to the kitchen printer when the SBTL key is pressed?		Yes = 1 No = 0		
	Print date on hard check?		Yes = 2 No = 0		
28	Pre Print graphic logo on receipt?		Yes = 1 No = 0		
	Post-Print graphic logo on receipt?		Yes = 2 No = 0		
29	Pre Print graphic logo on the guest check?		Yes = 1 No = 0		
	Post-Print graphic logo on the guest check?		Yes = 2 No = 0		
30	Print pre-logo	Default =	Yes = 0		
		User =	No = 1		
	ER420M ER430M ER52XX/M	Print Post-Logo	Default =		Yes = 0
			User =		No = 2
31	Number of Pre-Feeding Lines (0-5)		0		
32	Number of Post-Feeding Lines (0-5)		0		
33	ER380/M ER390M	Print Format	Receipt =	No = 0	
			Journal =	Yes = 1	
	ER420M ER430M	Not Used			
	ER52XX/M	Print Check# line on the Guest Check		No = 0 Yes = 1	
34	ER380/M ER390M ER420M ER430M	Print Check# line on the Guest Check		No = 0 Yes = 1	

NOTE 1: Print Option# 8 - Users outside of the USA can designate a different currency symbol. To select a different symbol, type descriptors on the alpha keyboard overlay or enter three digit alpha character codes.

NOTE 2: Print Option# 14,15,16,17 - If you are using the currency conversion feature, you can select the appropriate symbol for each foreign currency you are accepting. To select a different symbol, type descriptors on the alpha keyboard overlay or enter three digit alpha character codes.

Function Key Programming

Three programs are used to program function keys:

- **Program 70** - is used to set each keys individual options
- **Program 80** - is used to program a 18 character alpha numeric descriptor
- **Program 90** - is used to set a high amount limit (HALO)

In this chapter you will find:


- General instructions for programs 70, 80 and 90.
- Specific programming instructions for each function key.

To change descriptors on reports see “**Program 701 - Financial Report Message Programming**” and “**Program 710 - Clerk Report Message Programming**” also.

Program 70 - Function Key Options

Use Program 70 to set options for function keys. Because of the differences inherent in function keys, individual options will be different. See the specific instructions for each key in this chapter to find the options for each key.

 
1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 0**, press the **SBTL** key.



3. Enter the values for the option digit or digits. Depending on the function key you are programming, you may enter up to six digits **N1** through **N6**. Determine the values for **N1** through **N6** by referring to the specific function key information that follows. (**You do not need to enter preceding zeros**. For example, if the function key offers six digits, **N1** through **N6** and you are only selecting a value for **N6**, just enter the value for **N6**.) Press the function key you wish to program.



 
4. To program additional function keys, repeat from step 3, or press the **CASH** key to finalize the program.





Program 80 - Function Key Descriptor

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming).**

 
1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 0**, press the **SBTL** key.




3. If you are programming **ER-390M, ER-430M and ER-5200/ER-5200M**

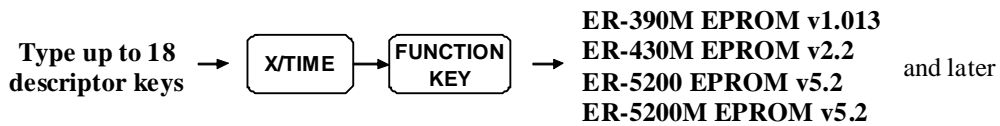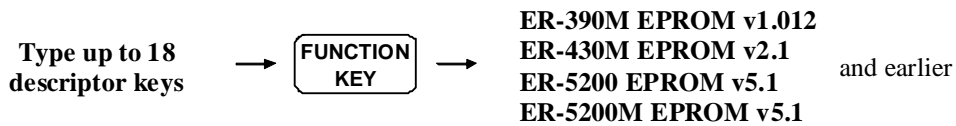


or,

 

 
If you are programming **ER-380 (EPROM v1.7 and later), ER-380M (EPROM v1.4 and later), ER-420M and ER-5240/ER-5240M,**




or,

 

 If you are programming **ER-380 (EPROM v1.6 and earlier), ER-380M (EPROM v1.3 and earlier) and ER-5215/ER-5215M,**



 
4. To program additional function keys, repeat from step 3, or press the **CASH** key to finalize the program.



Program 90 - Function Key HALO

Use Program 90 to program a high amount lock out (HALO) for a function key. Only specific keys require this program. For example, you can set a HALO for the **CASH**, **CHECK** or **CHARGE** keys. Refer to the specific function key programming information in this chapter to determine when the HALO option is available.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 0**, press the **SBTL** key.



3. Enter a HALO of up to eight digits, (or "0" for no HALO).

**Enter 1-8 digit
HALO**

4. Press the function key on the keyboard you wish to program.




5. To program additional function keys, repeat from step 2, or press the CASH key to finalize the program.



ADD CHECK

Options - Program 70

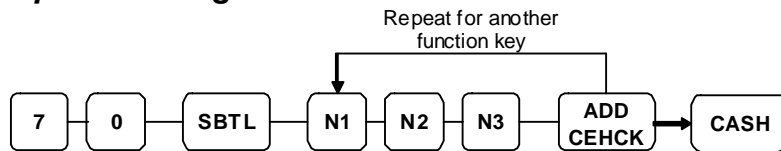

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Compulsory before tendering?	Yes = 2 No = 0		
	Advance the consecutive # when this function is used?	Yes = 0 No = 4		
N2	Delete the preamble/postamble when this function is used?	Yes = 0 No = 1		
	Exempt tax 1?	Yes = 2 No = 0		
	Exempt tax 2?	Yes = 4 No = 0		
N3	Exempt tax 3?	Yes = 1 No = 0		
	Exempt tax 4?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

CANCEL

Options - Program 70

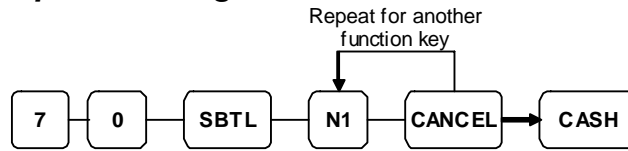

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to “Program 80 - Function Key Descriptor”

HALO - Program 90

- Refer to “Program 90 - Function Key HALO ”

CASH

Options - Program 70

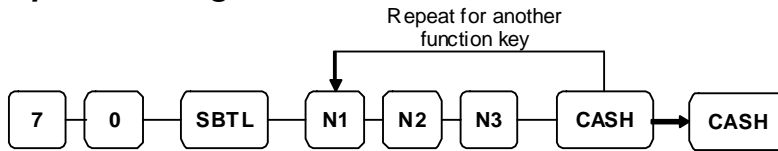

Address	OPTION	VALUE	=	SUM
N1	Amount tender is compulsory?	Yes = 1 No = 0		
	Allow over tendering and under tendering in X control lock position only?	Yes = 2 No = 0		
	Disable under tendering?	Yes = 4 No = 0		
N2	Open cash drawer?	Yes = 0 No = 1		
	Exempt tax 1?	Yes = 2 No = 0		
	Exempt tax 2?	Yes = 4 No = 0		
N3	Exempt tax 3?	Yes = 1 No = 0		
	Exempt tax 4?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to "Program 80 - Function Key Descriptor"

HALO - Program 90

- Refer to "Program 90 - Function Key HALO"

CHARGE (1 ~ 8)

Options - Program 70

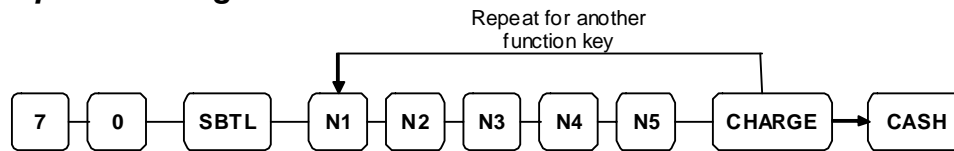

Address	OPTION	VALUE	=	SUM
N1	Amount tender is compulsory?	Yes = 1 No = 0		
	Allow over tendering and under tendering in X control lock position only?	Yes = 2 No = 0		
	Disable under tendering?	Yes = 4 No = 0		
N2	Open cash drawer?	Yes = 0 No = 1		
	Allow over tendering?	Yes = 2 No = 0		
	Non-add # entry compulsory?	Yes = 4 No = 0		
N3	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N4	Exempt tax 4?	Yes = 1 No = 0		
	Validation compulsory?	Yes = 2 No = 0		
	Send to EFT?	Yes = 4 No = 0		
N5	EFT Port (0-2; except ER-380 (0-1))	0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to "Program 80 - Function Key Descriptor"

HALO - Program 90

- Refer to "Program 90 - Function Key HALO"

CHECK (CHEQUE)

Options - Program 70

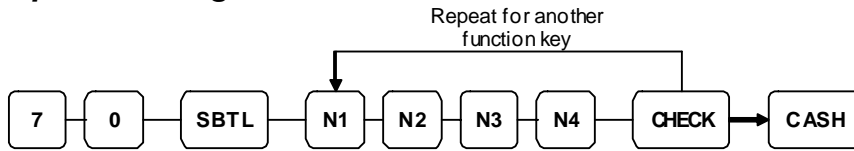

Address	OPTION	VALUE	=	SUM
N1	Amount tender is compulsory?	Yes = 1 No = 0		
	Allow over tendering and under tendering in X control lock position only?	Yes = 2 No = 0		
	Disable under tendering?	Yes = 4 No = 0		
N2	Open cash drawer?	Yes = 0 No = 1		
	Exempt tax 1?	Yes = 2 No = 0		
	Exempt tax 2?	Yes = 4 No = 0		
N3	Exempt tax 3?	Yes = 1 No = 0		
	Exempt tax 4?	Yes = 2 No = 0		
N4	Check endorsement compulsory?	Yes = 1 No = 0		
	Validation is compulsory?	Yes = 2 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to “Program 80 - Function Key Descriptor”

HALO - Program 90

- Refer to “Program 90 - Function Key HALO”

CHECK (CHEQUE) CASHING

Options - Program 70

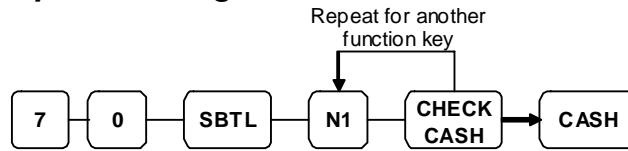

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to “Program 80 - Function Key Descriptor”

HALO - Program 90

- Refer to “Program 90 - Function Key HALO”

CHECK (CHEQUE) ENDORSEMENT

Options - Program 70

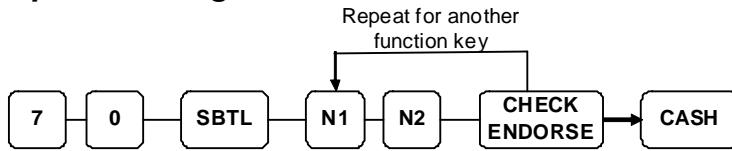

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Print the amount of the check and endorsement message?	Yes = 2 No = 0		
	Print date?	Yes = 4 No = 0		
N2	Print time?	Yes = 1 No = 0		
	Print clerk?	Yes = 2 No = 0		
	Print consecutive number?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

CHECK

Options - Program 70

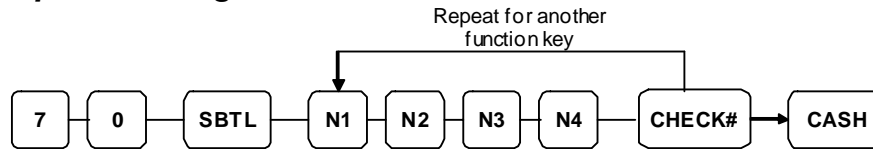

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Required at Start of Sale?	Yes = 2 No = 0		
	Opening clerk has exclusive access?	Yes = 4 No = 0		
N2	Check track # and balance will print on receipt?	Yes = 0 No = 1		
	Check track # and balance will print on remote?	Yes = 0 No = 2		
	Allow only one check per table?	Yes = 4 No = 0		
N3	Check# is automatically assigned by register?	Yes = 1 No = 0		
	PBAL Key is used as Drive thru recall key?	Yes = 2 No = 0		
N4	Length of Check (0-9)	0		

※Default values have been highlighted in **bold** print

 
Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"


CURRENCY CONVERSION

Currency Conversion Rate - Program 90


1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 0**, press the **SBTL** key.



3. Enter the exchange rate of up to 7 digits (do not enter the decimal point), and then enter a number from 0 to 7 to indicate the decimal position. See "Currency Exchange Rate Programming Examples" below.

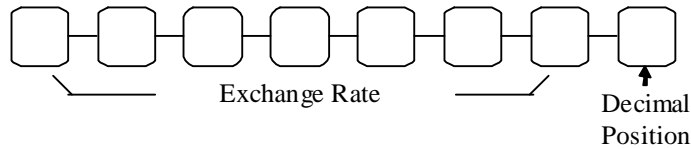

 4. Press the function key on the keyboard you wish to program.




5. To program additional function keys, repeat from step 2, or press the **CASH** key to finalize the program.




Currency Exchange Rate Programming Examples

Note: Foreign currency exchange rates may be stated as "foreign currency in dollars", or "dollars in foreign currency". Use the rate stated in "dollars in foreign currency" when you are programming this section.

The US dollar (home currency) is worth 1.3720 Canadian dollars (foreign currency).

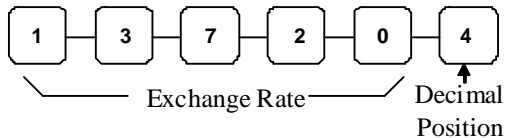


The US dollar (home currency) is worth 110.24 Japanese Yen (foreign currency).

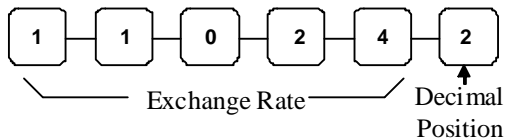

DRIVE THRU / EAT IN / TAKE OUT

Options - Program 70

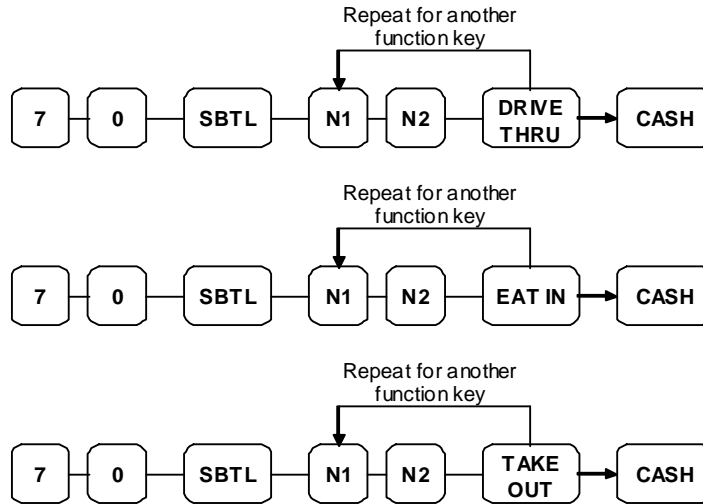

Address	OPTION	VALUE	=	SUM
N1	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N2	Exempt tax 4?	Yes = 1 No = 0		
	Validation is compulsory?	Yes = 2 No = 0		


※Default values have been highlighted in **bold print**

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

ERROR CORRECT

Options - Program 70

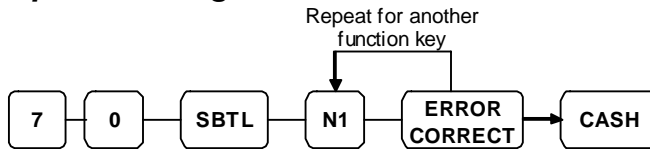

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to “Program 80 - Function Key Descriptor”

HALO - Program 90

- Refer to “Program 90 - Function Key HALO”

F/S SUB

Options - Program 70

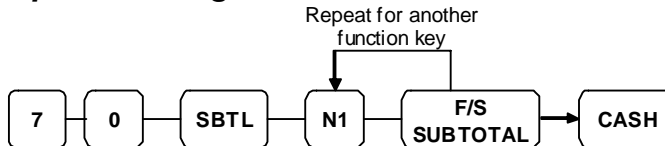

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

F/S TEND

Options - Program 70

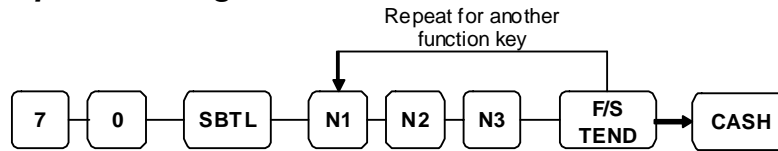

Address	OPTION	VALUE	=	SUM
N1	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N2	Exempt tax 4?	Yes = 1 No = 0		
	The tender is allowed in any amount?	Yes = 2 No = 0		
	Food stamp change Is issued in	Cash = 4 Food stamps = 0		
N3	Open cash drawer?	Yes = 0 No = 1		
	Validation is compulsory?	Yes = 2 No = 0		

※Default values have been highlighted in **bold print**

Descriptor - Program 80


- Refer to “Program 80 - Function Key Descriptor”

HALO - Program 90

- Refer to “Program 90 - Function Key HALO”

GUEST

Options - Program 70

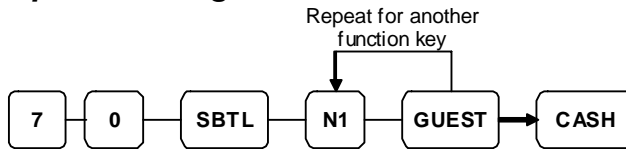

Address	OPTION	VALUE	=	SUM
N1	Required when opening a new check?	Yes = 1 No = 0		
	Before registering, enter a guest number?	Yes = 2 No = 0		
	Print Guest # at the kitchen printer?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

LEVEL1 - 2 (Price Levels)

Options - Program 70

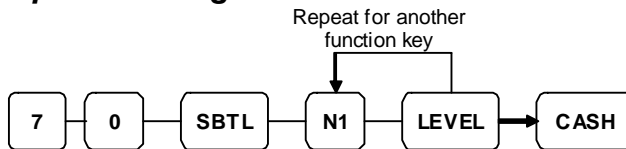

Address	OPTION	VALUE	=	SUM
N1	Print level description at the KP?	Yes = 1 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

MACRO (1 ~ 10)

Options - Program 70

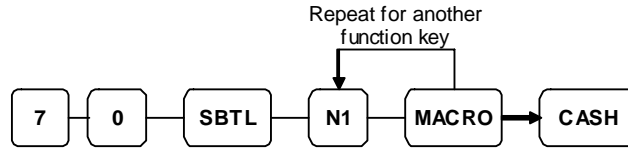

Address	OPTION	VALUE	=	SUM
N1	Key is active in X control lock position only?	Yes = 1 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

MDSE RETURN

Options - Program 70

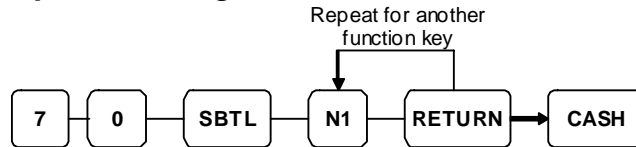

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to “Program 80 - Function Key Descriptor”

HALO - Program 90

- Refer to “Program 90 - Function Key HALO”

MODIFIER (1 ~ 5)

Options - Program 70

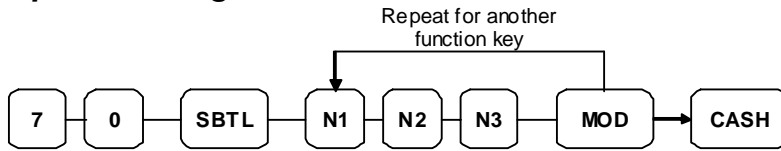

Address	OPTION	VALUE	=	SUM
N1	Key is active in X control lock position only?	Yes = 1 No = 0		
	Modify PLU#?	Yes = 2 No = 0		
N2	Print modifier descriptor on the guest check?	Yes = 1 No = 0		
	Print modifier descriptor on the receipt?	Yes = 2 No = 0		
N3	Value of affected digit (0-9)	1		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"


Affect Digit - Program 90

Affect Digit (1-14) of PLU#

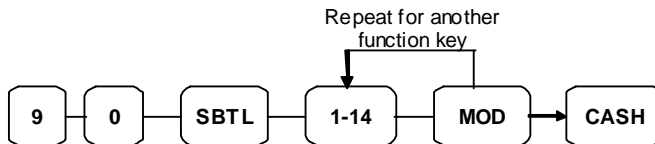

#/NS (Non Add#/No Sale)

Options - Program 70

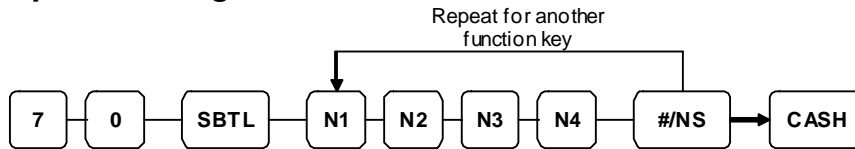


Address	OPTION	VALUE	=	SUM
N1	No Sale is inactive?	Yes = 1 No = 0		
	No Sale active in X control lock position only?	Yes = 2 No = 0		
	No Sale inactive after non-add # entry?	Yes = 4 No = 0		
N2	Enforce non-add # entry at start of sale?	Yes = 1 No = 0		
	Print when a NO SALE is performed?	Yes = 0 No = 2		
	Non-add # entries are prohibited?	Yes = 4 No = 0		
N3	Compulsory non-add entry must match number of digits set in the MAX DIGIT flag below?	Yes = 1 No = 0		
	Print non-add on guest check?	Yes = 2 No = 0		
N4	Enter maximum number of digits for non-add number entry. (0-8; Zero (0) means no limit).	0		

※Default values have been highlighted in **bold** print


Descriptor - Programs 80 & 81

Since two distinct functions, # entry and no sale, reside on the same key, different programs are used to program each descriptor.

To program the '**no sale**' descriptor:

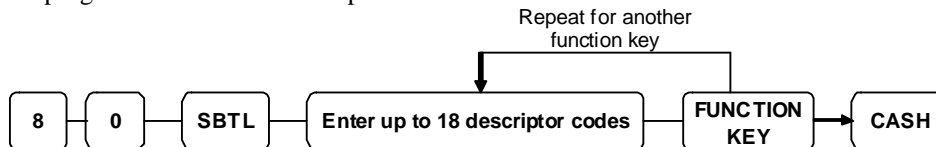


To program the '**/(non add)**' descriptor:

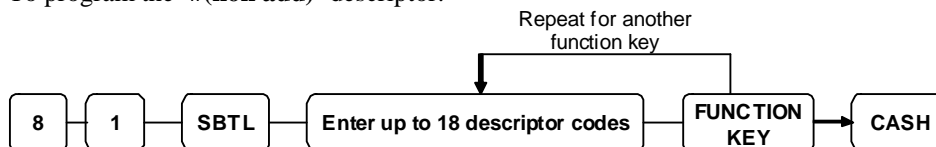

PAID OUT (1 ~ 3)

Options - Program 70

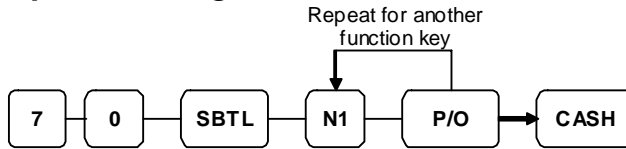

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

PAYMENT

Options - Program 70

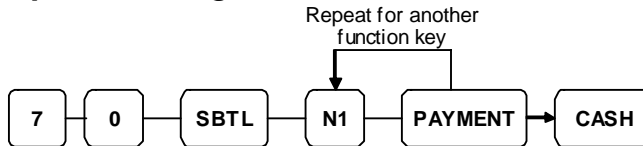

Address	OPTION	VALUE	=	SUM
N1	Required to close check?	Yes = 1 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

PBAL

Options - Program 70

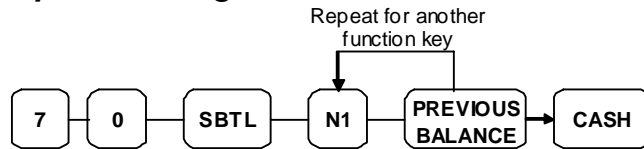

Address	OPTION	VALUE	=	SUM
N1	Previous balance may be entered at any time?	Yes = 1 No = 0		
	Previous balance required at the start of the sale?	Yes = 2 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

PRINT CHECK

Options - Program 70

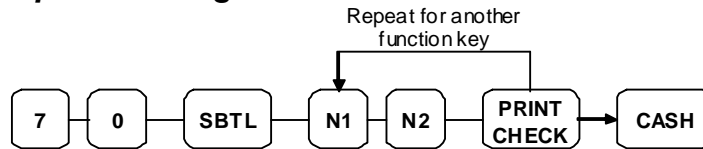

Address	OPTION	VALUE	=	SUM
N1	Enter Port Number. (Zero if the check will print on the receipt printer) (0-2; except ER-380: (0-1))	0		
N2	Automatically Service Check?	Yes = 1 No = 0		
	Print Check on Receipt	Yes = 2 No = 0		
	Skip printing consecutive # on the guest check?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

PROMO

Options - Program 70

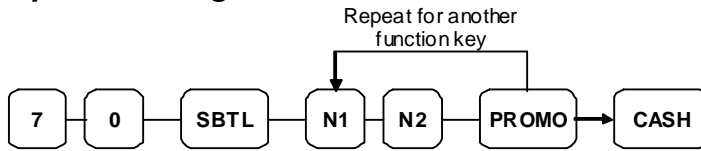

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Taxable by tax 1?	Yes = 4 No = 0		
N2	Taxable by tax 2?	Yes = 1 No = 0		
	Taxable by tax 3?	Yes = 2 No = 0		
	Taxable by tax 4?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

RECD ON ACCT (1 ~ 3)

Options - Program 70

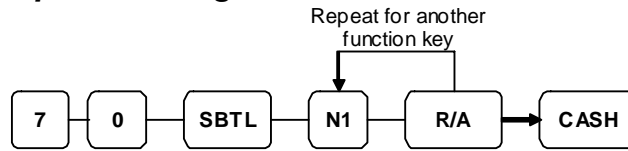

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to "Program 80 - Function Key Descriptor"

HALO - Program 90

- Refer to "Program 90 - Function Key HALO"

SCALE

Options - Program 70

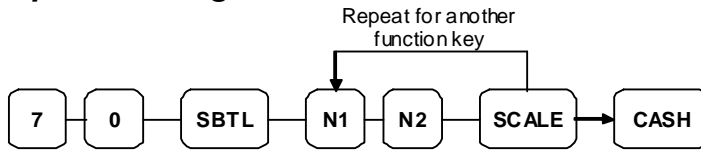

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Allow manual entry of weight?	Yes = 4 No = 0		
N2	Subtract tare weight on the scale entry?	Yes = 1 No = 0		
	Weight symbol for manual entry is:	Kg =	2	
		Lb =	0	
	Allow register scaleable items by weight extension or by price entry?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

SERVICE

Options - Program 70

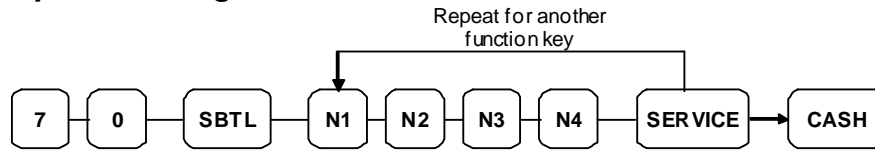

Address	OPTION	VALUE	=	SUM
N1	Compulsory non-add number before this key is used?	Yes = 1 No = 0		
	Print on receipt?	Yes = 0 No = 2		
	Allow negative balance in X control lock position only?	Yes = 4 No = 0		
N2	Calculate tax 1?	Yes = 0 No = 1		
	Calculate tax 2?	Yes = 0 No = 2		
	Calculate tax 3?	Yes = 0 No = 4		
N3	Calculate tax 4?	Yes = 0 No = 1		
	Validation is compulsory?	Yes = 2 No = 0		
N4	Enter the port number if you are using a hard check system. (0-2; except ER-380: (0-1))	0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

SUBTOTAL

Options - Program 70

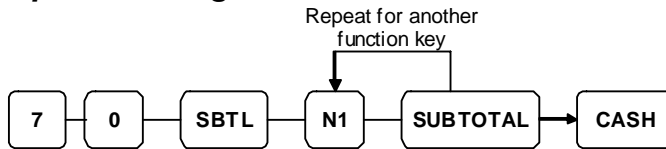

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		


※Default values have been highlighted in **bold print**

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

TABLE

Options - Program 70

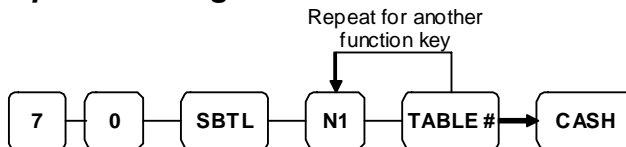

Address	OPTION	VALUE	=	SUM
N1	Table number entry compulsory before opening a new check?	Yes = 1 No = 0		
	Table number entry compulsory for all sales?	Yes = 2 No = 0		
	Print table# at the remote printer?	Yes = 4 No = 0		


※Default values have been highlighted in **bold print**

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

TARE

Options - Program 70

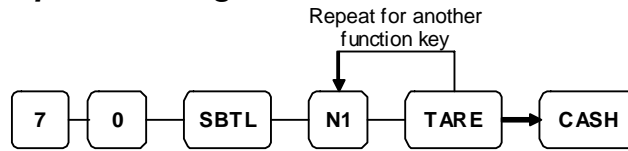

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Using tare number five to manually enter a tare weight?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

TAX EXEMPT

Options - Program 70

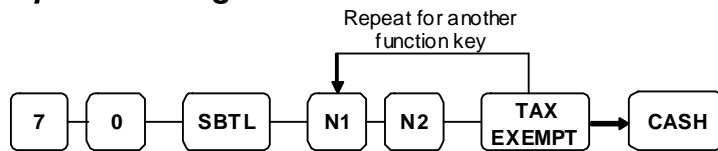

Address	OPTION	VALUE	=	SUM
N1	Exempt tax 1?	Yes = 1 No = 0		
	Exempt tax 2?	Yes = 2 No = 0		
	Exempt tax 3?	Yes = 4 No = 0		
N2	Exempt tax 4?	Yes = 1 No = 0		
	Compulsory non-add number before this key is used?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

TIP

Options - Program 70

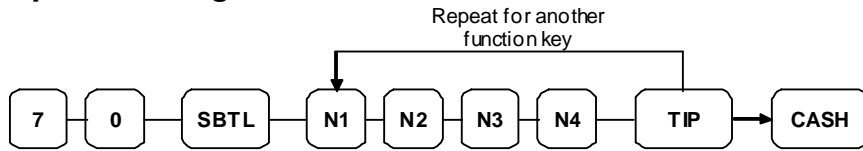

Address	OPTION	VALUE	=	SUM
N1	Type of tip is:	Percentage =	1	
		Amount =	0	
N2	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Add tax rate 1?	Yes = 4 No = 0		
N3	Add tax rate 2?	Yes = 1 No = 0		
	Add tax rate 3?	Yes = 2 No = 0		
	Add tax rate 4?	Yes = 4 No = 0		
N4	Add the tip total to the NET and GROSS sales total?	Yes = 1 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

VALIDATE

Options - Program 70

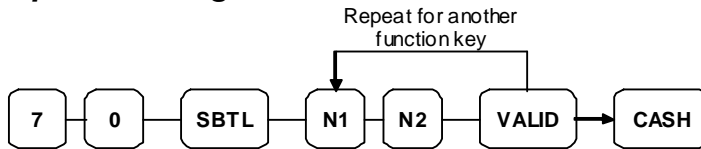

Address	OPTION	VALUE	=	SUM
N1	Enter Port Number. Enter 0 (zero) if validation is not used. (0-2; except ER-380: (0-1))	0		
N2	Key is inactive?	Yes = 1 No = 0		
	Allow multiple validations?	Yes = 2 No = 0		


※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to “Program 80 - Function Key Descriptor”

VOID

Options - Program 70

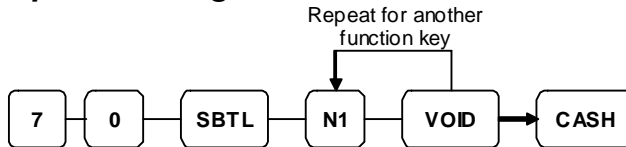

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to “Program 80 - Function Key Descriptor”

HALO - Program 90

- Refer to “Program 90 - Function Key HALO”

WASTE

Options - Program 70

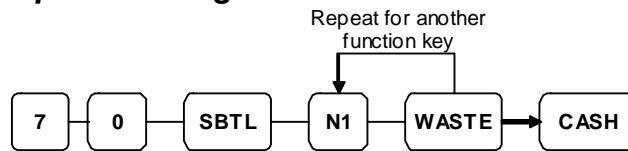

Address	OPTION	VALUE	=	SUM
N1	Key is inactive?	Yes = 1 No = 0		
	Key is active in X control lock position only?	Yes = 2 No = 0		
	Validation is compulsory?	Yes = 4 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80


- Refer to "Program 80 - Function Key Descriptor"

HALO - Program 90

- Refer to "Program 90 - Function Key HALO"

% (1 ~ 5)

Options - Program 70

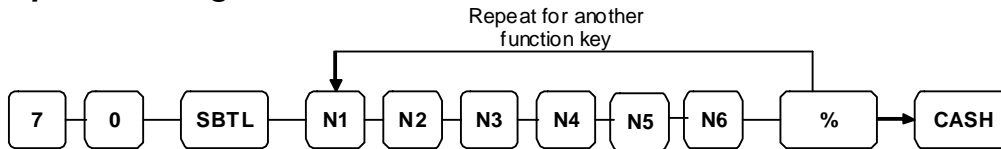


Address	OPTION	VALUE	=	SUM
N1	Apply an:	Amount =	1	
		Percentage =	0	
	Key is inactive?		Yes = 2 No = 0	
	% Key is active in X control lock position only?		Yes = 4 No = 0	
N2	% Key is:	Open =	1	
		Preset =	0	
	% Key is:	Sale =	2	
		Item =	0	
Allow % key override preset?		Yes = 4 No = 0		
N3	% Key is:	Positive =	1	
		Negative =	0	
% Amount taxable tax 1?		Yes = 2 No = 0		
N4	% Amount taxable tax 2?		Yes = 1 No = 0	
	% Amount taxable tax 3?		Yes = 2 No = 0	
	% Amount taxable tax 4?		Yes = 4 No = 0	
N5	Reduce (or increase) the food stamp subtotal by % entry?		Yes = 1 No = 0	
	Allow only one time subtotal entry?		Yes = 2 No = 0	
	Allow multiple amount discounts (coupons) without pressing subtotal?		Yes = 4 No = 0	
N6	Allow % key preset override active in X control lock position only?		Yes = 1 No = 0	
	Validation is compulsory?		Yes = 2 No = 0	

※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"


Preset % Rate - Program 90

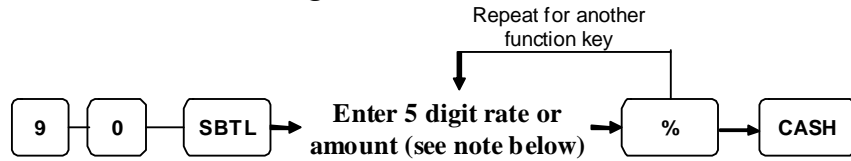

Note: If key is amount, enter 5 digit HALO, or 0 for no HALO. **If key is percentage enter the percentage in a five-digit format, without the decimal (XX.XXX). For example: for 10%, enter 10000; for 5.55%, enter 05550; for 99.999%, enter 99999.**

KBD SHIFT (ER-420M only)

Options - Program 70

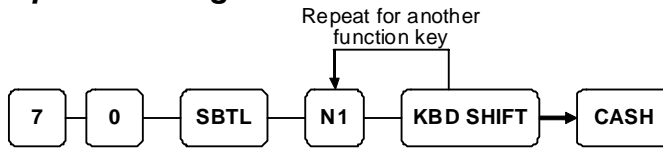


Address	OPTION	VALUE	=	SUM
N1	KBD Shift is:	Pop up	0	
		Stay down	1	
	Key is active in X control lock position only?	Yes = 2 No = 0		

※Default values have been highlighted in **bold** print

Descriptor - Program 80

- Refer to "Program 80 - Function Key Descriptor"

 HALO - Program 90



This will enable the shift to move the PLU on the NLU by this number. I.e. If NLU has PLU#1 and you program X = 12 above, the KBD Shift will put PLU #13 on keyboard level 2, and PLU #25 on Shift 3. **The maximum number for X is 18.**


Clerk Programming

Clerks (which may be used as cashiers), have the following programming options. These options are set through separate programs:


- ***Program 800 - Secret Code programming*** determines the code that is used for clerk sign on if a code entry sign on method is selected in system option #2 (See "**System Option Programming**")
- ***Program 801 – Drawer Assignment & Training Clerk Programming***
- ***Program 810 - Clerk Description Programming*** allows you to set a unique, up to 18 character, descriptor for each clerk

Program 800 - Secret Code Programming

 
1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 0 0**, press the **SBTL** key.



 3. Enter the number of the clerk you wish to program; press the **X/TIME** key.



 4. Enter a secret code (up to 6 digits); press the **SBTL** key.




5. Repeat from step 3 for each clerk you wish to program. Press the **CASH** key to finalize the program.




Program 801 - Drawer Assignment & Training Clerk

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 0 1**, press the **SBTL** key.



 3. Enter the number of the clerk you wish to program; press the **X/TIME** key.



4. Enter an option digit from the table below, press the **SBTL** key.

Address	OPTION	VALUE	=	SUM
N1	ER-3xx ER-4xx	Drawer assignment (0: default drawer, 1: no drawer)	0*	
	ER-52xx	Drawer assignment (0: default drawer, 1:second drawer, 2: no drawer)		
N2	Train Clerk	Yes = 1 No = 0		

※Default values have been highlighted in **bold** print



5. Repeat from step 3 for each clerk you wish to program. Press the **CASH** key to finalize the program.




Note: When set to '**0**' for default drawer, will show '**1**' on the Program Scan - Clerk Scan, '**1**' will show '**2**', '**2**' will show '**0**'.


Program 810 - Clerk Description Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming).**

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **8 1 0**, press the **SBTL** key.



 
3. Enter the number of the clerk you wish to program; press the **X/TIME** key.



4. If you are programming using alpha overlay;

Type up to 18
descriptor keys → 

or,

Enter up to 18
three-character codes → 

5. Press the **CASH** key to finalize the program.



Mix & Match Programming

Mix & Match Tables have the following programming options. These options are set through separate programs:


- *Program 600 - Trip Level Programming*
- *Program 601 - Price Programming*
- *Program 610 - Mix & Match Description Programming* allows you to set a unique, up to 18 characters, descriptor for Mix & Match Table.

Program 600 - Trip Level Programming


1. Turn the control lock to the **P** position.
2. To begin the program, enter **6 0 0**, press the **SBTL** key.



 3. Enter the number of the M&M table you wish to program; press the **X/TIME** key.



 4. Enter a level of up to 5 digits (The Maximum Level you can enter is 30000) press the **SBTL** key.




5. Repeat from step 3 for each table you wish to program. Press the **CASH** key to finalize the program.



Program 601 - Price Programming

 1. Turn the control lock to the P position.
2. To begin the program, enter **6 0 1**, press the **SBTL** key.



3. Enter the number of the M&M table you wish to program; press the **X/TIME** key.



4. Enter a price (up to 7 digits); press the **SBTL** key.



Price/HALO

5. Repeat from step 3 for each table you wish to program. Press the **CASH** key to finalize the program.




Program 610 - Mix & Match Description Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming).**

1. Turn the control lock to the **P** position.
2. To begin the program, enter **6 1 0**, press the **SBTL** key.



 
3. Enter the number of the M&M table you wish to program; press the **X/TIME** key.



4. If you are programming using alpha overlay,

Type up to 18
descriptor keys → 

or,

Enter up to 18
three-character codes → 

5. Press the **CASH** key to finalize the program.




Group Programming

20 Group totals are available to accumulate totals of individual PLUs that are assigned to each group. Each PLU can be assigned to one, two or three different groups.


- **Program 900 - Group Status Programming** allows to assign a group status, i.e. a group can be set to *not add* to the total of all groups, or a group can be used to designate like items for kitchen printer assignment.
- **Program 910 - Group Descriptors Programming** to assign a unique descriptor for each group, so that the group may be easily understood on the group report.

Program 900 - Group Status Programming

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 0 0**, press the **SBTL** key.



 
3. Enter the number of the group you wish to program; press the **X/TIME** key.




4. Enter an option digit from the table below, press the **SBTL** key.

Address	OPTION	VALUE	=	SUM
N1	Group total is added to the total of all groups on the Group report?	Yes = 0 No = 1		
	Send to kitchen printer?	Yes = 2 No = 0		
N2	No Choice	0		
	KP PORT#: R (print a kitchen requisition)	1		
	KP PORT#: 1	2		
	KP PORT#: 2 (<i>not available on ER-380</i>)	4		
N3	Print RED on KP?	Yes = 1 No = 0		

 ※Default values have been highlighted in **bold** print



 
5. To program additional groups, repeat from step 3, or press the **CASH** key to finalize the program.




Program 910 - Group Descriptors Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming").**

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **9 1 0**, press the **SBTL** key.



 
3. Enter the number of the group you wish to program; press the **X/TIME** key.




4. If you are programming using alpha overlay,

Type up to 18
descriptor keys → 

or,

Enter up to 18
three-character codes → 

 5. To program additional groups, repeat from step 3, or press the **CASH** key to finalize the program.




Miscellaneous Programming

Program 1500 - Macro Key Sequence Programming

Macros are special function keys that are used to execute a sequence of key depressions. For example, a macro might be used to execute a string of reports or to automatically tender a preset amount. Up to ten different macros may be placed on the keyboard. (See "Function Key Assignment Programming" to place macros on the keyboard.)

To Program a Macro

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 5 0 0**, press the **SBTL** key.



3. Press the **Macro** key that you wish to program.



4. First, you must change the Mode Key. Default Mode is PGM Mode.

Therefore, if you want to start in REG Mode, you must change Mode key to REG Mode. Type up to 50 key strokes

Type up to 50 key strokes

5. Turn the control lock to the P position. Press the same **Macro** key to end the sequence



6. Repeat from step 3 - 5 to program additional macros. Press the **CASH** key to finalize the program.



To removing a Macro

If you wish to remove a keystroke from a macro, replace the current function with the INACTIVE function.


Program 700 - Logo Description Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming).**


Programming the Receipt/Check/Endorsement Message

A preamble message of up to six lines can be printed at the top of each receipt; a postamble message of up to six lines can be printed at the bottom of each receipt; an endorsement message of up to ten lines can be printed when a check is endorsed on an optional slip printer. Each line can consist of up to **32** characters for *Sam4S 3xx and 52xx Series* and **24** characters for *Sam4S 4xx Series* Electronic Cash Registers.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 0 0**, press the **SBTL** key.



 
3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.




X	Message Line	X	Message Line
1	1 st line of Preamble	12	6 th line of Postamble
2	2 nd line of Preamble	13	1 st line of Endorsement
3	3 rd line of Preamble	14	2 nd line of Endorsement
4	4 th line of Preamble	15	3 rd line of Endorsement
5	5 th line of Preamble	16	4 th line of Endorsement
6	6 th line of Preamble	17	5 th line of Endorsement
7	1 st line of Postamble	18	6 th line of Endorsement
8	2 nd line of Postamble	19	7 th line of Endorsement
9	3 rd line of Postamble	20	8 th line of Endorsement
10	4 th line of Postamble	21	9 th line of Endorsement
11	5 th line of Postamble	22	10 th line of Endorsement

4. If you are programming using alpha overlay,

Type up to 32/24 descriptor keys → 

 or,

Enter up to 32/24 three-character codes → 

5. Press the **CASH** key to finalize the program.




Program 701 - Financial Report Message Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To descript by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming).**


Programming the Financial Report Message

The Financial Report selection allows you to reprogram the descriptors that appear with the Financial Report totals and counters. For example, the first total on the financial report "+PLU TTL" represents the total of all positive PLU entries. You might wish to re-label this total to say "FOOD SALES". You can reprogram any of the Financial Report totals listed here with any 18-character descriptor. (See "Financial Report Message").

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 0 1**, press the **SBTL** key.



 
3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.



4. If you are programming using alpha overlay,

Type up to 18
descriptor keys → 

or,

Enter up to 18
three-character codes → 

5. Press the **CASH** key to finalize the program.



Financial Report Message

X	Message Line	X	Message Line	X	Message Line
1	+PLU TTL	29	CREDIT TAX4	57	CHG7-IN-D
2	-PLU TTL	30	FD/S CREDIT	58	CHG8-IN-D
3	ADJST TTL	31	RETURN	59	CHG1 SALES
4	NONTAX	32	ERROR CORR	60	CHG2 SALES
5	GST SALES	33	PREVIOUS VD	61	CHG3 SALES
6	TAX2 SALES	34	VOID MODE	62	CHG4 SALES
7	TAX3 SALES	35	CANCEL	63	CHG5 SALES
8	TAX4 SALES	36	GROSS SALES	64	CHG6 SALES
9	GST	37	CASH SALES	65	CHG7 SALES
10	TAX2	38	CHECK SALES	66	CHG8 SALES
11	TAX3	39	R/A 1	67	FOREIGN 1
12	TAX4	40	R/A 2	68	FOREIGN 2
13	XMPT1 SALES	41	R/A 3	69	FOREIGN 3
14	XMPT2 SALES	42	P/O 1	70	FOREIGN 4
15	XMPT3 SALES	43	P/O 2	71	DRWR TTL
16	XMPT4 SALES	44	P/O 3	72	PROMO
17	EATIN TTL	45	HASH TTL	73	WASTE
18	TAKEOUT TTL	46	AUDACTION	74	TIP
19	DRTHRU TTL	47	NOSALE	75	TRAIN TTL
20	% 1	48	CASH-IN-D	76	BAL FORWARD
21	% 2	49	CHECK-IN-D	77	GUESTS
22	% 3	50	FD/S-IN-D	78	P/BAL
23	% 4	51	CHG1-IN-D	79	CHECKS PAID
24	% 5	52	CHG2-IN-D	80	SERVICE
25	NET SALE	53	CHG3-IN-D	81	MIX&MATCH
26	CREDIT GST	54	CHG4-IN-D	82	ROUND TTL
27	CREDIT TAX2	55	CHG5-IN-D	83	CASH OUT
28	CREDIT TAX3	56	CHG6-IN-D		


Program 710 - Clerk Report Message Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming").**


Programming the Clerk Report Message

The Clerk Report selection allows you to reprogram the descriptors that appear with the Clerk Report totals and counters. For example, the first total on the clerk report "NET SALES" might be re-labeled to say "GROSS SALES". You can reprogram any of the Financial Report totals listed here with any 18-character descriptor. (See "Clerk Report Message").

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 1 0**, press the **SBTL** key.



 
3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.



4. If you are programming using alpha overlay,

Type up to 18
descriptor keys → 

or,

Enter up to 18
three-character codes → 

5. Press the **CASH** key to finalize the program.



Clerk Report Message

X	Message Line	X	Message Line	X	Message Line
1	NET SALE	25	CREDIT TAX3	49	CHG4 SALES
2	NONTAX	26	CREDIT TAX4	50	CHG5 SALES
3	GST SALES	27	FD/S CREDIT	51	CHG6 SALES
4	TAX2 SALES	28	RETURN	52	CHG7 SALES
5	TAX3 SALES	29	ERROR CORR	53	CHG8 SALES
6	TAX4 SALES	30	PREVIOUS VD	54	FOREIGN 1
7	GST	31	VOID MODE	55	FOREIGN 2
8	TAX2	32	CANCEL	56	FOREIGN 3
9	TAX3	33	GROSS SALES	57	FOREIGN 4
10	TAX4	34	CASH SALES	58	DRWR TTL
11	XMPT1 SALES	35	CHECK SALES	59	PROMO
12	XMPT2 SALES	36	R/A 1	60	WASTE
13	XMPT3 SALES	37	R/A 2	61	TIP
14	XMPT4 SALES	38	R/A 3	62	TRAIN TTL
15	EATIN TTL	39	P/O 1	63	BAL FORWARD
16	TAKEOUT TTL	40	P/O 2	64	GUESTS
17	DRTHRU TTL	41	P/O 3	65	P/BAL
18	% 1	42	HASH TTL	66	CHECKS PAID
19	% 2	43	CASH-IN-D	67	SERVICE
20	% 3	44	CHECK-IN-D	68	CASH OUT
21	% 4	45	FD/S-IN-D	69	NOSALE
22	% 5	46	CHG1 SALES	70	MIX&MATCH
23	CREDIT GST	47	CHG2 SALES		
24	CREDIT TAX2	48	CHG3 SALES		


Program 711 - Macro Name Programming

Program descriptions by typing description on the alpha keyboard overlay or by entering three digit alpha character codes. **To describe by three digit alpha character codes you must select 'No' in system option #25(for 3xx Series)/#30(for 4xx and 52xx Series) (See "System Option Programming).**


Programming the Macro Name

Up to ten function locations may be designated as Macro keys. You may wish to program a name for a macro. For example if a macro executes a series of commands to produce daily reports, you can program the descriptor "DAILY", so the macro can easily be identified. Macro names can also be helpful when looking at keyboard layout information with the PC communication utility.

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **7 1 1**, press the **SBTL** key.



 
3. Refer to the chart below and enter the number that represents the line you wish to program; press the **X/TIME** key.



4. If you are programming using alpha overlay,

Type up to 18
descriptor keys → 

or,

Enter up to 18
three-character codes → 

5. Press the **CASH** key to finalize the program.




Program 1000 - NLU Code Number Programming


NLU are fixed keys on the keyboard (like traditional department keys) that access specific PLUs. On the default keyboard, there are 12 NLU keys and the PLU# assigned to the NLU key is the same, i.e. NLU key number one is PLU #1. However, with this program, you can assign any PLU number you wish to any one of the 12 possible NLU keys.

Programming the NLU Code Number

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 0 0 0**, press the **SBTL** key.



 3. Type the new PLU code number you wish to use for this NLU key, and Press the NLU key on the keyboard you wish to program, and Press the NLU key again.



4. Press **CASH** to finalize the program




Program 1100 - Cash-In-Drawer Limit Programming

You can set a limit for cash in drawer. When cash in drawer exceeds the limit you program here, a warning will display on the screen. You must press CLEAR to remove the warning and continue operations. The warning will continue to appear at the completion of every transaction with the limit exceeded, until you use the PAID OUT function to remove cash from the drawer.

Programming the Drawer Limit

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 1 0 0**, press the **SBTL** key.



3. Enter a cash-in-drawer limit (up to 8 digits or **0** for no limit); press the **X/TIME** key.



4. Press the **CASH** key to finalize the program.




Program 1200 - Check Change Limit Programming


Use this program to set the maximum amount of cash that can be returned when a check is tendered for an amount greater than the amount of the sale. For example, if the check change limit is \$10.00 the maximum amount that can be tendered into the check key on a \$5.00 sale is \$15.00.

Programming the Check Change Limit

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 2 0 0**, press the **SBTL** key.



 3. Enter a cash-in-drawer limit (up to 8 digits or **0** for no limit); press the **X/TIME** key.



4. Press the **CASH** key to finalize the program.




Program 1300 - Date and Time Programming


Use this program to set the clock and calendar on your *Sam4S 3xx, 4xx and 52xx Electronic Cash Registers*. The date changes automatically. After initial setting, time changing will probably be required only for beginning and ending daylight savings time.

Programming the Date and Time

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 3 0 0**, press the **SBTL** key.



 3. Enter time in military standard time (based on 24 hours), must be four digits (i.e. 1300 hours = 1:00 PM); press the **X/TIME** key.



4. Enter the date in MM (month) DD (day) and YY (year) format. Press the **X/TIME** key:




5. Press the **CASH** key to finalize the program.




Program 1400 - Scale Tare Weight Programming

A tare is the amount of weight representing the container, or package when items are sold by weight. You can pre-program five tare weights, representing the weight of different containers. When you place an item and a container on optional scale, you can enter the tare number to automatically subtract the pre-programmed tare weight. If you choose to use tare #5 for manual tare weight entry, do not enter a weight for tare #5. (See TARE.)

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 4 0 0**, press the **SBTL** key.



 3. Enter the number (**1-5**) of the tare you wish to program; press the **X/TIME** key.



4. Enter the weight of the tare (one digit preceding the decimal key, the decimal key, then three digits after the decimal key). Press the **SBTL** key.



5. To program additional tare weights, repeat from step 3, or press the **CASH** key to finalize the program.




Program 1600 - Machine Number Programming

The machine number is printed on the register receipt. Program a machine number so that any receipt can be identified with the store or register where the transaction took place.

Programming the Machine Number

 1. Turn the control lock to the **P** position.
2. To begin the program, enter **1 6 0 0**, press the **SBTL** key.



3. Enter a machine number (up to 5 digits); press the **X/TIME** key.



4. Press the **CASH** key to finalize the program.




Program Scans

Since much time and energy has been invested in the planning and programming of your *Sam4S 3xx, 4xx and 52xx Electronic Cash Registers*, it is advisable to print a hard copy of the final program for future reference. This copy should be kept in a safe place.

Program 15 - Program Scans

 
1. Turn the control lock to the **P** position.
2. To print a program scan, enter **1 5**, press the **SBTL** key.



3. In this step, there are three different ways to scan program information. One is PLU, the other is Macro, and the third is Others.

PLU PROGRAM SCAN

 
- To read single PLU program information, enter the number (1-1000) of the PLU and press the same number and PLU key.




- Press a PLU key on the keyboard and press same key again.



 - To read multiple PLU program information, enter the first number (1-1000) and press PLU key. Press the last number (1-1000) and press PLU key



- Press a PLU key on the keyboard.

 


MACRO PROGRAM SCAN

- To read MACRO information, press the MACRO key to be scanned,



OTHERS PROGRAM SCAN

Refer to the chart below and enter a digit to represent the segment of the program you wish to print; press the **X/TIME** key. To see additional scan, repeat this operation.

 

X	Program	X	Program
0	Group	9	Financial Report message
1	Tax	10	Clerk Report message
2	System option	11	Macro Name
3	Print option	12	Drawer Limit
4	Function keys	13	Check Change Limit
5	Clerk	14	Time & Date
6	Preamble message	15	Tare Weight
7	Postamble message	16	Machine Number
8	Endorsement message	17	Mix & Match

4. Press the CASH key to finalize the program.



Sample Reports

Financial

X or Z report	DATE 15/01/2003 WED TIME 13:32 X 1 REPORT 00001	Current Stock count
Total and count of all positive PLUs	FINANCIAL +PLU TTL 179.56	
Total and count of all Negative PLUs	\$288.60 -PLU TTL 10	
Total of +PLU and -PLU sales	ADJST TTL 189.56 \$268.60	
Total of Non-taxable sales	NONTAX \$30.47	
PLU number	GST SALES \$153.60	
Number of items sold in all groups.	TAX2 SALES \$11.92	
Total exempted sales for each tax	TAX3 SALES \$16.77	
Total sales for each type of destination	TAX4 SALES \$31.89	
	GST \$10.00	
	TAX2 \$1.21	
	TAX3 \$1.18	
	TAX4 \$2.18	
	XMPT1 SALES \$7.00	
	XMPT2 SALES \$1.50	
	XMPT3 SALES \$7.95	
	XMPT4 SALES \$7.50	
	EATIN TTL 1	
	\$10.12	
	TAKEOUT TTL 2	
	\$40.77	

continued . . .

Total sales for each type of destination

Total and count for each % function key (i.e. discounts & coupons)

Net Sales

Credited tax for each tax. (Tax is credited for negative taxable sales, i.e. mdse return transactions.)

Food stamp change credited to sales

Total and count for each type of transaction correction.

Gross Sales

Totals and counters for CASH and CHECK sales

Total and count for each type R/A (received on account) and P/O (paid out) key.

continued from previous page

DRTHRU TTL	1	
		\$3.04
ITEM DISC.	3	
		-0.48
SALE DISC.	2	
		-5.22
SALE SURCH.	3	
		\$3.23
% 4	0	
		\$0.00
% 5	0	
		\$0.00
NET SALE	26	
		\$281.18
CREDIT GST	4	
		-1.11
CREDIT TAX2	1	
		-0.23
CREDIT TAX3	2	
		-0.89
CREDIT TAX4	1	
		-0.39
FD/S CREDIT	0	
		\$0.23
RETURN	33	
		-59.73
ERROR CORR	2	
		-4.00
PREVIOUS VD	1	
		-1.50
VOID MODE	-2	
		-6.40
CANCEL	2	
		\$16.00
GROSS SALES		\$375.63
CASH SALES	13	
		\$133.49
CHECK SALES	1	
		\$23.05
R/A 1	1	
		\$145.00
R/A 2	0	
		\$0.00

continued . . .

Total and count for each type R/A (received on account) and P/O (paid out) key.

Total and count of items sold with HASH status.

Count of No Sales.

Total of numbers entered into the non-add key

Total and count of expected CASH, CHECK in drawer

Total and count for each CHARGE in drawer.

Total and count for each CHARGE key.

continued from previous page

R/A 3	0
	\$0.00
P/O 1	1
	-140.00
P/O 2	0
	\$0.00
P/O 3	0
	\$0.00
HASH TTL	0
	\$0.00
NOSALE	4
NON ADD #	547
CASH-IN-D	14
	\$269.99
CHECK-IN-D	3
	-108.45
FD/S-IN-D	2
	\$21.00
CHG1-IN-D	0
	\$0.00
CHG2-IN-D	1
	\$8.43
CHG3-IN-D	1
	\$8.52
CHG4-IN-D	2
	-1.60
CHG5-IN-D	1
	\$2.67
CHG6-IN-D	2
	\$13.09
CHG7-IN-D	0
	\$0.00
CHG8-IN-D	1
	\$0.00
CHG1 SALES	0
	\$0.00
CHG2 SALES	1
	\$8.43
CHG3 SALES	1
	\$8.52
CHG4 SALES	2
	-1.60
CHG5 SALES	1
	\$2.67


continued . . .

continued from previous page

Total and count for each CHARGE key.	CHG6 SALES	2	
		\$13.09	
	CHG7 SALES	0	
		\$0.00	
Total for each Foreign currency in drawer.	CHG8 SALES	1	
		\$3.04	
Total of CASH, CHECKS and CHARGES in drawer.	FOREIGN 1	0.00	
	FOREIGN 2	0.00	
	FOREIGN 3	0.00	
	FOREIGN 4	0.00	
Total and count for PROMO,WASTE and TIPS.	DRWR TTL		\$216.69
	PROMO	1	
		\$1.50	
Number of transactions and total activity in Training Mode	WASTE	8	
		\$12.50	
	TIPS	0	
		\$0.00	
Total and count of all balances serviced	TRAIN TTL	5	
		\$62.59	
Total number of guests served	BAL FORWARD	4	
		\$88.13	
Total and count of balances entered into PBAL key	GUESTS	5	
	P/BAL	4	
		\$0.00	
Total and count of balances paid	CHECKS PAID	2	
		\$18.64	
Total and count of items serviced	SERVICE	4	
		\$88.13	
	MIX&MATCH	0	
		\$0.00	
	AVG ITEM/CUST	7.29	
	AVG \$/CUST	\$10.81	

Total and count of mix & match disc.	GRAND		\$375.63
	ETHAN	000209	00000
Average number if items per customer, and average dollar sales per customer			
Grand total			

Time

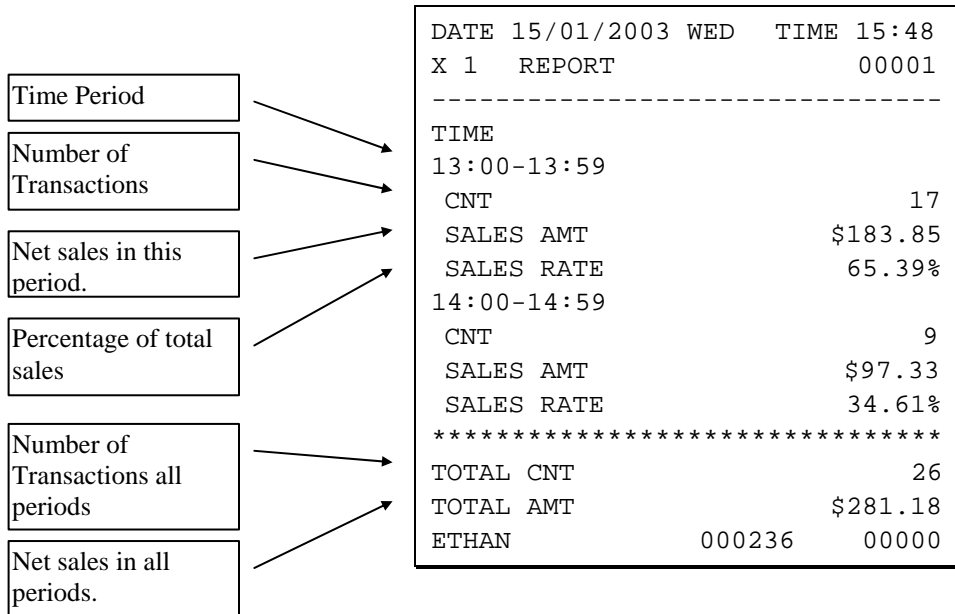

PLU

	DATE 15/01/2003 WED	TIME 15:33
	X 1 REPORT	00001

PLU number	ALL PLU	
PLU Descriptor	PLU#1	
	HAMBURGER	
Count and sales total.	CNT 28	\$42.00
	SALES RATE	15.64%
	PLU#2	
Percentage of total sales (optional)	DBL BURGER	
	CNT 40	\$99.75
	SALES RATE	37.14%
	PLU#4	
	COKE	
	CNT 26	\$38.85
	SALES RATE	14.46%
	PLU#5	
	SPRITE	
	CNT 18	\$13.42
	SALES RATE	5.00%
	PLU#7	
	ROAST	
	CNT 19.16	\$30.47
	SALES RATE	11.34%
	PLU#28	
	UNLEADED	
	CNT 32.85	\$39.39
	SALES RATE	14.66%
	PLU#29	
	RETURNS	
	CNT 10	-20.00
	SALES RATE	-7.44%
	PLU#33	
	NAILS	
	CNT 15.55	\$24.72
	SALES RATE	9.20%

Total activity for all PLUs	TOTAL CNT	189.56
Total sales for all PLUs.	TOTAL AMT	\$268.60
	ETHAN	000213 00000

Clerk

Note: Media totals can be printed for each clerk, if selected in **System Option Programming**.

Clerk Name	→	DATE 15/01/2003 WED TIME 15:36
Number of Transactions	→	X 1 REPORT 00001
Net sales for this clerk	→	-----
Drawer total for this clerk	→	ALL CLERK
		ETHAN
		NET SALE 10
		\$155.23
		DRWR TTL \$109.81

		ZACH
		NET SALE 5
		\$45.14
		DRWR TTL \$43.22

		ANNA
		NET SALE 4
		\$78.75
		DRWR TTL \$67.03


		LAURA
		NET SALE 2
		\$0.00
		DRWR TTL \$18.64

		PEGGY

		MOLLY
		NET SALE 5
		\$2.06
		DRWR TTL -22.01

		ETHAN 000218 00000

Individual Clerk

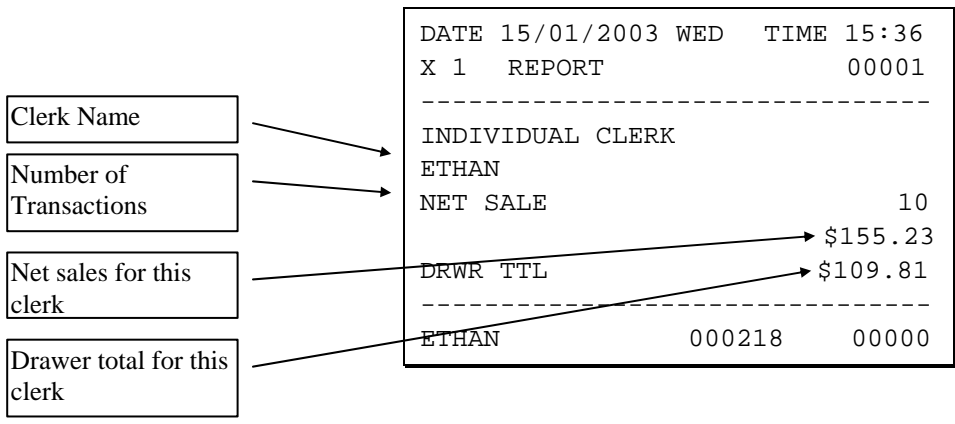

Groups

	DATE 15/01/2003 WED	TIME 15:34
	X 1 REPORT	00001

Group Descriptor	GROUP	
Number of items sold in this group	GROUP : 1 FOOD	
	CNT	68
	SALES AMT	\$141.75
Net sales for this group	GROUP : 2 DRINK	
	CNT	44
	SALES AMT	\$52.27
	GROUP : 3 REST.	
	CNT	112
	SALES AMT	\$194.02
	GROUP : 5 STORE	
	CNT	19.16
	SALES AMT	\$30.47
	GROUP : 8 MDSE	
	CNT	58.40
	SALES AMT	\$44.11
	GROUP : 9 STORE MDSE	
	CNT	77.56
	SALES AMT	\$74.58

Number of items sold in all groups.	TOTAL CNT	189.56
Net sales for all groups.	TOTAL AMT	\$268.60
	ETHAN	000237 00000

Stock

PLU number

PLU Descriptor

Current Stock count

```
DATE 15/01/2003 WED    TIME 15:47
X 1  REPORT              00001
-----
ALL PLU STOCK
PLU#1
HAMBURGER
  CNT                      26
PLU#2
DBL BURGER
  CNT                      15
PLU#7
ROAST
  CNT                      25.96
PLU#28
UNLEADED
  CNT                      1488.47
PLU#33
NAILS
  CNT                      161.25
ETHAN                      000228  00000
```

Open Check

Open check number and balance.

Clerk responsible for the check.

DATE	15/01/2003 WED	TIME	15:59
X 1	REPORT		00001

OPEN CHECK			
CHECK :	3		\$24.07
MOLLY			
CHECK :	4		\$45.42
ETHAN			
CHECK :	5		\$24.50
ETHAN			
CHECK :	6		\$28.33
ETHAN			
ETHAN		000243	00000

Rev. 2.05 (Jun 09)